

Ref #	Part Number	Qtv	Description
	33311B		Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
	27876B		Seal, Oil
			•
5	29536		Blower Housing Baffle (Without electric starter knock out)
			(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As
			req.)(point ign.)
_			.,
	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
8	650542		Screw, 5/16-18 x 3/4"
9	30813		Crankshaft
10	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This gear is
			serviceable ONLY when it is pinned to the crankshaft.
40	0.4504		'
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
13A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
13A	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
14	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31295C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	33156		Camshaft
	30622A		
			Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063		Screw, 1/4-20 x 1/2" (Use as required )
	30684		Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
30	30700		Yoke, Governor
31	650494		Screw, 6-40 x 5/16"
33	29642		Ring, Retaining
34	31845		Shaft, Mechanical governor
35	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
	32784		` ,
	27878A		Intake Valve (1/32" OS)
			Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
44	27881		Spring, valve

Def #	Deat Normalism	Description
-		Description Can be a series of
	32581	Cap, Lower valve spring
	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	34240	Ground Wire
	30884	Key, Flywheel
	32678	Nipple, Oil drain, 1/4" x 3-1/2"
	28938C	Gasket, Cylinder head
	30938A	Head, Cylinder
	34251	Resistor Spark Plug (RJ-17LM)
54	610118	Cover, Spark plug (Use as required)
55	30939A	Cover Assy., Cylinder head
56A	650691	Washer, Flat (Use as required)
56B	650690	Washer, Belleville (Use as required)
56	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
56	650694A	Screw, 5/16-18 x 2" (Use as required)
56	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
57A	30322	Locknut, 8-32
57	29916	Clamp, Governor lever (Use as require d)
58	33454	Lever Assy., Governor
59	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34661	Link, Governor
	34662	Link, Throttle
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
94A	34019	730561 assembly only)
101	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
	01100/1	with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
405	44.04.44D	·
	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
		required)

		Qty	Description
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
105	35355		Fuel Cap (Red plastic) (Use as requir ed)
	29774		Fuel Line (Braided, 8 1/4") (Use as r equired)
	30962		Fuel Line (Braided, 32") (Use as required)
	26460		Clamp, Fuel line (Use as required)
	35260		Blower Housing (For elec.start)(Incl. 164,165)
	29747B		Screw, 5/16-24 x 21/32"
	27930A		·
	32401		* Gasket, Exhaust flange
			Muffler Ont Sport Arrest Mart (Incl 112 112 114 114 114 114 114 114 114 114
	33714		Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	34390		Deflector, Exhaust (Optional)
	391026		Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16 - 18 x 2"
	32125		Cup, Starter
	35009		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
119	29716		Screw, 1/4-28 x 7/16"
137	35438		Knob, Speed control
138	34663		Spring, Speed control
139	650821		Screw, 10-32 x 1/2"
143A	33171		Screen, Muffler (Use as required)
143B	33185		Cover & tube, Muffler (Use as require d)
143	650578		Screw, 8-18 x 3/8" (Use as required)
	33700		Cover & Tube, Muffler (Use as require d)
	33323		Screen, Muffler (Use as required)
	34011A		Dipstick (Incl. 146)
	33590		"O" Ring
	33893A		Oil Fill Tube
	34814		Primer Assy.
	32180C		Line, Primer
	34672		Cover, Carburetor
	650764		Nut, "U" Clip
	650760		Screw, 8-32 x 3/8"
	34126		Bracket, Grommet mounting
	650257		Screw, 8-32 x 5/16"
	650765		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	32398		Bracket, Choke
	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
	34127		Guard, Starter
	32576		Seal, Snow Guard
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 3/8"
201	730164		Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164		Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
201	700104		(Use as required)
201A	730130		Muffler Adapter Kit (Incl.110,112)(As req.)

Ref #	Part Number Qty	Description
201B	730561	Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
	34346	Decal, Instruction
	34416	Decal, Instruction
	550223 34144	Decal, Name Decal, Primer
	34414	Decal, Warning
	30548B	Condenser
	30547A	Breaker Assy (Used on Std. Point igni tion)
	631021	Inlet, Needle Seat & Clip Assy.
240	611077	Alternator (Optional)
	650868	Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078	Connector, A.C. Lighting (Optional)
	611079	Connector, D.C. Charging (Optional)
	590610 500613	Tube, Centering (Optional)
	590613 631927	Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page
250	001027	140 for breakdown)
251	610964A	Magneto (w/ring gear for 120 volt sta rter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)