

Ref #	Part Number	Qty	Description
1	34919A		Cylinder (Incl. 2,3 & 4) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
	32630		Seal, Oil
5	29536		Blower Housing Baffle (Without electric starter knock out)
			(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As
G	0020071		req.)(point ign.)
			17/4 5 7
6	650561		Screw, 1/4-20 x 5/8"
7	29538		Base, Engine mounting
8	650542		Screw, 5/16-18 x 3/4"
9	34876		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
	27884		Gear, Crankshaft (Used on early production) This gear is
• •	2.001		serviceable ONLY when it is pinned to the crankshaft.
			Serviceable ONET When it is plinted to the Garikonait.
13	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
13	34532		Piston, Pin & Ring Set (.010" OS)
13	34533		Piston, Pin & Ring Set (.020" OS)
13A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		• ,
			Ring Set (.020" OS)
	31295C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	33156		Camshaft
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
22	650561		Screw, 1/4-20 x 5/8" (Use as required)
22	30063		Screw, 1/4-20 x 1/2" (Use as required)
23	30684		Gasket Cylinder Cover
24	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		•
			Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
41	32783		Intake Valve (Std.)
41	32784		Intake Valve (1/32" OS)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
	27881		Spring, valve
77			-F9, 1-2

Ref #	Part Number Qty	Description
45	32581	Cap, Lower valve spring
	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	34240	Ground Wire
	32589	Key, Flywheel
	30969	Cap, Oil drain
	30968	Nipple, Oil drain 1/4" x 2-1/2"
51	28938C	Gasket, Cylinder head
52	30938A	Head, Cylinder
53	34251	Resistor Spark Plug (RJ-17LM)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650694A	
		Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650690	Washer, Belleville (Use as required)
	650691	Washer, Flat (Use as required)
57A	30322	Locknut, 8-32
57	29916	Clamp, Governor lever (Use as require d)
58	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34661	Link, Governor
	34662	Link, Throttle
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
69	650549	Screw, 5-40 x 7/16"
70	27793	Clip, Conduit
71	28942	Screw, 10-32 x 3/8"
72	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
85	31688A	* Gasket, Carburetor
86A	650517	Screw, 1/4-20 x 13/16"
87	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
3 -17 €	J.J.J	730561 assembly only)
		730301 dascribly only)
101	34158	Bracket, Fuel tank
102	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
101		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)

		ty Description
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962	Fuel Line (Braided, 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
108	35260	Blower Housing (For elec.start)(Incl. 164,165)
	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	32401	Muffler
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	34390	Deflector, Exhaust (Optional)
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	35438	Knob, Speed control
	34663	Spring, Speed control
	650821	Screw, 10-32 x 1/2"
	33185	Cover & tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33171	Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	34011A	Dipstick (Incl. 146)
146	33590	"O" Ring`
147	33893A	Oil Fill Tube
148	34814	Primer Assy.
149	32180C	Line, Primer
151	34672	Cover, Carburetor
153	650764	Nut, "U" Clip
154	650760	Screw, 8-32 x 3/8"
155	34126	Bracket, Grommet mounting
	650257	Screw, 8-32 x 5/16"
	650765	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	32398	Bracket, Choke
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	34127	Guard, Starter
	32576	Seal, Snow Guard
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 3/8"
	32961	Valve, Fuel shut off
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
201B	730561	Air Cleaner Kit
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully
		adjustable carburetor)

Ref #	Part Number Q	ty Description
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230E 230B 230 231A 231 232A 240 241 242 242 243 244	34414 34418 34417 34416 30548B 30547A 631021 611077 650868 611078 611079 590610 590613 631927	Decal, Warning Decal, Choke Decal, Primer Decal, Instruction Condenser Breaker Assy (Used on Std. Point igni tion) Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt.) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 140 for breakdown)
251	611043	Magneto (w/ring gear) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)