
H50-65467P Engine Parts List

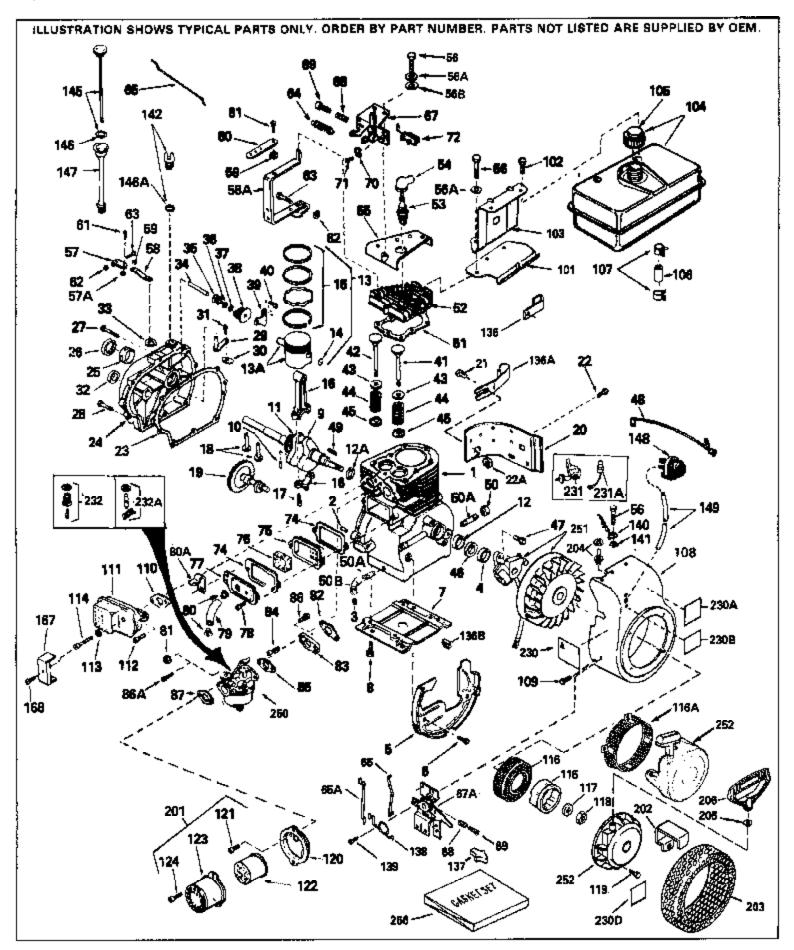

Ref #	Part Number Qty	Description
1	34919A	Cylinder (Incl. 2,3 & 4) (2-5/8" Bore )
	27652	Pin, Dowel
	27642	Pipe plug, 1/4-18
	32630	Seal, Oil
	29536	
5	29000	Blower Housing Baffle (Without electric starter knock out)
		(Use as required)
5	35256A	Blower Housing Baffle (With electric starter knockout) (As
		req.)(point ign.)
6	650561	Screw, 1/4-20 x 5/8"
	29538	
		Base, Engine mounting
	650542	Screw, 5/16-18 x 3/4"
	35228	Crankshaft
	29783	Pin, Crankshaft gear (Used on early p rod.)
11	27884	Gear, Crankshaft (Used on early production) This gear is
		serviceable ONLY when it is pinned to the crankshaft.
13	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532	Piston, Pin & Ring Set (.010" OS)
	34533	Piston, Pin & Ring Set (.020" OS)
	33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	27888	Ring, Piston pin retaining
	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
	34856	
		Ring Set (.020" OS)
	31295C	Rod Assy., Connecting (Incl. 17)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	33156	Camshaft
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	650561	Screw, 1/4-20 x 5/8" (Use as required )
	30063	Screw, 1/4-20 x 1/2" (Use as required )
	30684	Gasket Cylinder Cover
	31303B	Cover, Cylinder (Incl. 26 & 34)
	31546	Bushing, Crankshaft
	28427	Seal, Oil
	650488	Screw, 1/4-20 x 1-1/4"
	650493	Screw, 1/4-20 x 1-3/4"
	30699C	Rod Assy., Governor (Incl. 30 & 31)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29642	Ring, Retaining
	31845	Shaft, Mechanical governor
	30588A	Spool, Governor
	35479	Washer, Flat
	29193	Ring, Retaining
	30591	Gear Assy., Governor
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
41	32783	Intake Valve (Std.)
41	32784	Intake Valve (1/32" OS)
42	27878A	Exhaust Valve (Std.)
42	27880A	Exhaust Valve (1/32" OS)
	27882	Cap, Upper valve spring
	27881	Spring, valve

	Part Number Qty	
	32581	Cap, Lower valve spring
47	650814	Screw, 10-24 x 1"
48	35187	Wire, Ground
49	32589	Key, Flywheel
51	28938C	Gasket, Cylinder head
	30938A	Head, Cylinder
	33636	Resistor Spark Plug (RJ-8C)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650690	Washer, Belleville (Use as required)
	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A	
		Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30322	Locknut, 8-32
	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
65	34662	Link, Throttle
65A	34661	Link, Governor
67A	34677	Control Bracket (Incl. 68, 69, 72 & 1 38)
68	31342	Spring, Compression
69	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
104	2/158	Bracket Fueltank
	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
105		
		required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
		required)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)

		/ Description
	30962	Fuel Line (Braided, 32") (Use as requ ired)
	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
109	29747B	Screw, 5/16-24 x 21/32"
110	27930A	* Gasket, Exhaust flange
111	32401	Muffler
111D	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
111E		Deflector, Exhaust (Optional)
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116	
		Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	31691	Bracket, Air cleaner
	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	650152	Screw, 8-32 x 3/8"
136B		Clip, Ground wire
137	32410	Knob, Speed control
138	34663	Spring, Speed control
139	650821	Screw, 10-32 x 1/2"
143	650578	Screw, 8-18 x 3/8" (Use as required)
143B	33185	Cover & tube, Muffler (Use as require d)
143A		Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
144A		Screen, Muffler (Use as required)
	31297	Dipstick (Incl. 146A)
146A		* Gasket, Oil fill
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
	730561	Air Cleaner Kit
2018	700001	(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully
		adjustable carburetor)
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
		230)(As req.)
004	700404	
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
		(Use as required)
209	611084	Flywheel
	650872	Stud, Solid State mounting
	34443A	Solid State Assy. (Incl. 54)
	34346	Decal, Instruction
	550223	Decal, Name
	30547A	Breaker Assy (Used on Std. Point igni tion)
	631021	Inlet, Needle Seat & Clip Assy.
	611077	Alternator (Optional)
	650868	Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078	Connector, A.C. Lighting (Optional)
	611079	Connector, D.C. Charging (Optional)
	590610	Tube, Centering (Optional)
244	590613	Alternator Shaft (Optional)

Ref #	Part Number	Qty	Description
250	632230		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 182 for breakdown)
252	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)