

1	Part Number 34919A 27652	Qty	Description Cylinder (Incl. 2,3 & 4) (2-5/8" Bore) Pin, Dowel
			·
	27642		Pipe plug, 1/4-18
	32630		Seal, Oil
5	29536		Blower Housing Baffle (Without electric starter knock out)
			(Use as required)
E	35256A		Player Hausing Poffle (Mith electric starter knockaut) (As
5	30230A		Blower Housing Baffle (With electric starter knockout) (As
			req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	35193		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This gear is
			serviceable ONLY when it is pinned to the crankshaft.
121	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		
			Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
13	34533		Piston, Pin & Ring Set (.020" OS)
14	27888		Ring, Piston pin retaining
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31380C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		
			Lifter, Valve
	34082		Camshaft (Extended)
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
23	30684		Gasket Cylinder Cover
24	31720A		Cover, Cylinder (Incl. 26, 32 & 34)
25	31546		Bushing, Crankshaft
26	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	28926		Seal, Oil
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
38	30591		Gear Assy., Governor
39	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		Intake Valve (Std.)
	32784		Intake Valve (1/32" OS)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (0.0.) Exhaust Valve (1/32" OS)
	27882		· ,
43	21002		Cap, Upper valve spring

		Description
	27881	Spring, valve
	32581	Cap, Lower valve spring
	650814	Screw, 10-24 x 1"
	35187	Wire, Ground
	32589	Key, Flywheel
50	30969	Cap, Oil drain
50A	30968	Nipple, Oil drain 1/4" x 2-1/2"
51	28938C	Gasket, Cylinder head
	30938A	Head, Cylinder
	34251	Resistor Spark Plug (RJ-17LM)
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	30939A	Cover Assy., Cylinder head
	650690	Washer, Belleville (Use as required)
	650691	• • •
		Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30322	Locknut, 8-32
	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
61	650548	Screw, 8-32 x 5/16"
62	29216	Locknut, 10-32
63	29826	Screw, 10-32 x 3/4"
65A	34661	Link, Governor
65	34662	Link, Throttle
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	
		Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
87	27272A	* Air Cleaner Gasket (Use as required)
87	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
404	2/150	• • • • • • • • • • • • • • • • • • • •
	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
103	טדדוטוד	i doi dap (vville i laslid)(dia.)(no leg dilea)

	Part Number Qty	
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962	Fuel Line (Braided, 32") (Use as required)
107	26460	Clamp, Fuel line (Use as required)
108	32158E	Blower Housing (For electric starter)
109	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
111E	34390	Deflector, Exhaust (Optional)
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	32401	Muffler
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	35009	Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	31691	Bracket, Air cleaner
	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	650152 29443	Screw, 8-32 x 3/8"
	34663	Clip, Ground wire
	650821	Spring, Speed control Screw, 10-32 x 1/2"
	33185	Cover & tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8" (Use as required)
143A		Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	31297	Dipstick (Incl. 146A)
	29673	* Gasket, Oil fill
201B	730561	Air Cleaner Kit
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully
		adjustable carburetor)
201Δ	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
201	700104	230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
		(Use as required)
209	611084	Flywheel
	650872	Stud, Solid State mounting
	34443A	Solid State Assy. (Incl. 54)
	34346	Decal, Instruction
	550223	Decal, Name
	30547A	Breaker Assy (Used on Std. Point igni tion)
	631021	Inlet, Needle Seat & Clip Assy.
240	611077	Alternator (Optional)

Ref #	Part Number	Qty	Description
	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078		Connector, A.C. Lighting (Optional)
	611079		Connector, D.C. Charging (Optional)
	590610		Tube, Centering (Optional)
	590613		Alternator Shaft (Optional)
250	632230		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 182 for breakdown)
252	590420A		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)