
H60-75403M Engine Parts List

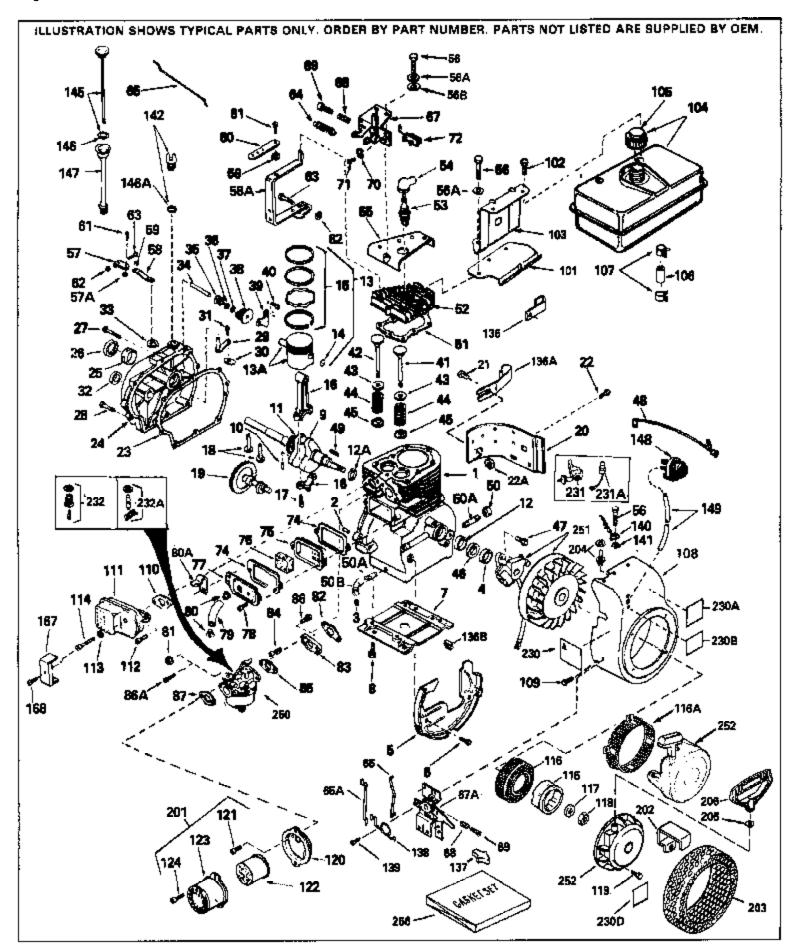

Ref # Part Numb	
1 33311B	Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
2 27652	Pin, Dowel
3 27642	Pipe plug, 1/4-18
4 27876B	Seal, Oil
5 29536	Blower Housing Baffle (Without electric starter knock out)
	(Use as required)
5 35256A	Blower Housing Baffle (With electric starter knockout) (As
	req.)(point ign.)
6 650561	Screw, 1/4-20 x 5/8"
7 29538	Base, Engine mounting
8 650542	Screw, 5/16-18 x 3/4"
9 34081	Crankshaft Dia Grantabaft man (Haad on aartum mal)
10 29783	Pin, Crankshaft gear (Used on early p rod.)
11 27884	Gear, Crankshaft (Used on early production) This gear is serviceable ONLY when it is pinned to the crankshaft.
13 34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
13 34532	Piston, Pin & Ring Set (.010" OS)
13 34533	Piston, Pin & Ring Set (.020" OS)
13A 33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
13A 33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A 33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
14 27888	Ring, Piston pin retaining
15 34854	Ring Set (Std.) (2-5/8" Bore)
15 34855	Ring Set (.010" OS)
15 34856	Ring Set (.020" OS)
16 31380C	Rod Assy., Connecting (Incl. 17)
17 650662C	Bolt, Connecting rod (Incl. 2 pieces)
18 34034	Lifter, Valve
20 30622A	Extension, Blower housing
21 650128	Screw, 10-24 x 1/2"
22 650561	Screw, 1/4-20 x 5/8" (Use as required)
22 30063	Screw, 1/4-20 x 1/2" (Use as required)
23 30684	Gasket Cylinder Cover
24 31303B	Cover, Cylinder (Incl. 26 & 34)
25 31546	Bushing, Crankshaft
26 28427	Seal, Oil
27 650488	Screw, 1/4-20 x 1-1/4"
28 650493	Screw, 1/4-20 x 1-3/4"
29 30699C	Rod Assy., Governor (Incl. 30 & 31)
30 30700	Yoke, Governor
31 650494	Screw, 6-40 x 5/16"
33 29642	Ring, Retaining
34 31845 25 20588A	Shaft, Mechanical governor
35 30588A	Spool, Governor Washer, Flat
36 35479	Washer, Flat
37 29193	Ring, Retaining
38 30591	Gear Assy., Governor Bracket, Governor
39 31843A	Bracket, Governor gear
40 650836	Screw, 10-24 x 1/2"
41 32783	Intake Valve (Std.)
41 32784	Intake Valve (1/32" OS)
42 27878A	Exhaust Valve (Std.)
42 27880A	Exhaust Valve (1/32" OS)
43 27882	Cap, Upper valve spring
44 27881 45 22591	Spring, valve
45 32581	Cap, Lower valve spring

		~	
	Part Number	Qty	Description
	33876		Gasket, Stator
	650489 34240		Screw, 1/4-20 x 5/8" Ground Wire
	30884		Key, Flywheel
	28938C		Gasket, Cylinder head
	30938A		Head, Cylinder
	33636		Resistor Spark Plug (RJ-8C)
	610118		Cover, Spark plug (Use as required)
	30939A		Cover Assy., Cylinder head
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
56	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
56B	650690		Washer, Belleville (Use as required)
	30322		Locknut, 8-32
	29916		Clamp, Governor lever (Use as require d)
	32326A		Lever, Governor
	29918		Washer, Lock, No. 8 E.T.
	30205		Bracket, Governor adjusting
	650548		Screw, 8-32 x 5/16"
	29216		Locknut, 10-32
	29826		Screw, 10-32 x 3/4"
	31386		Spring, Extension
	30824 33109A		Link, Throttle
	610973		Control Bracket (Incl. 64 & 72) Terminal Assy. (Use as required)
	27896A		Gasket, Valve chamber cover
	28423		Breather Assy., Valve
	28424		Element, Breather
	28425		Cover, Valve spring box
	650128		Screw, 10-24 x 1/2"
	35350		Tube Breather
	29752		Nut & Lockwasher, 1/4-28
82	27915A		* Gasket, Intake pipe to cylinder
	30195A		Flange, Carburetor (Incl. 81 & 86)
84	30196		Screw, 5/16-18 x 3/4"
	31688A		* Gasket, Carburetor
	650572		Screw, 1/4-28 x 1-1/8"
	27272A		* Air Cleaner Gasket (Use as required)
	30767		Spacer, Cleaner (Use as required)
94A	34819		Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
			730561 assembly only)
101	34158		Bracket, Fuel tank
102	650665		Screw, 1/4-14 x 7/8"
	34159		Plate, Fuel tank mounting
104	34186A		Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
			with different size fuel inlet openings. Tanks with the 1-3/16"
			I.D. opening use fuel cap 33032 or 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
105	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
105	25255		
	35355 410144B		Fuel Cap (Red plastic) (Use as requir ed) Fuel Cap (White Plastic)(Std.)(As req uired)
	33032		Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
105			required)
106	29774		Fuel Line (Braided, 8 1/4") (Use as r equired)

Ref #	Part Number C	ty Description
106	30962	Fuel Line (Braided, 32") (Use as requ ired)
107	26460	Clamp, Fuel line (Use as required)
108	32158E	Blower Housing (For electric starter)
109	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	34390	Deflector, Exhaust (Optional)
	32401	Muffler
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	590417	Screen, Starter cup
	650815	Washer, Belleville
118	8116	Nut, Hex
119	29716	Screw, 1/4-28 x 7/16"
137	32410	Knob, Speed control
143B	33185	Cover & tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33171	Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	31297	Dipstick (Incl. 146A)
	29673	• • •
		* Gasket, Oil fill
	570629A	Primer Assy.
	32180C	Line, Primer
	33723	Cover, Carburetor
	650764	Nut, "U" Clip
	650760	Screw, 8-32 x 3/8"
155	34126	Bracket, Grommet mounting
156	650257	Screw, 8-32 x 5/16"
157	650765	Screw, 10-32 x 1/2"
158	28820	Screw, 10-32 x 1/2"
159	32398	Bracket, Choke
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	31680	Guard, Starter
	32576	Seal, Snow Guard
	33013	Cover, Starter bubble
	650736	Screw, 10-16 x 3/8"
	34174	Deflector, Exhaust
	650665	Screw, 1/4-15 x 7/8"
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
201B	730561	Air Cleaner Kit
		(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully
		adjustable carburetor)
201	720164	Air Cleanar Acoly (Ded Deb)/Incl 07 100 101 100 100 104 9
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230	34346	Decal, Instruction
230F	34414	Decal, Warning
	33722	Decal, Operating
	34150	Decal, Choke
2009	UTIOU	

		/ Description
	34151	Decal, Choke
	30548B	Condenser
	30547A	Breaker Assy (Used on Std. Point igni tion)
	631021	Inlet, Needle Seat & Clip Assy.
	611077	Alternator (Optional)
	650868	Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078	Connector, A.C. Lighting (Optional)
	611079	Connector, D.C. Charging (Optional)
	590610	Tube, Centering (Optional)
	590613	Alternator Shaft (Optional)
250	631816	Carburetor (Incl. 85) (Refer to Division 5, Section A, page 132 for breakdown)
251	610964A	Magneto (w/ring gear for 120 volt sta rter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)