



Ref #	Part Number	Otv	Description
	33311B	Qıy	Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	27642		·
			Plug, Oil drain, 1/4-18
	27876B		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
	32581		Cap, Lower valve spring
	31856A		Crankshaft (Incl. 12 & 13)
	29783		Pin, Crankshaft gear Used in early production. This gear is
12	20700		serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
14	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532		Piston, Pin & Ring Set (.010" OS)
14	34533		Piston, Pin & Ring Set (.020" OS)
14A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		
			Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	31380C		Rod Assy., Connecting (Incl. 18)
	30682		Bolt, Connecting rod (Early productio n)
	650662C		Screw, Connecting rod (Late productio n)
19	26073		Connecting rod bolt washer (Early pro duction)
20	28264		Connecting rod nut (Used on early pro duction)
21	33156		Camshaft
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 27 & 105)
	28427		Seal, Oil
	30684		* Gasket, Cylinder cover
	31546		Bushing, Crankshaft
	650488		
			Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
35	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
41	28425		Cover, Valve spring
45	27915A		* Gasket, Intake

Ref #	Part Number	Qtv	Description
46 48 49 50 51	30195A 30196 29918 650548 30319 32326A	<u> </u>	Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Lockwasher Screw, 8-32 x 5/16" Rivet, Split (Used on early productio n) Lever, Governor (New lever does not need 1 of Ref #49,51,53,54,132,133)
54 55 56 58 59 60 61 62 63A	30322 29916 30205 31710 29216 29752 650572 29826 29642 30699C 30699B		Lock Nut, 8-32 (Use as required) Clamp, Governor lever (Use as require d) Bracket, Adjusting Link, Throttle Locknut, 10-32 Nut & Lockwasher, 1/4-28 Screw, 1/4-28 x 1-1/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Rod Assy., Governor (This one piece gov. rod is no longer used. It is replaced by 30699C assy., Ref.#63A)
65 68 69 70 73 74 75 81A 81 81 81 82 83 84B 85	30700 650494 29673 29747B 32158E 29536 650561 31688A 650152 30196 28820 650521 27272A 31691 30727 31715 730127		Yoke, Governor Screw, 6-40 x 5/16" * Gasket, Dipstick Screw, 5/16-24 x 21/32" Blower Hsg. (For elec.starter)(Incl.1 89,190) Baffle, Blower housing Screw, 1/4-20 x 5/8" * Gasket, Carburetor Screw, 8-32 x 3/8" Screw, 5/16-18 x 3/4" (Use as require d) Screw, 10-32 x 1/2" (Use as required) Screw, 10-32 x 1-1/8" (Use as required) * Gasket, Air cleaner Bracket, Air cleaner Blement, Air cleaner Body, Air cleaner Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B) (Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99 99 102 103 104 105 106 107 108 109	650549 29500 650688 30884 31843A 650836 31845 30590A 30591 30588A 29193 34158		Screw, 5-40 x 7/16" (Use as required) Screw, 8-32 x 3/4" (Use as required) Screw, 10-32 x 1 (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Shaft, Mechanical governor Washer, Flat Gear Assy., Governor (Incl. 106) Spool, Governor Ring, Retaining Bracket, Lower fuel tank

Ref #	Part Number Qty	Description
	34159	Plate, Upper fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	650665	Screw, 1/4-15 x 3/4"
	34156A	Fuel Tank (Incl. 115 & 120)
	410144B	Fuel Cap (White Plastic)(Standard)(As req.)
	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
110	33032	as required)
		• ,
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
119	29774	Fuel Line (Braided 8.25") (Use as req uired)
119	30705	Fuel Line (Braided 16") (Use as requi red)
119	30962	Fuel Line (Braided 32") (Use as requi red)
120	26460	Clamp, Fuel line (Use as required)
125	27930A	* Gasket, Exhaust
	650548	Screw, 8-32 x 5/16" (Early production)
	650139	Screw, 8-32 x 1/2" (Early production)
	650542	Screw, 5/16-18 x 3/4"
	29538	Base, Engine mounting
	650128	Screw, 10-24 x 1/2"
	30622A	Extension, Blower housing
	30747	Clip, Shorting
		Lockwasher
	650890	
	27275	Clip, Wire (Use as required)
	29443	Clip, Fuel line (Use as required)
	31386	Spring, Extension
	31711B	Control Bracket (Incl. 98, 99 & 226)
	610973	Terminal Assy.
229	28942	Screw, 10-32 x 3/8"
230	27793	Clip, Conduit
262	29716	Screw, 1/4-28 x 7/16"
264	32125	Cup, Starter
265	590417	Screen, Starter cup
266	650815	Washer, Belleville
267	8116	Nut, Hex
	33310	Decal, 5 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
	32173	Decal, H.P. (6 H.P.) (Use as required)
	31752	Decal, Air cleaner
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
303	631828	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
		page 144 for breakdown)
304	610694A	Magneto (w/ring gear for 120 volt sta rter) NOTE: The
		complete magneto is not available as an assembly. The magneto number is shown for reference purposes only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 24 for breakdown)
	=00.400	
306	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
310	33235A	* Gasket Set (Incl. items marked *)
		·

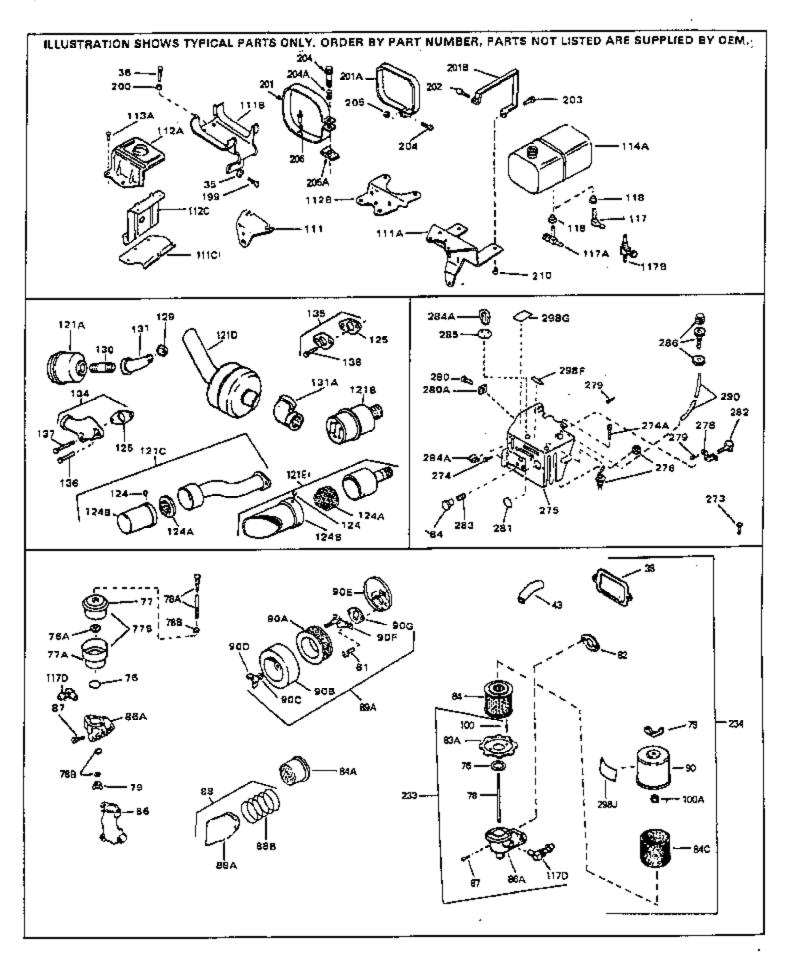

Qty Description
Washer, Flat (Use as required)
Washer, Flat (Use as required)
Washer, Flat (Use as required)
Screw, 5/16-18 x 2-1/2" (Use as requi red)
Screw, 5/16-18 x 2-1/4" (Use as requi red)
Screw, 5/16-18 x 2" (Use as required)
* Gasket, Breather cover
Screw, 5/16-18 x 3/4" (Use as require d)
Screw, 10-32 x 1/2" (Use as required)
Screw, 10-32 x 1-1/8" (Use as require d)
* Gasket, Air cleaner
Air Cleaner Elbow Assy.(Use in 730561 only.)
Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
298B) (Use as req.)
Screw, 1/4-15 x 3/4"
Muffler
Muffler (Incl. 124, 124A & 124B) (This spark arrester
mufflercan be used on any model)
• ,
Muffler Screen (Use as required)
Cover & Tube, Muffler (Use as require d)
Screw, 8-18 x 3/8"
* Gasket, Exhaust
Nut, Conduit (1/4" thick)
Nut, Conduit (1/8" thick)
Elbow, Exhaust (45 degree)
Muf.Adapter Kit(Incl.125,136,137)(As req.)
Muf.Adapter Kit(Incl.125 & 138)(As re quired)
Screw, 5/16-18 x 1-1/2" (Use as requi red)
Screw, 5/16-18 x 2-1/2" (Use as requi red)
Screw, 5/16-18 x 3/4" (Use as require d)
Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
730561 ass'y. only)
Air Cleaner Kit
(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
(Use only on engines with an externally ventedfully
adjustable carburetor.)
Screw, 10-32 x 5/16" (Use as required)

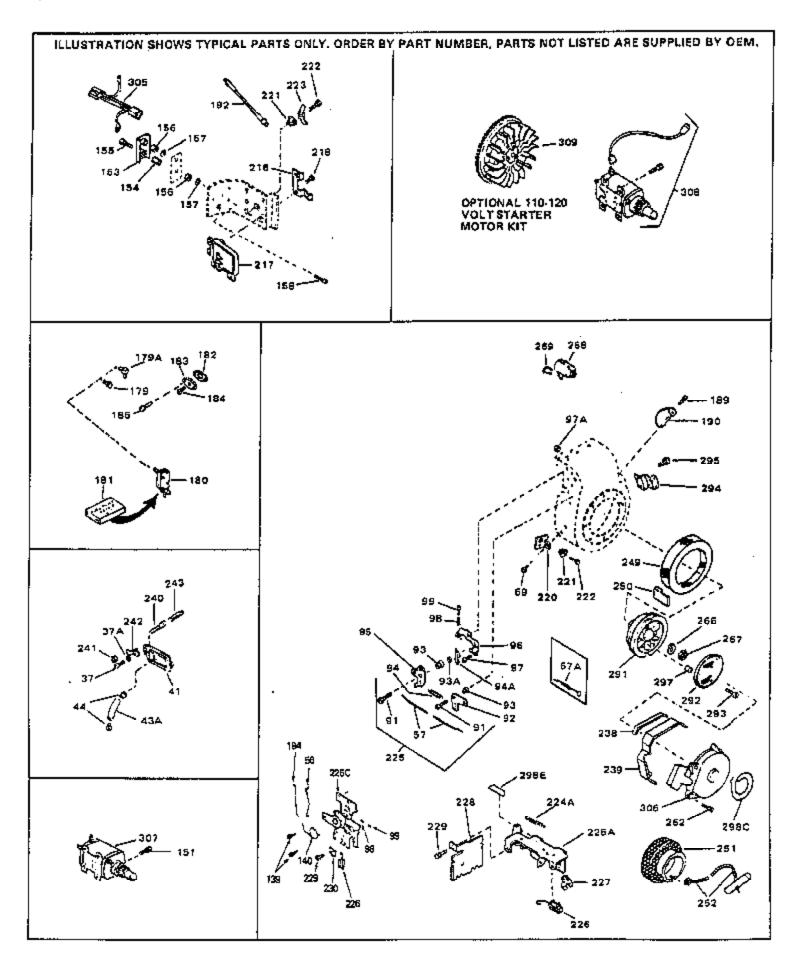

D-(!!	Deat March and	Ο.	Describer
	Part Number	Qty	Description No. 1014 (11 and 12 and 1
	27261		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	28425		Cover, Valve spring
	35350		Tube, Breather
	31710		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
99	29500		Screw, 8-32 x 3/4" (Use as required)
99	650688		Screw, 10-32 x 1 (Use as required)
182	32683A		Gasket, Fuel pump cover (Use as requi red)
183	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
185	30063		Screw, 1/4-20 x 1/2" (Use as required)
189	650736		Screw, 10-16 x 3/8"
190	33013		Cover, Starter bubble
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
226	610973		Terminal Assy.
	33177		Terminal (Use as required)
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	29716		Screw, 1/4-28 x 7/16"
	650815		Washer, Belleville
	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)