



		Description
	33311B	Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652	Pin, Dowel
	27642	Plug, Oil drain, 1/4-18
	27876B	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
6	27878A	Exhaust Valve (Std.)
6	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
7	27882	Cap, Upper valve spring
8	27881	Spring, Valve
9	32581	Cap, Lower valve spring
11	30799	Crankshaft (Incl. 12 & 13)
12	29783	Pin, Crankshaft gear Used in early production. This gear is
		serviceable ONLY when itis pinned to the crankshaft.
13	27884	Gear, Crankshaft Used in early production. This gear is
		serviceable ONLY when itis pinned to the crankshaft.
14A	33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
14A	33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532	Piston, Pin & Ring Set (.010" OS)
14	34533	Piston, Pin & Ring Set (.020" OS)
	34854	Ring Set (Std.) (2-5/8" Bore)
	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	31380C	Rod Assy., Connecting (Incl. 18)
	650662C	Screw, Connecting rod (Late productio n)
	30682	Bolt, Connecting rod (Early productio n)
	26073	Connecting rod bolt washer (Early production)
	28264	Connecting rod nut (Used on early pro duction)
	33156	Camshaft
	34034	Lifter, Valve
	31451A	Cylinder Cover (Incl.24, 105, 246, 24 7 & 248)
	28460	Seal, Oil
	30684	* Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
	650493	•
	650516	Screw, 1/4-20 x 1-3/4" Screw, 1/4-20 x 1-1/9"
		Screw, 1/4-20 x 1-1/8"
	30939A	Cover, Cylinder head
	28938C	* Gasket, Cylinder head
	30938A	Head, Cylinder (Incl. 3 of 36)
	33636	Resistor Spark Plug
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650128	Screw, 10-24 x 1/2" (Use as required)
	650597	Screw, 10-24 x 5/8" (Use as required)
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
41	28425	Cover, Valve spring
45	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)

Ref #	Part Number Qt	/ Description
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of Ref
		#49,51,53,54,132,133)
53	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	30206	Link, Throttle
	29216	Locknut, 10-32
	29752	Nut & Lockwasher, 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
03	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876	Gasket, Stator
	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	
		Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	650152	Screw, 8-32 x 3/8"
	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner
	30727	Element, Air cleaner
	31715	Body, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
•	20224	
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
98	31342	Compression Spring (Used with 650549 screw) (Use as
00	010-12	required)
	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
102	30884	Key, Flywheel
103	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
	30588A	Spool, Governor
	29193	Ring, Retaining
100		g,

113 30063 115 410144B 115 33032 115 34210 116 229774 117 34210 118 29774 119 30705 119 30705 119 30862 119 30706 119 30862 119 30862 120 28480 125 27390A 125 650548 126 650139 127 650128 128 650128 129 650128 129 65078 120 624 31793 124 650128 125 2775 126 31792 127 650778 126 5050147 127 650815 128 650819 129 650815 120 2776 120 28480 121 28775 122 123 123 123 123 123 123 123 123 123	Ref #	Part Number	Qty	Description
Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required)				
Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required)	115	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
as required) Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) 119 29774 Fuel Line (Braided 8.25") (Use as required) 119 30705 Fuel Line (Braided 16") (Use as required) 119 30802 Fuel Line (Braided 52") (Use as required) 120 28460 Clamp, Fuel line (Use as required) 125 27930A 'Casket, Exhaust' 136 660548 Screw, 8-32 x 57.6" (Early production) 137 660139 Screw, 8-32 x 57.6" (Early production) 148 60542 Screw, 8-32 x 57.6" (Early production) 149 60542 Screw, 8-32 x 12" (Early production) 140 60542 Screw, 57.6-18 x 3/4" 141 62538 Base, Engine mounting 142 Screw, 57.6-18 x 3.4" 143 30622A Extension, Blower housing 144 62775 Clip, Wire (Use as required) 145 2776 Cver, Spark Plug 146 2776 Cver, Spark Plug 147 650778 Bearing, Ball 148 306778 Washer, Thrust 148 60580 Nut, Lock 148 60580 Nut, Lock 149 605778 Washer, Lock 140 605778 Washer, Lock 141 6265 Spul17 Screen, Starter cup 142 63 82125 Cup, Starter 143 60580 Nut, Lock 144 83157 Screen, Starter cup 145 83157 Screen, Starter cup 146 650815 Washer, Belleville 147 83157 Decal, Name 148 28143 Decal, Name 149 30647A Condard Assy, Breaker 149 30647A Condard Assy, Breaker 140 610985 Magneto (Wind page and 1/2 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list, (Refer to Division 5, Section C, page 25 for breakdown) 140 5076 Prockdown)	115	33032		, , , , , , , , , , , , , , , , , ,
Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) 119 29774 Fuel Line (Braided 8.25') (Use as req uired) Fuel Line (Braided 8.25') (Use as required) Fuel Line (Braided 32') (Use as required) Screw, 8-32 x 5/16' (Early production) Screw, 8-32 x 1/2' (Early produ				
as required) Fuel Line (Braided 8.25") (Use as required) Fuel Line (Braided 16") (Use as required) Fuel Line (Braided 16") (Use as required) Fuel Line (Braided 32") (Use as required) Fuel Line (Use	445	24240		. ,
Fuel Line (Braided 8.25") (Use as req uired)	115	34210		
119 30705				as required)
Fuel Line (Braided 32") (Use as required)	119	29774		
120 26460 Clamp, Fuel line (Use as required) 125 27930A "Gasket, Exhaust 132 650548 Screw, 8-32 x 5/16" (Early production) 132 650139 Screw, 8-32 x 1/2" (Early production) 146 29538 Base, Engine mounting 147 650128 Screw, 10-24 x 1/2" 148 30622A Extension, Blower housing 168 27275 Clip, Wire (Use as required) 186 29443 Clip, Fuel line (Use as required) 193 27276 Cover, Spark Plug 244 31793 Bearing, Ball 245 31792 Washer, Thrust 246 31855 Retainer, Bearing 247 650778 Washer, Lock 248 650580 Nut, Lock 25 29716 Screw, 14-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup 266 650315 Washer, Belleville 278 31517 Decal, Nime	119	30705		
125 27930A 132 650548 132 650139 133 650139 134 650542 144 620542 148 25538 147 650128 147 650128 148 30622A 148 30622A 149 27275 150 219 27276 161 29443 1793 1793 1794 650778 1795 244 31793 1795 245 31792 1795 2797	119	30962		Fuel Line (Braided 32") (Use as requi red)
132 650548 Screw, 8-32 x 5/16" (Early production)	120	26460		Clamp, Fuel line (Use as required)
132 650139	125	27930A		* Gasket, Exhaust
144 650542 Screw, 5/16-18 x 3/4" 146 29538 Base, Engine mounting 147 650128 Screw, 10-24 x 1/2" 148 30622A Extension, Blower housing 186 27275 Cip, Wire (Use as required) 186 29443 Cover, Spark Plug 244 31793 Bearing, Ball 245 31792 Washer, Thrust 246 31855 Retainer, Bearing 247 650778 Washer, Lock 248 650580 Nut, Lock 260 29216 Screw, 14-28 x 7/16" 260 32125 Cup, Starter 266 550815 Washer, Belleville 267 8116 Nut, Lock 287 8116 Nut, Hex 288A 33310 Decal, Name 298A 33310 Decal, S HP Mini-Bike (Use as required) 298A 32173 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, H.P. (6 H.P.) (H.P.) (Greater) 298	132	650548		Screw, 8-32 x 5/16" (Early production)
Habit Habi	132	650139		Screw, 8-32 x 1/2" (Early production)
147 650128 148 30622A 148 30622A 148 30622A 158 27275 168 29443 179 2776 188 29443 189 27276 189 29443 189 27276 180 29443 181 27276 180 29443 181 27276 180 29443 181 27276 180 29443 181 27276 180 29443 181 27276 180 2944 31793 180 2947 180 2948 180 2948 180 2948 180 29716 190 29716 19	144	650542		Screw, 5/16-18 x 3/4"
148 30622A Extension, Blower housing 186 27275 Clip, Wire (Use as required) 186 29443 Clip, Fuel line (Use as required) 193 27276 Cover, Spark Plug 244 31793 Bearing, Ball 245 31792 Washer, Thrust 246 31855 Retainer, Bearing 247 650778 Washer, Lock 248 650580 Nut, Lock 262 29716 Screw, 1/4-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup 266 650815 Washer, Bellelville 367 8116 Nut, Hex 298A 350223 Decal, Name 298A 35171 Decal, S HP Mini-Bike (Use as required) 298A 31517 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, Air cleaner 298 34346 Decal, Instruction 299 30547A Condenser 301	146	29538		Base, Engine mounting
186 27275 Clip, Wire (Use as required)	147	650128		Screw, 10-24 x 1/2"
186 29443 Clip, Fuel line (Use as required)	148	30622A		Extension, Blower housing
193 27276 Cover, Spark Plug 244 31793 Bearing, Ball 245 31855 Retainer, Bearing 247 650778 Washer, Lock 248 650580 Nut, Lock 262 29716 Screw, 1/4-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup 266 650815 Washer, Belleville 267 8116 Nut, Hex 298A 550223 Decal, Name 298A 33310 Decal, Alme 298A 31517 Decal, H.P. (5 H.P.) (Use as required) 298B 31752 Decal, Alir cleaner 298 34346 Decal, Instruction 299 30547A Condenser 300 610767A Condenser 301 631021 Inlet Needle, Seat & Clip Assy. 303 631828 Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 304 610985 Magneto (wiring gear) (12 Volt) (3 Am p)	186	27275		Clip, Wire (Use as required)
244 31793 245 31792 246 31855 247 650778 248 650580 249 650580 262 29716 264 32125 265 590417 266 650815 267 8116 298A 550223 298A 33310 298A 31517 298A 32173 298B 31752 298B 31752 298 34346 299 30547A 300 610767A 301 631021 303 631828 2986 2987 2087 2088 2088 2098 2098 2098 2098 2098 2098	186	29443		Clip, Fuel line (Use as required)
245 31792 Washer, Thrust 246 31855 Retainer, Bearing 247 650778 Washer, Lock 248 650580 Nut, Lock 262 29716 Screw, 1/4-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup Washer, Belleville Washer, Belleville 267 8116 Nut, Hex 298A 350223 Decal, Name 298A 33310 Decal, Search 298A 31517 Decal, H.P. (6 H.P.) (Use as required) 298A 32173 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, Air cleaner 298 34346 Decal, Instruction 299 30547A Contact Assy., Breaker 301 631021 Condenser 301 631021 Inlet Needle, Seat & Clip Assy. 303 631828 Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 304 610985 Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto number is shown for reference purposes only. Ord	193	27276		Cover, Spark Plug
246 31855 Retainer, Bearing 247 650778 Washer, Lock 248 650580 Nut, Lock 262 29716 Screw, 1/4-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup 266 650815 Washer, Belleville 267 8116 Nut, Hex 298A 550223 Decal, Name 298A 33310 Decal, Name 298A 32173 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, H.P. (6 H.P.) (Use as required) 298 34346 Decal, Air cleaner 299 30547A Contact Assy., Breaker 300 610767A Contact Assy., Breaker 301 631021 Inlet Needle, Seat & Clip Assy. 303 631828 Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 304 610985 Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Se	244	31793		Bearing, Ball
247 650778 248 650580 262 29716 264 32125 265 590417 266 650815 267 8116 298A 550223 298A 33310 298A 31517 298A 32173 298B 31752 298 34346 299 30547A 300 610767A 301 631021 303 631828 204 610985 Washer, Lock Nut, Lock Screw, 14-28 x 7/16" Cup, Starter Cup, Starter cup Washer, Belleville Nut, Hex Decal, Name Decal, Name Decal, Name Decal, Name Decal, H.P. (5 H.P.) (Use as required) Decal, H.P. (6 H.P.) (245	31792		Washer, Thrust
248 650580 Nut, Lock 262 29716 Screw, 1/4-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup 266 650815 Washer, Belleville Nut, Hex Decal, Name 298A 550223 Decal, H.P. (6 H.P.) (Use as require d) 298A 33310 Decal, 5 HP Mini-Bike (Use as require d) 298A 32173 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, Air cleaner 299 30547A Decal, Instruction 299 30547A Contact Assy., Breaker 300 610767A Condenser 301 631021 Inlet Needle, Seat & Clip Assy. 303 631828 Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 304 610985 Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) 306 590420 Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown) <	246	31855		Retainer, Bearing
262 29716 Screw, 1/4-28 x 7/16" 264 32125 Cup, Starter 265 590417 Screen, Starter cup 266 650815 Washer, Belleville 267 8116 Nut, Hex 298A 550223 Decal, Ph. Mini-Bike (Use as require d) 298A 33310 Decal, H.P. (6 H.P.) (Use as required) 298A 32173 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, Air cleaner 298 34346 Decal, Instruction 299 30547A Contact Assy., Breaker 300 610767A Condenser 301 631021 Inlet Needle, Seat & Clip Assy. 303 631828 Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 304 610985 Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) 306 590420 Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	247	650778		Washer, Lock
Cup, Starter Screen, Starter cup Washer, Belleville Washer, Selleville Nut, Hex Decal, Name Decal, Name Decal, 5 HP Mini-Bike (Use as require d) Decal, H.P. (6 H.P.) (Use as required) Decal, Air cleaner Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section C, page 25 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	248	650580		Nut, Lock
265 590417 266 650815 Washer, Belleville Washer, Belleville Nut, Hex 298A 550223 Decal, Name 298A 33310 Decal, 5 HP Mini-Bike (Use as require d) 298A 31517 Decal, H.P. (5 H.P.) (Use as required) 298B 31752 Decal, H.P. (6 H.P.) (Use as required) 298B 31752 Decal, Air cleaner 298 34346 Decal, Instruction 299 30547A Contact Assy., Breaker Condenser 301 631021 Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 304 610985 Magneto (Wring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	262	29716		Screw, 1/4-28 x 7/16"
266 650815 267 8116 268 116 298A 550223 298A 33310 298A 331517 298A 32173 298B 31752 298 34346 299 30547A 201 631021 201 631828 201 631025 201 631025 201 631026 201 631026 201 631026 202 631828 203 631828 203 631828 203 631828 204 650815 205 650823 206 650815 207 816 208 208 208 208 208 208 208 208 209 209 208 209 208 208 209 209 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 208 208 209 209 208 209 208 209 208 209 208 209 208 209 208 209 208 209 208 209 208 20	264	32125		Cup, Starter
267 8116 298A 550223 298A 33310 298A 31517 298A 31517 298A 32173 298B 31752 298 34346 299 30547A 300 610767A 301 631021 303 631828 304 610985 Mut, Hex Decal, Name Decal, S HP Mini-Bike (Use as require d) Decal, H.P. (6 H.P.) (Use as required) Decal, H.P. (6 H.P.) (Use as required) Decal, Air cleaner Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	265	590417		Screen, Starter cup
298A 550223 298A 33310 298B 31517 298A 32173 298B 31752 298 34346 299 30547A 300 610767A 301 631021 304 610985 Decal, Name Decal, Name Decal, S HP Mini-Bike (Use as required) Decal, H.P. (6 H.P.) (Use as required) Decal, H.P. (6 H.P.) (Use as required) Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	266	650815		Washer, Belleville
298A 33310 298B 31517 298A 32173 298B 31752 298 34346 299 30547A 300 610767A 301 631021 303 631828 204 610985 Decal, 5 HP Mini-Bike (Use as required) Decal, H.P. (6 H.P.) (Use as required) Decal, H.P. (6 H.P.) (Use as required) Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				Nut, Hex
298A 31517 298A 32173 298B 31752 298 34346 299 30547A 300 610767A 301 631021 303 631828 204 610985 Decal, H.P. (5 H.P.) (Use as required) Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) 306 590420 Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				Decal, Name
298A 32173 298B 31752 298 34346 299 30547A 300 610767A 301 631021 303 631828 Decal, H.P. (6 H.P.) (Use as required) Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				·
298 31752 298 34346 299 30547A 299 30547A 300 610767A 301 631021 303 631828 304 610985 Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
298 34346 299 30547A 300 610767A 301 631021 303 631828 Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
299 30547A 300 610767A 301 631021 303 631828 Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
 300 610767A 301 631021 303 631828 304 610985 305 610985 306 590420 307 Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) 308 Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) 308 Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown) 				
Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A, page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
page 144 for breakdown) Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	303	631828		
complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				page 144 for breakdown)
magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)	304	610985		
Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				
306 590420 Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)				Order component parts individually, as shown in parts list.
breakdown)				
310 33235A * Gasket Set (Incl. items marked *)	306	590420		
·	310	33235A		* Gasket Set (Incl. items marked *)

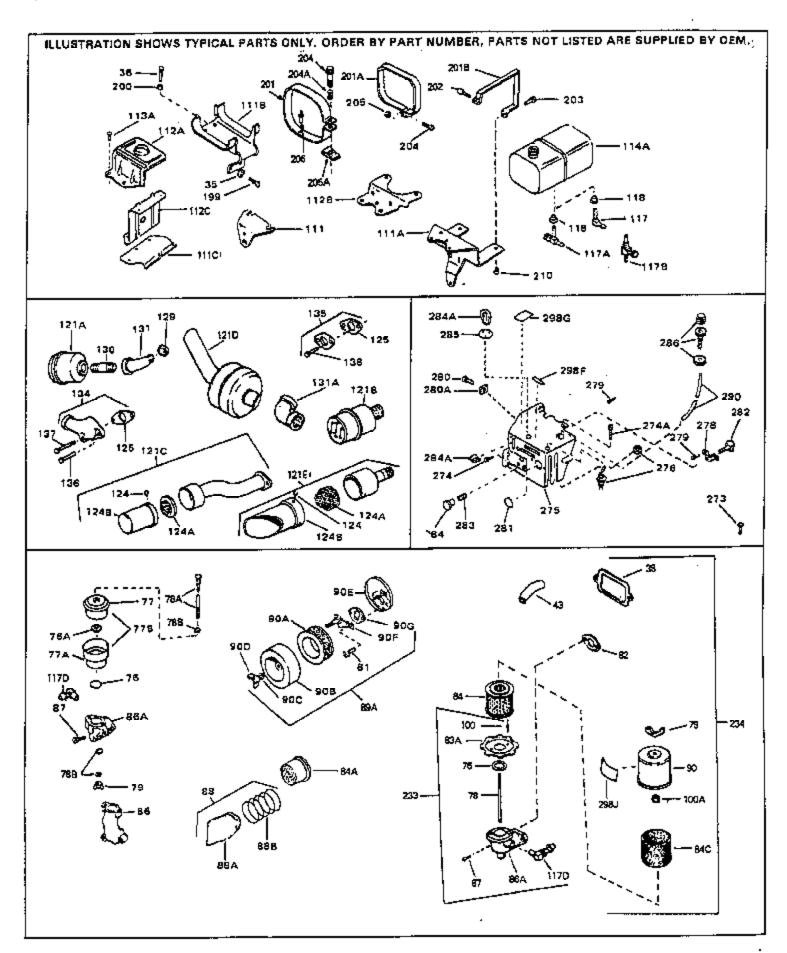

Ref #	Part Number	Qty	Description
35	26073	•	Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 & 298B) (Use as req.)
			290b) (Ose as req.)
121E	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
			mufflercan be used on any model)
121B	31287		Muffler
124A	33171		Muffler Screen (Use as required)
124B	33185		Cover & Tube, Muffler (Use as require d)
124	650578		Screw, 8-18 x 3/8"
125	27930A		* Gasket, Exhaust
129	32862		Nut, Conduit (1/4" thick)
129	28443		Nut, Conduit (1/8" thick)
131	30209		Elbow, Exhaust (45 degree)
134	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
135	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
137	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
138	30196		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
234	730561		Air Cleaner Kit (Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29 (Use only on engines with an externally ventedfully adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)

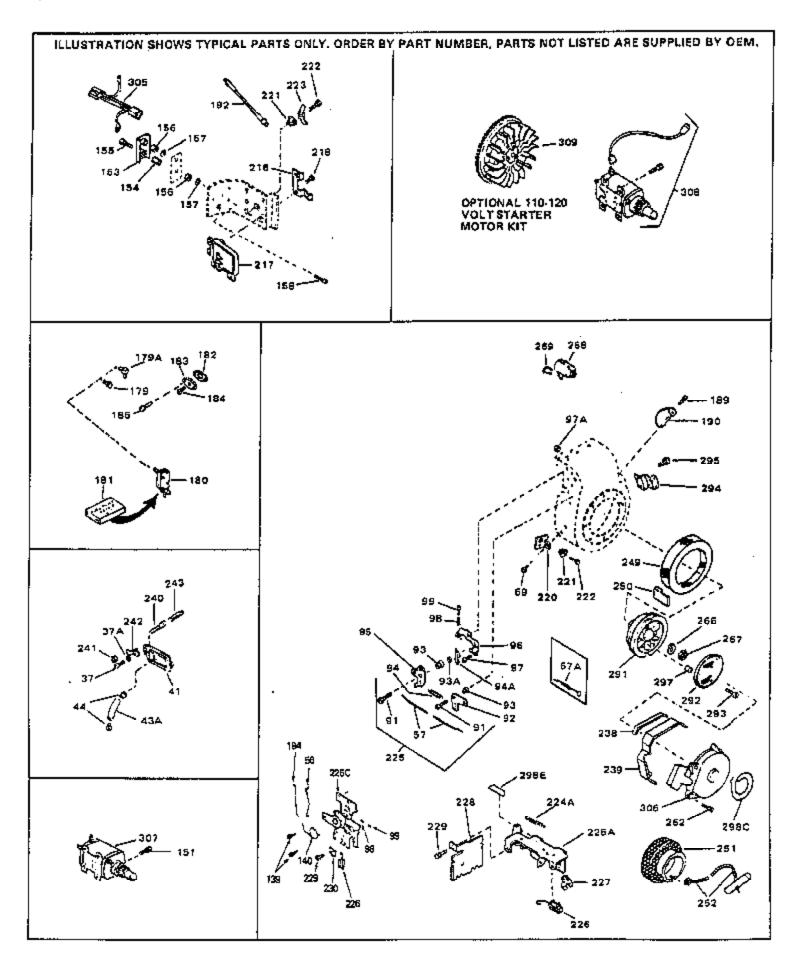

		Description
37	650128	Screw, 10-24 x 1/2" (Use as required)
37	650597	Screw, 10-24 x 5/8" (Use as required)
37A	27261	Washer, Flat (Use as required)
41	28425	Cover, Valve spring
43A	35350	Tube, Breather
56	30206	Link, Throttle
57	31879	Link, Governor lever-to-bellcrank
	29747B	Screw, 5/16-24 x 21/32"
	30312	Screw, 10-32 x 1/2"
	30712	Lever, Bellcrank
	29530	Bushing, Lever
	28562	Bushing, Lever
	30202	Spring, Extension
	32977	Spring, Torsion
	30201A	Lever, Speed control
	30199A	Control Bracket (Incl. 98 & 99)
	33450	Nut, Lock
	650399	Screw, 10-32 x 5/8"
		·
90	28569	Compression Spring (Used with 29500 screw)(Use as required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
98	31342	Compression Spring (Used with 650549 screw) (Use as
00	01012	required)
		• •
	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	32683A	Gasket, Fuel pump cover (Use as requi red)
	32955	Cover, Fuel pump pad (Use as required)
	9556	Plug, Pipe 1/8-27 (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	28545	Grommet, Plastic
222	650760	Screw, 8-32 x 3/8"
223	33356	Terminal, Ground
225	730152	Control Bracket(Incl.91 thru 97)(As r eq.)
227	33177	Terminal (Use as required)
262	29716	Screw, 1/4-28 x 7/16"
266	650815	Washer, Belleville
267	8116	Nut, Hex
	33018	Harness Assy., Adapter (Use as requir ed)
	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
308	33328D	Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt
		starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter
		mounting bosses and a ring gear flywheel has been added
		(see #309). Refer to service number stamped on end cap of
		motor,
		HOO,
309	30811A	Flywheel (Ring gear flywheel requiredon engines using
		110-120 volt starter motor kits listed above.)