

Ref #	Part Number	Otv	Description
	33311B	۵.,	Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
	27652		Pin, Dowel
	27642		Pipe plug, 1/4-18
	27876B		Seal, Oil
			·
ວ	29536		Blower Housing Baffle (Without electric starter knock out)
			(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As
			req.)(point ign.)
c	CEOEC1		Corow 1/4 20 v E/0"
	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	30799		Crankshaft
	29783		Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This gear is
			serviceable ONLY when it is pinned to the crankshaft.
13	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	27888		Ring, Piston pin retaining
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	31380C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	33156		Camshaft
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
	30684		Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		•
	32784		Intake Valve (Std.)
			Intake Valve (1/32" OS) Exhaust Valve (Std.)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
44	27881		Spring, valve

	Part Number Qty	
45	32581	Cap, Lower valve spring
46	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	34240	Ground Wire
	30884	Key, Flywheel
	28938C	
		Gasket, Cylinder head
	30938A	Head, Cylinder
	33636	Resistor Spark Plug (RJ-8C)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
56	650694A	Screw, 5/16-18 x 2" (Use as required)
56	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
56B	650690	Washer, Belleville (Use as required)
56A	650691	Washer, Flat (Use as required)
57	29916	Clamp, Governor lever (Use as require d)
	30322	Locknut, 8-32
	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	34662	Link, Throttle
	34661	Link, Governor
	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
71	28942	Screw, 10-32 x 3/8"
72	610973	Terminal Assy. (Use as required)
74	27896A	Gasket, Valve chamber cover
75	28423	Breather Assy., Valve
76	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	· · · · · · · · · · · · · · · · · · ·
		Flange, Carburetor (Incl. 86A) Screw, 5/16-18 x 3/4"
	30196	·
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
101	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
103	00002	, , . , . , . , . , . , . , .
		required)

	Part Number Qt	
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
	30962	Fuel Line (Braided, 32") (Use as required)
	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
	29747B	Screw, 5/16-24 x 21/32"
	27930A	* Gasket, Exhaust flange
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	34390	Deflector, Exhaust (Optional)
	32401	Muffler
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
116	590417	Screen, Starter cup
117	650815	Washer, Belleville
118	8116	Nut, Hex
119	29716	Screw, 1/4-28 x 7/16"
137	35438	Knob, Speed control
	34663	Spring, Speed control
	650821	Screw, 10-32 x 1/2"
	33185	Cover & tube, Muffler (Use as require d)
	33171	Screen, Muffler (Use as required)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	34011A	. ,
		Dipstick (Incl. 146)
	33590	"O" Ring
	33893A	Oil Fill Tube
	570629A	Primer Assy.
	32180C	Line, Primer
	34672	Cover, Carburetor
	650764	Nut, "U" Clip
	650760	Screw, 8-32 x 3/8"
	34126	Bracket, Grommet mounting
156	650257	Screw, 8-32 x 5/16"
157	650765	Screw, 10-32 x 1/2"
158	28820	Screw, 10-32 x 1/2"
159	32398	Bracket, Choke
160	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	34127	Guard, Starter
	32576	Seal, Snow Guard
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
	730561	Air Cleaner Kit
2010	750001	(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
		(Used only on engine with an externally vented fully
		adjustable carburetor)
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 & 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124) (Use as required)
230F	34414	Decal, Warning

Dof #	Part Number	Otv.	Description
	34346	Qıy	Description Decal, Instruction
	34416		
	550223		Decal, Instruction
	34144		Decal, Name
			Decal, Primer Propler Age (Lloyd on Std. Boint igni tion)
	30547A		Breaker Assy (Used on Std. Point igni tion)
	30548B		Condenser
	631021		Inlet, Needle Seat & Clip Assy.
	611077		Alternator (Optional)
	650868		Screw, 8-18 x 1-1/8" (3 required)(Opt .)
	611078		Connector, A.C. Lighting (Optional)
	611079		Connector, D.C. Charging (Optional)
	590610		Tube, Centering (Optional)
	590613		Alternator Shaft (Optional)
230	631927		Carburetor (Incl. 85) (Refer to Division 5, Section A, Page
			140 for breakdown)
251	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24
			for breakdown)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter
			motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#255). Refer to service
			number stamped on end cap of motor or on decal for
			identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter motor kits listed above) (Used on Std.
			point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using
255	OT TOTAL		110-120 volt starter motor kits listed above) (Used on Std.
			point ignition 1982 or later)
			,
255	611085		Flywheel (Minimum ring gear flywheel required on engines
			using 110-120 volt starter motor kits listed above) (Used on
			solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)
200)