


Ref #	Part Number (Ωtv	Description
	33311B	٠.,	Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
	32214		Elbow, Oil drain
	27642		Plug, Oil drain, 1/4-18
	30968		Nipple, Oil drain
	27876B		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	30799		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
14A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		
			Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	31380C		Rod Assy., Connecting (Incl. 18)
	650662C		Screw, Connecting rod (Late productio n)
	30682		Bolt, Connecting rod (Early productio n)
	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
	33156		Camshaft
	34034 24203B		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 27 & 105)
	28427		Seal, Oil
	30684		* Gasket, Cylinder cover
	31546		Bushing, Crankshaft
28	650488		Screw, 1/4-20 x 1-1/4"
29	650493		Screw, 1/4-20 x 1-3/4"
30	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
37	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
70	20121		Lioning Dioduloi

	5 (1)	
		Oty Description
	28425	Cover, Valve spring
	32447	Tube, Breather
	27915A	* Gasket, Intake
46	34712	Flange, Carburetor (Incl. 60)
48	30196	Screw, 5/16-18 x 3/4"
49	29918	Lockwasher
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used on early productio n)
	32326A	Lever, Governor (New lever does not need 1 of Ref
32	32320A	·
		#49,51,53,54,132,133)
53	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Locknut, 10-32
		·
	650517	Screw, 1/4-20 x 13/16"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
63 /	206000	Pad Acov Covernor (Incl. 64.9.65)
	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	31297	Dipstick (Incl. 68)
	29673	* Gasket, Dipstick
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
71	33876	Gasket, Stator
	29536	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	650152	Screw, 8-32 x 3/8"
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
		, ,
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	31708	Bracket, Air cleaner
	31715	Body, Air cleaner
89	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
00	28560	Compression Spring (Llead with 20500 serse)/Lleads
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
98	32924	Compression Spring (Used with 650688 screw) (Use as
		required)
98	31342	Compression Spring (Used with 650549 screw) (Use as
		required)
00	650540	Sorow 5.40 v.7/16" (Llos as required)
	650549	Screw, 5-40 x 7/16" (Use as required)
	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	30884	Key, Flywheel
103	31843A	Bracket, Governor gear
104	650836	Screw, 10-24 x 1/2"
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 106)
101		23317.0031, 201011101 (11011 100)


	S. A. I.	<u> </u>	
		Qty	Description
	30588A		Spool, Governor
109	29193		Ring, Retaining
111D	34158		Bracket, Lower fuel tank
112	34159		Plate, Upper fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	650665		Screw, 1/4-15 x 3/4"
			·
	34186A		Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
115	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
			as required)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
110	0.1210		as required)
			as required)
119	29774		Fuel Line (Braided 8.25") (Use as req uired)
119	30705		Fuel Line (Braided 16") (Use as required)
	30962		Fuel Line (Braided 32") (Use as requi red)
	26460		Clamp, Fuel line (Use as required)
	32401		Muffler
	27930A		* Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16-18 x 2"
132	650548		Screw, 8-32 x 5/16" (Early production)
132	650139		Screw, 8-32 x 1/2" (Early production)
144	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
	27275		Clip, Wire (Use as required)
	29443		Clip, Fuel line (Use as required)
	610118		Cover, Spark plug
	31386		Spring, Extension
225B	31726B		Control Bracket (Incl. 98, 99, 226 & 284A)
226	610973		Terminal Assy.
232	34235		Ground Wire
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	34149		Decal, Instruction
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
298A	32173		Decal, H.P. (6 H.P.) (Use as required)
299	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	632178		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
303	002170		page 176 for breakdown)
			page 170 for breakdowity
304	610689A		Magneto NOTE: The complete magneto is not available as
			an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as
			shown in parts list. (Refer to Division 5, Section B, page 24
			for breakdown)
			ioi bicalaowiij
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
			hreakdown)

breakdown)

Ref # Part Number	Qty Description
310 33235A	* Gasket Set (Incl. items marked *)

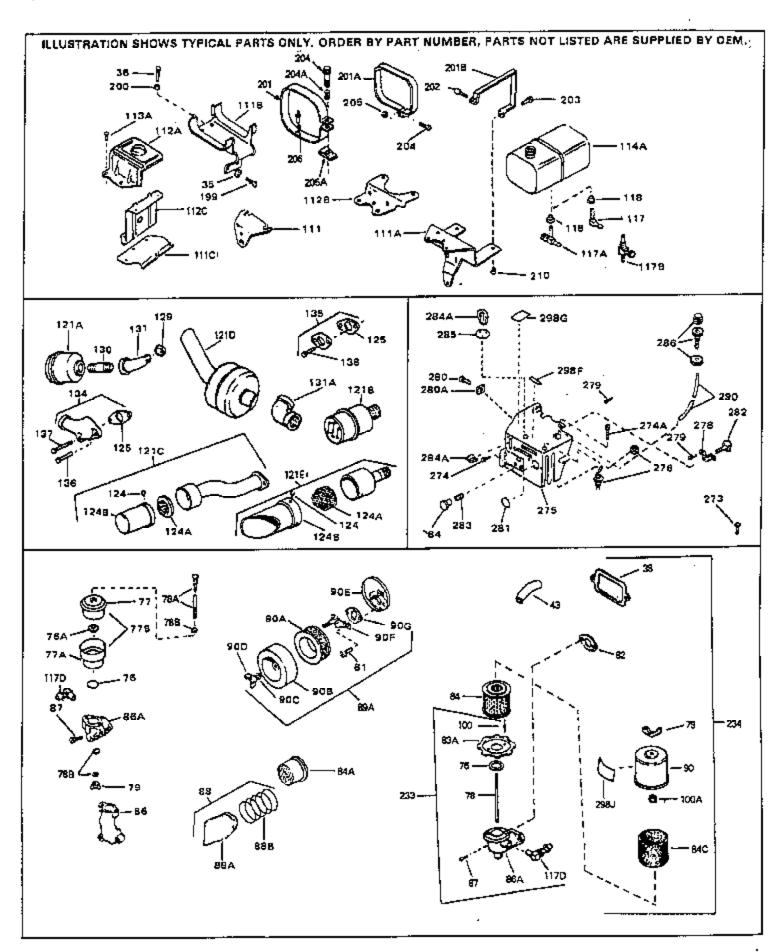

Ref #	Part Number	Qty	Description
35	26073		Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
43	32447		Tube, Breather
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
84A	31700		Element, Air cleaner
86A	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
113Δ	650665		Screw, 1/4-15 x 3/4"
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
1212	001020		mufflercan be used on any model)
4044	00474		, ,
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in 730561 ass'y. only)
			730301 ass y. Only)
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
273	650687		Screw, 10-32 x 5/16" (Use as required)
	32410		Knob, Speed control
_3 " (1 -1

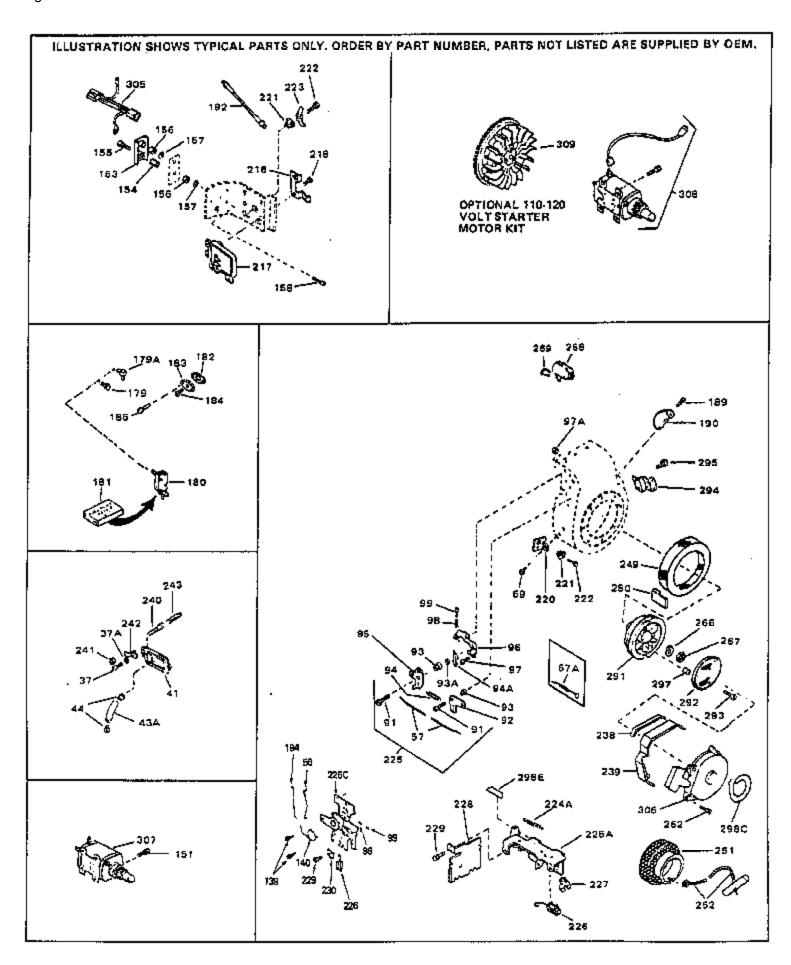

Ref #	Part Number	Qty	Description
37A	27261		Washer, Flat (Use as required)
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
41	28425		Cover, Valve spring
44	32446		Grommet, Breather tube
56	31710		Link, Throttle
69	29747B		Screw, 5/16-24 x 21/32"
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	32683A		Gasket, Fuel pump cover (Use as requi red)
	32955		Cover, Fuel pump pad (Use as required)
	9556		Plug, Pipe 1/8-27 (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
226	610973		Terminal Assy.
227	33177		Terminal (Use as required)
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
267	8116		Nut, Hex
305	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)