
H60-75439L Engine Parts List #1

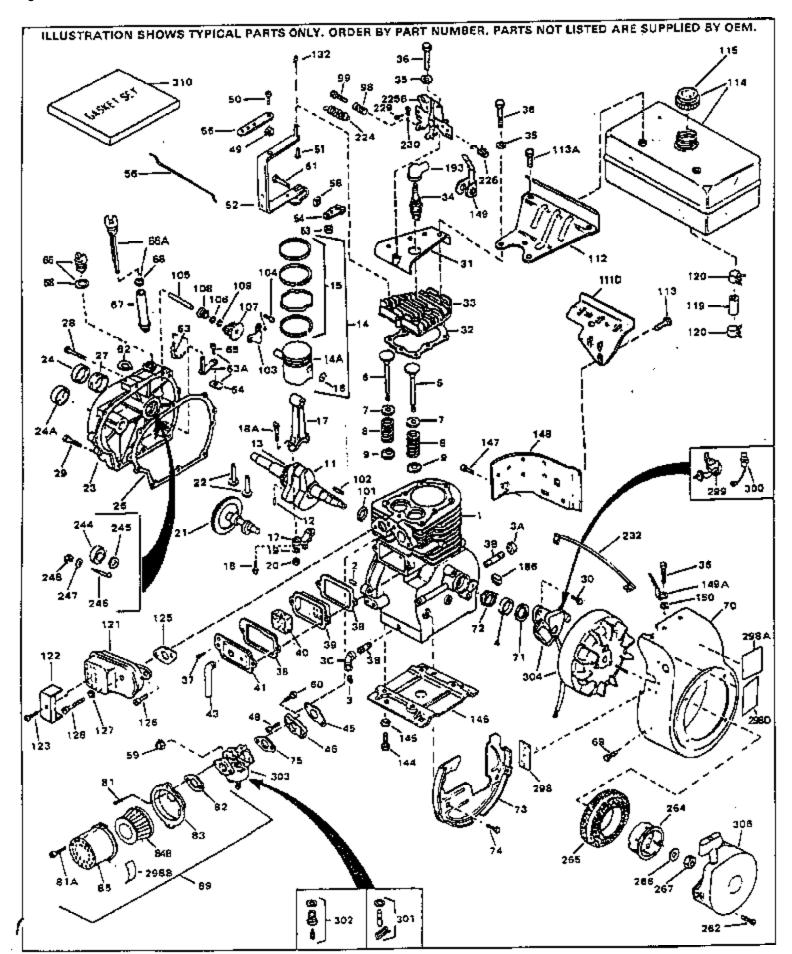


		ty Description
1	33311B	Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
2	27652	Pin, Dowel
3B	30968	Nipple, Oil drain
	27642	Plug, Oil drain, 1/4-18
	32214	Elbow, Oil drain
	27876B	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	27882	Cap, Upper valve spring
8	27881	Spring, Valve
9	32581	Cap, Lower valve spring
11	30799	Crankshaft (Incl. 12 & 13)
	29783	Pin, Crankshaft gear Used in early production. This gear is
		serviceable ONLY when it is pinned to the crankshaft.
13	27884	Gear, Crankshaft Used in early production. This gear is serviceable ONLY when itis pinned to the crankshaft.
111	33312B	Dictor 8. Din Acc'v (Ctd.)($2-5/2^{\mu}$)(In d.16)
		Piston & Pin Ass'y. (Std.)($2-5/8^{\circ}$)(In cl.16)
	33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532	Piston, Pin & Ring Set (.010" OS)
	34533	Piston, Pin & Ring Set (.020" OS)
15	34854	Ring Set (Std.) (2-5/8" Bore)
15	34855	Ring Set (.010" OS)
	34856	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	31380C	Rod Assy., Connecting (Incl. 18)
	650662C	Screw, Connecting rod (Late productio n)
	30682	Bolt, Connecting rod (Early productio n)
	26073	Connecting rod bolt washer (Early pro duction)
	28264	Connecting rod nut (Used on early pro duction)
	33156	Camshaft
	34034	Lifter, Valve
23	31303B	Cover, Cylinder (Incl. 24, 27 & 105)
24	28427	Seal, Oil
	30684	* Gasket, Cylinder cover
	31546	Bushing, Crankshaft
	650488	Screw, 1/4-20 x 1-1/4"
	650493	Screw, 1/4-20 x 1-3/4"
	650489	Screw, 1/4-20 x 5/8"
	30939A	
		Cover, Cylinder head
	28938C	* Gasket, Cylinder head
	30938A	Head, Cylinder (Incl. 3 of 36)
	33636	Resistor Spark Plug
	26073	Washer, Flat (Use as required)
35	650570	Washer, Flat (Use as required)
35	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650128	Screw, 10-24 x $1/2$ " (Use as required)
	650597	Screw, 10-24 x 5/8" (Use as required)
	27896A	* Gasket, Breather cover
	28423	Body, Breather
40	28424	Element, Breather

	Part Number Qt	
41	28425	Cover, Valve spring
43	32447	Tube, Breather
45	27915A	* Gasket, Intake
	34712	Flange, Carburetor (Incl. 60)
		•
	30196	Screw, 5/16-18 x 3/4"
	29918	Lockwasher
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used on early productio n)
	32326A	Lever, Governor (New lever does not need 1 of Ref
52	5252017	
		#49,51,53,54,132,133)
53	30322	Lock Nut, 8-32 (Use as required)
	29916	Clamp, Governor lever (Use as require d)
	30205	Bracket, Adjusting
	31710	Link, Throttle
58	29216	Locknut, 10-32
59	29752	Nut & Lockwasher, 1/4-28
	650517	Screw, 1/4-20 x 13/16"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63	30699B	Rod Assy., Governor (This one piece gov. rod is no longer
		used. It is replaced by 30699C assy., Ref.#63A)
634	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
66A	31297	Dipstick (Incl. 68)
68	29673	* Gasket, Dipstick
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876	Gasket, Stator
	29536	Baffle, Blower housing
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
81A	650152	Screw, 8-32 x 3/8"
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
81	650521	Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A	* Gasket, Air cleaner
	31708	Bracket, Air cleaner
	31715	Body, Air cleaner
69	730127	Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
		(Use as required)
98	31342	Compression Spring (Used with 650549 screw) (Use as
		required)
98	28569	Compression Spring (Used with 29500 screw)(Use as
		required)
QR	32924	Compression Spring (Used with 650688 screw) (Use as
50		required)
	650549	Screw, 5-40 x 7/16" (Use as required)
99	29500	Screw, 8-32 x 3/4" (Use as required)
	650688	Screw, 10-32 x 1 (Use as required)
	30884	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	31845	Shaft, Mechanical governor


		Description
107	30591	Gear Assy., Governor (Incl. 106)
108	30588A	Spool, Governor
109	29193	Ring, Retaining
111D	34158	Bracket, Lower fuel tank
	34159	Plate, Upper fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	650665	Screw, 1/4-15 x 3/4"
	34186A	Fuel Tank (Incl. 115 & 120)
	410144B	
		Fuel Cap (White Plastic)(Standard)(As req.)
115	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
		as required)
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
119	29774	Fuel Line (Braided 8.25") (Use as req uired)
119	30705	Fuel Line (Braided 16") (Use as requi red)
119	30962	Fuel Line (Braided 32") (Use as required)
120	26460	Clamp, Fuel line (Use as required)
	32401	Muffler
	27930A	* Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	
		Screw, 5/16-18 x 2"
	650548	Screw, 8-32 x 5/16" (Early production)
	650139	Screw, 8-32 x 1/2" (Early production)
	650542	Screw, 5/16-18 x 3/4"
	29538	Base, Engine mounting
	650128	Screw, 10-24 x 1/2"
	30622A	Extension, Blower housing
	27275	Clip, Wire (Use as required)
186	29443	Clip, Fuel line (Use as required)
193	610118	Cover, Spark plug
224	31386	Spring, Extension
	31726B	Control Bracket (Incl. 98, 99, 226 & 284A)
	610973	Terminal Assy.
	34235	Ground Wire
	29716	Screw, 1/4-28 x 7/16"
	32125	Cup, Starter
	590417	Screen, Starter cup
	650815	
		Washer, Belleville
	8116	Nut, Hex
298A		Decal, Instruction
	33310	Decal, 5 HP Mini-Bike (Use as require d)
	31517	Decal, H.P. (5 H.P.) (Use as required)
	32173	Decal, H.P. (6 H.P.) (Use as required)
	30547A	Contact Assy., Breaker
300	30548B	Condenser
301	631021	Inlet Needle, Seat & Clip Assy.
	632178	Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
		page 176 for breakdown)
304	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as

Ref # Pa	art Number	Qty	Description
306 59	90420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310 33	3235A		* Gasket Set (Incl. items marked *)

H60-75439L Engine Parts List #2

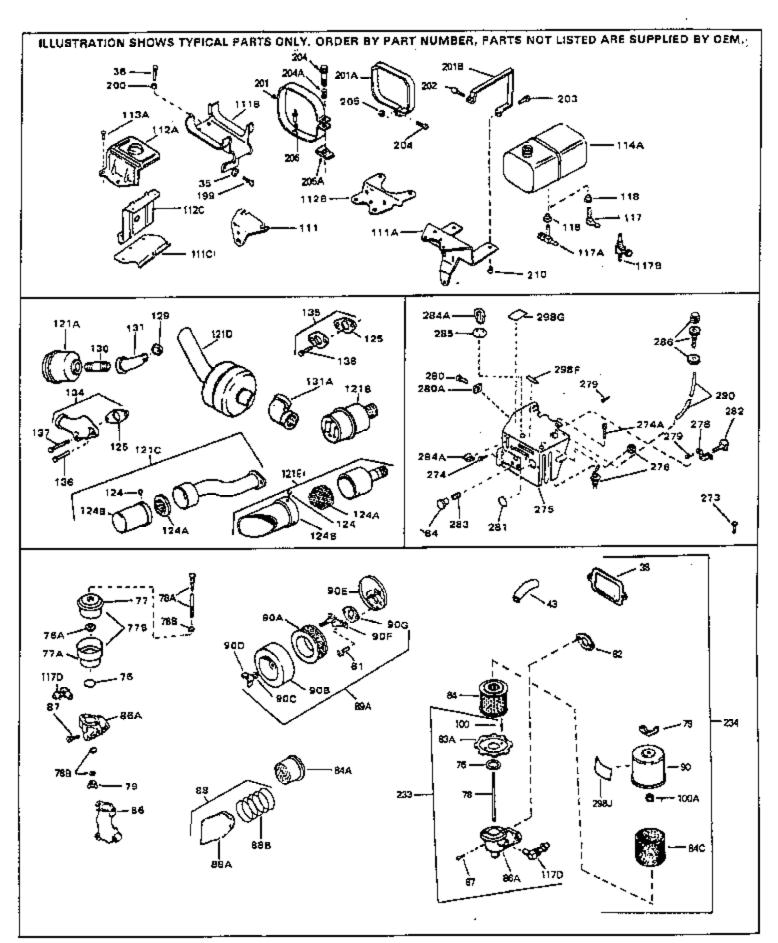

		Description
	26073	Washer, Flat (Use as required)
	650570	Washer, Flat (Use as required)
	650691	Washer, Flat (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	32447	Tube, Breather
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	28820	Screw, 10-32 x 1/2" (Use as required)
	650521	Screw, 10-32 x 1-1/8" (Use as require d)
	27272A	* Gasket, Air cleaner
	31700	Element, Air cleaner
	34697	Air Cleaner Elbow Assy.(Use in 730561 only.)
89A	730128	Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
		298B) (Use as req.)
113A	650665	Screw, 1/4-15 x 3/4"
	391026	Muffler (Incl. 124, 124A & 124B) (This spark arrester
	001020	mufflercan be used on any model)
4044	00474	
124A		Muffler Screen (Use as required)
	33185	Cover & Tube, Muffler (Use as require d)
	650578	Screw, 8-18 x 3/8"
	27930A	* Gasket, Exhaust
	31288	Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130	Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A 30196	Screw, 5/16-18 x 2-1/2" (Use as required)
		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819	Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in 730561 ass'y. only)
		730301 ass y. Only
234	730561	Air Cleaner Kit
		(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
		(Use only on engines with an externally ventedfully
		adjustable carburetor.)
272	650687	Screw, 10-32 x 5/16" (Use as required)
	32410	Knob, Speed control
2047	ULTIV	

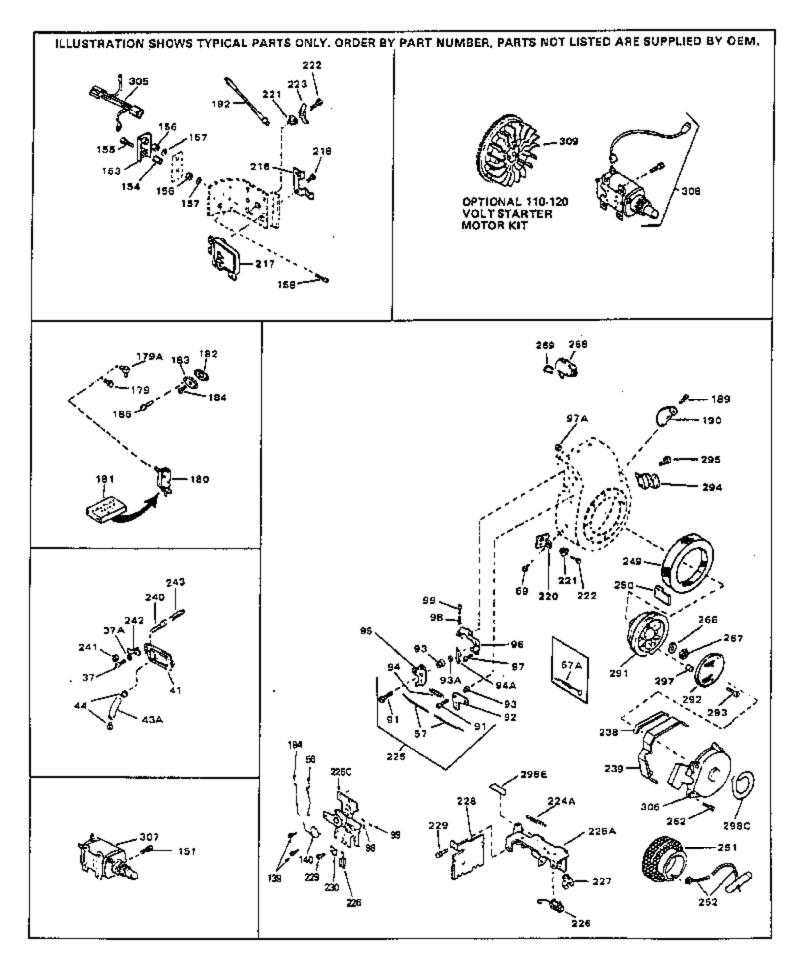

	Part Number	Qty	Description
	27261		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2" (Use as required)
	650597		Screw, 10-24 x 5/8" (Use as required)
	28425		Cover, Valve spring
	32446		Grommet, Breather tube
	31710		Link, Throttle
	29747B		Screw, 5/16-24 x 21/32"
98	31342		Compression Spring (Used with 650549 screw) (Use as required)
98	28569		Compression Spring (Used with 29500 screw)(Use as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	32683A		Gasket, Fuel pump cover (Use as required)
	32955		Cover, Fuel pump pad (Use as required)
184	9556		Plug, Pipe 1/8-27 (Use as required)
	30063		Screw, 1/4-20 x 1/2" (Use as required)
225	730152		Control Bracket(Incl.91 thru 97)(As r eq.)
226	610973		Terminal Assy.
227	33177		Terminal (Use as required)
262	29716		Screw, 1/4-28 x 7/16"
266	650815		Washer, Belleville
267	8116		Nut, Hex
	33018		Harness Assy., Adapter (Use as requir ed)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)