
H60-75447M Engine Parts List

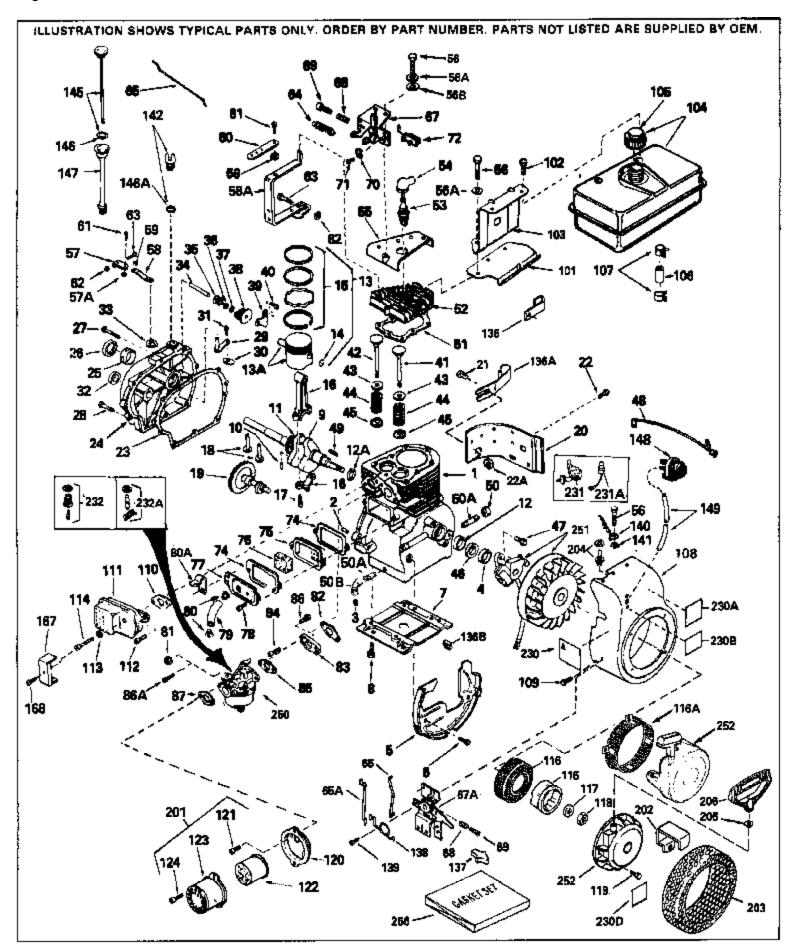

		Description
1	33311B	Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
2	27652	Pin, Dowel
	27642	Pipe plug, 1/4-18
	27876B	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knock out)
5	23000	(Use as required)
5	35256A	Blower Housing Baffle (With electric starter knockout) (As req.)(point ign.)
6	650561	Screw, 1/4-20 x 5/8"
	29538	Base, Engine mounting
	650542	Screw, 5/16-18 x 3/4"
	30799	Crankshaft
	29783	Pin, Crankshaft gear (Used on early p rod.)
11	27884	Gear, Crankshaft (Used on early production) This gear is serviceable ONLY when it is pinned to the crankshaft.
13A	33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
13A	33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532	Piston, Pin & Ring Set (.010" OS)
	34533	Piston, Pin & Ring Set (.020" OS)
		• • •
	27888	Ring, Piston pin retaining
	34854	Ring Set (Std.) (2-5/8" Bore)
15	34855	Ring Set (.010" OS)
15	34856	Ring Set (.020" OS)
16	31380C	Rod Assy., Connecting (Incl. 17)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	33156	Camshaft
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	650561	Screw, 1/4-20 x 5/8" (Use as required )
	30063	Screw, 1/4-20 x 1/2" (Use as required )
23	30684	Gasket Cylinder Cover
24	31303B	Cover, Cylinder (Incl. 26 & 34)
	31546	Bushing, Crankshaft
	28427	Seal, Oil
	650488	Screw, 1/4-20 x 1-1/4"
	650493	Screw, 1/4-20 x 1-3/4"
	30699C	Rod Assy., Governor (Incl. 30 & 31)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
33	29642	Ring, Retaining
34	31845	Shaft, Mechanical governor
35	30588A	Spool, Governor
	35479	Washer, Flat
	29193	Ring, Retaining
	30591	Gear Assy., Governor
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
41	32783	Intake Valve (Std.)
41	32784	Intake Valve (1/32" OS)
	27878A	Exhaust Valve (Std.)
42		
	27880A	Exhaust Valve (1/32" OS)
42	27880A 27882	Exhaust Valve (1/32" OS) Cap Upper valve spring
42 43	27880A 27882 27881	Exhaust Valve (1/32" OS) Cap, Upper valve spring Spring, valve

		Description
45	32581	Cap, Lower valve spring
46	33876	Gasket, Stator
47	650489	Screw, 1/4-20 x 5/8"
48	34240	Ground Wire
49	30884	Key, Flywheel
50	30969	Cap, Oil drain
	34171	Nipple, Oil drain, 1/4" x 5-1/2"
	28938C	Gasket, Cylinder head
	30938A	Head, Cylinder
	34251	Resistor Spark Plug (RJ-17LM)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A	
		Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650690	Washer, Belleville (Use as required)
	650691	Washer, Flat (Use as required)
	30322	Locknut, 8-32
	29916	Clamp, Governor lever (Use as require d)
	32326A	Lever, Governor
	29918	Washer, Lock, No. 8 E.T.
	30205	Bracket, Governor adjusting
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
63	29826	Screw, 10-32 x 3/4"
64	31386	Spring, Extension
65	30824	Link, Throttle
67	33108A	Control Assy., Remote Speed (Incl. 64 & 72)
70	27793	Clip, Conduit
71	28942	Screw, 10-32 x 3/8"
72	610973	Terminal Assy. (Use as required)
74	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	29752	Nut & Lockwasher, 1/4-28
	27915A	* Gasket, Intake pipe to cylinder
	30195A	Flange, Carburetor (Incl. 81 & 86)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650572	Screw, 1/4-28 x 1-1/8"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
101	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
104		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35052 of 542 to. Tariks with the $1-1/2$ " I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)

		Description
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
106	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
106	30962	Fuel Line (Braided, 32") (Use as required)
107	26460	Clamp, Fuel line (Use as required)
108	32158E	Blower Housing (For electric starter)
109	29747B	Screw, 5/16-24 x 21/32"
110	27930A	* Gasket, Exhaust flange
	32401	Muffler
	391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
	33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
	34390	Deflector, Exhaust (Optional)
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer, Flat
	650694A	Screw, 5/16 - 18 x 2"
	32125	Cup, Starter
	590417	
		Screen, Starter cup
	650815	Washer, Belleville
	8116	Nut, Hex
	29716	Screw, 1/4-28 x 7/16"
	32410	Knob, Speed control
	650578	Screw, 8-18 x 3/8" (Use as required)
	33171	Screen, Muffler (Use as required)
	33185	Cover & tube, Muffler (Use as require d)
	33323	Screen, Muffler (Use as required)
	33700	Cover & Tube, Muffler (Use as require d)
	31297	Dipstick (Incl. 146A)
	29673	* Gasket, Oil fill
	570629A	Primer Assy.
149	32180C	Line, Primer
150	34132	Plate, Choke indicator
151	34217	Cover, Carburetor
152	31291	Plug, Cover
153	650764	Nut, "U" Clip
	650760	Screw, 8-32 x 3/8"
	34126	Bracket, Grommet mounting
	650257	Screw, 8-32 x 5/16"
	650765	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	32398	Bracket, Choke
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	34127	Guard, Starter
	32576	Seal, Snow Guard
	32961	Valve, Fuel shut off
	730130	Muffler Adapter Kit (Incl.110,112)(As req.)
201	730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 a 230)(As req.)
201	730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)

	Part Number 730561	Qty Description Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230 (Used only on engine with an externally vented fully
230 230F 231 231A 232A 240 241 242 242 242 243 244	34144 34346 34416 34414 30547A 30548B 631021 611077 650868 611078 611079 590610 590613 631927	adjustable carburetor) Decal, Primer Decal, Instruction Decal, Instruction Decal, Warning Breaker Assy (Used on Std. Point igni tion) Condenser Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt .) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 140 for breakdown)
251	610964A	Magneto (w/ring gear for 120 volt starter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mountir bosses and a ring gear flywheel (see#255). Refer to servic number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used or solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)