


		Qty	Description (2.5 (2.5 (2.5 (2.5 (2.5 (2.5 (2.5 (2.5
	33311B		Cylinder (Incl. 2,3,4,5,184) (2-5/8" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain, 1/4-18
4	27876B		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	27881		, , , , , , ,
	32581		Spring, Valve
			Cap, Lower valve spring
	34606		Crankshaft (Incl. 12 & 13)
12	29783		Pin, Crankshaft gear Used in early production. This gear is
			serviceable ONLY when itis pinned to the crankshaft.
13	27884		Gear, Crankshaft Used in early production. This gear is
10	27007		serviceable ONLY when itis pinned to the crankshaft.
			Serviceable ONET when its pirited to the craning rant.
14	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
14	34532		Piston, Pin & Ring Set (.010" OS)
14	34533		Piston, Pin & Ring Set (.020" OS)
14A	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.16)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34854		Ring Set (Std.) (2-5/8" Bore)
	34855		Ring Set (.010" OS)
	34856		Ring Set (.020" OS)
	27888		
			Ring, Piston pin retaining
	31380C		Rod Assy., Connecting (Incl. 18)
	650662C		Screw, Connecting rod (Late productio n)
	30682		Bolt, Connecting rod (Early productio n)
	26073		Connecting rod bolt washer (Early pro duction)
	28264		Connecting rod nut (Used on early pro duction)
	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 27 & 105)
24	28427		Seal, Oil
26	30684		* Gasket, Cylinder cover
	31546		Bushing, Crankshaft
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	650489		Screw, 1/4-20 x 5/8"
	30939A		Cover, Cylinder head
	28938C		* Gasket, Cylinder head
	30938A		Head, Cylinder (Incl. 3 of 36)
	33636		Resistor Spark Plug
	26073		Washer, Flat (Use as required)
	650570		Washer, Flat (Use as required)
	650691		Washer, Flat (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	650128		Screw, 10-24 x 1/2" (Use as required)
37	650597		Screw, 10-24 x 5/8" (Use as required)
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	32447		Tube, Breather
	<u>V</u> _ 1 11		1 450, 5100 libi


Rof #	Part Number	Otv	Description
	27915A	Qty	* Gasket, Intake
			·
	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
	29918		Lockwasher
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used on early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of Ref
			#49,51,53,54,132,133)
50	00000		•
	30322		Lock Nut, 8-32 (Use as required)
	29916		Clamp, Governor lever (Use as require d)
	30205		Bracket, Adjusting
56	31710		Link, Throttle
58	29216		Locknut, 10-32
59	29752		Nut & Lockwasher, 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		Rod Assy., Governor (This one piece gov. rod is no longer
05	30099D		· · · · · · · · · · · · · · · · · · ·
			used. It is replaced by 30699C assy., Ref.#63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	34122A		Dipstick (Incl. 68)
	33951A		Oil Fill Tube
	33590		"O" Ring
	29747B		Screw, 5/16-24 x 21/32"
	32158E		•
			Blower Hsg. (For elec.starter)(Incl.1 89,190)
	33876		Gasket, Stator
	29536		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
81A	650152		Screw, 8-32 x 3/8"
	27272A		* Gasket, Air cleaner
	31691		Bracket, Air cleaner
	31715		Body, Air cleaner
	730127		Air Cleaner Ass'y. (Incl. 81,81A,82,83,84,85,90G & 298B)
00	100121		(Use as required)
			(Ose as required)
98	32924		Compression Spring (Used with 650688 screw) (Use as
			required)
00	04040		
98	31342		Compression Spring (Used with 650549 screw) (Use as
			required)
98	28569		Compression Spring (Used with 29500 screw)(Use as
00	20000		required)
			required)
99	650549		Screw, 5-40 x 7/16" (Use as required)
99	29500		Screw, 8-32 x 3/4" (Use as required)
	650688		Screw, 10-32 x 1 (Use as required)
	30884		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	31845		Shaft, Mechanical governor
	30590A		Washer, Flat
107	30591		Gear Assy., Governor (Incl. 106)

Ref #	Part Number	Otv	Description
	30588A	٠.,	Spool, Governor
	29193		Ring, Retaining
	34158		Bracket, Lower fuel tank
	34159		Plate, Upper fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34186A		Fuel Tank (Incl. 115 & 120)
	410144B		Fuel Cap (White Plastic)(Standard)(As req.)
	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
110	35032		
			as required)
115	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required)
110	29774		Fuel Line (Preided 9.25") (Lice as required)
	30705		Fuel Line (Braided 8.25") (Use as required)
	30962		Fuel Line (Braided 16") (Use as required)
			Fuel Line (Braided 32") (Use as required)
	26460		Clamp, Fuel line (Use as required) Muffler
	32401		
	34174		Deflector, Exhaust
	650665		Screw, 1/4-15 x 7/8" * Cooleat Fishered
	27930A		* Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16-18 x 2"
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 1/2" (Early production)
	650542		Screw, 5/16-18 x 3/4"
	29538		Base, Engine mounting
	650128		Screw, 10-24 x 1/2"
	30622A		Extension, Blower housing
	27275		Clip, Wire (Use as required)
	29443		Clip, Fuel line (Use as required)
	610118		Cover, Spark plug
	31386		Spring, Extension
	31711B		Control Bracket (Incl. 98, 99 & 226)
	610973		Terminal Assy.
	28942		Screw, 10-32 x 3/8"
	27793		Clip, Conduit
	34235		Ground Wire
	29716		Screw, 1/4-28 x 7/16"
	32125		Cup, Starter
	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	34612		Decal, Air Cleaner
	34607		Decal, Instruction
	33310		Decal, 5 HP Mini-Bike (Use as require d)
	31517		Decal, H.P. (5 H.P.) (Use as required)
	32173		Decal, H.P. (6 H.P.) (Use as required)
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
303	631828		Carburetor (Incl. 75 & 301) (Refer to Division 5, Section A,
			page 144 for breakdown)

	Part Number 610689A	Qty	Description Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference
			purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
306	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
310	33235A		* Gasket Set (Incl. items marked *)

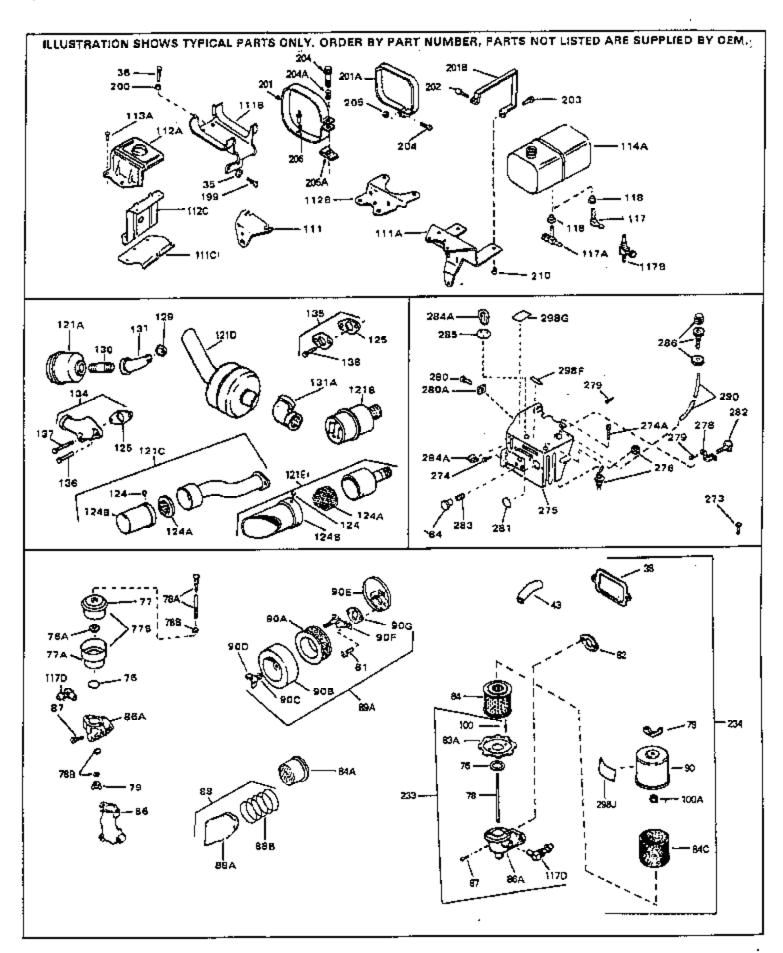

Ref #	Part Number	Qty	Description
35	26073		Washer, Flat (Use as required)
35	650570		Washer, Flat (Use as required)
35	650691		Washer, Flat (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
43	32447		Tube, Breather
81	30196		Screw, 5/16-18 x 3/4" (Use as require d)
81	28820		Screw, 10-32 x 1/2" (Use as required)
81	650521		Screw, 10-32 x 1-1/8" (Use as require d)
82	27272A		* Gasket, Air cleaner
84A	31700		Element, Air cleaner
	34609		Elbow, Air cleaner
	34697		Air Cleaner Elbow Assy.(Use in 730561 only.)
	650163		Screw, 10-32 x 7/8"
89A	730128		Air Cleaner Ass'y. (Incl. 82,90A,90B,90D thru 90G,97 &
			298B) (Use as req.)
117D	30675		Fitting, Breather tube
	391026		Muffler (Incl. 124, 124A & 124B) (This spark arrester
	00.020		mufflercan be used on any model)
1011	00474		
	33171		Muffler Screen (Use as required)
	33185		Cover & Tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8"
	27930A		* Gasket, Exhaust
	31288		Muf.Adapter Kit(Incl.125,136,137)(As req.)
	730130		Muf.Adapter Kit(Incl.125 & 138)(As re quired)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
233	34819		Air Cleaner Elbow (Incl.44,76,78,83A,86A,100)(Use in
			730561 ass'y. only)
234	730561		Air Cleaner Kit
			(Incl.38,43,44,76,78,79,82,83A,84,84C,86A,87,90,100A,233,29
			(Use only on engines with an externally ventedfully
			adjustable carburetor.)
272	650687		Screw, 10-32 x 5/16" (Use as required)
213	00001		(000 do roquilou)

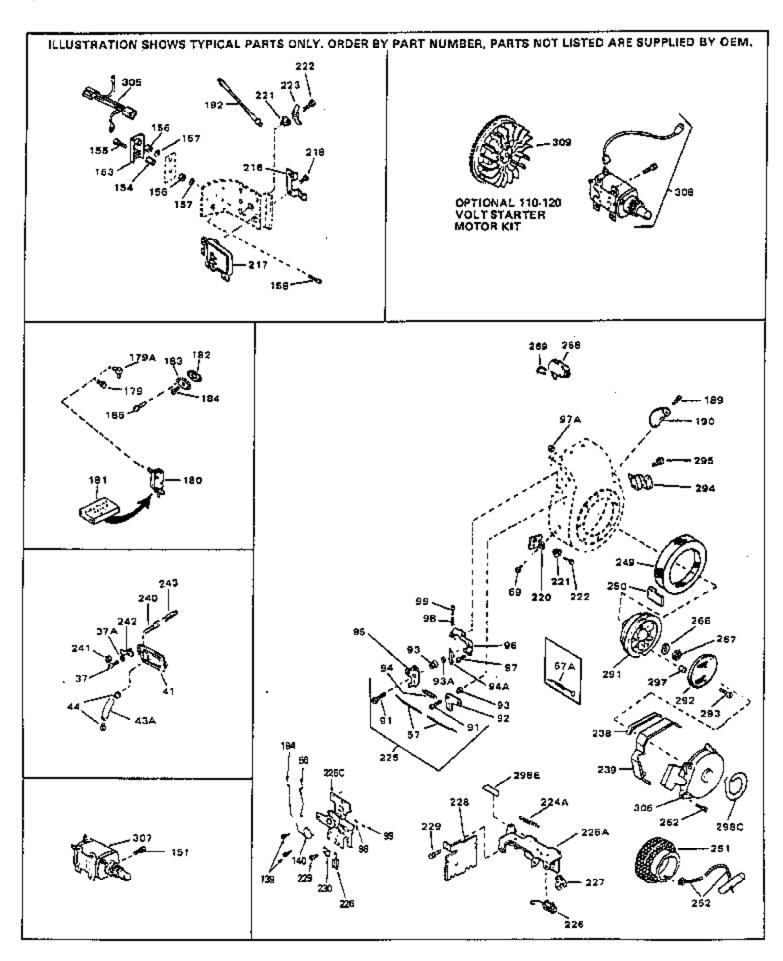

Ref #	Part Number	Qty	Description
37 37A 41 44 56 69 98	650128 650597 27261 28425 32446 31710 29747B 32924		Screw, 10-24 x 1/2" (Use as required) Screw, 10-24 x 5/8" (Use as required) Washer, Flat (Use as required) Cover, Valve spring Grommet, Breather tube Link, Throttle Screw, 5/16-24 x 21/32" Compression Spring (Used with 650688 screw) (Use as required)
	31342 28569		Compression Spring (Used with 650549 screw) (Use as required) Compression Spring (Used with 29500 screw)(Use as required)
99 99 182 183 184 185 225 226 227 229 230 262 266 267 305	650549 29500 650688 32683A 32955 9556 30063 730152 610973 33177 28942 27793 29716 650815 8116 33018 590420		Screw, 5-40 x 7/16" (Use as required) Screw, 8-32 x 3/4" (Use as required) Screw, 10-32 x 1 (Use as required) Gasket, Fuel pump cover (Use as required) Cover, Fuel pump pad (Use as required) Plug, Pipe 1/8-27 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Control Bracket(Incl.91 thru 97)(As r eq.) Terminal Assy. Terminal (Use as required) Screw, 10-32 x 3/8" Clip, Conduit Screw, 1/4-28 x 7/16" Washer, Belleville Nut, Hex Harness Assy., Adapter (Use as requir ed) Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
308	33328D		Starter Motor Kit (110-120 Volt) NOTE: This 110-120 volt starter motor kit may have been added to this engine. This can be added only if cylinder has drilled and tapped starter mounting bosses and a ring gear flywheel has been added (see #309). Refer to service number stamped on end cap of motor,
309	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above.)