

1		Qty	Description Cylinder (Incl. 2, 3, 4 & 41)(2-5/8" Bore)
	27652		Pin, Dowel
3	27642		Pipe plug, 1/4-18
4	27876B		Seal, Oil
5	29536		Blower Housing Baffle (Without electric starter knock out)
			(Use as required)
5	35256A		Blower Housing Baffle (With electric starter knockout) (As
_			req.)(point ign.)
6	650561		Screw, 1/4-20 x 5/8"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
	31856A		Crankshaft
	29783		
			Pin, Crankshaft gear (Used on early p rod.)
11	27884		Gear, Crankshaft (Used on early production) This gear is
			serviceable ONLY when it is pinned to the crankshaft.
	34531		Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532		Piston, Pin & Ring Set (.010" OS)
	34533		Piston, Pin & Ring Set (.020" OS)
	33312B		Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
	33313B		Piston & Pin Ass'y. (.010" OS) (Incl. 14)
13A	33314B		Piston & Pin Ass'y. (.020" OS) (Incl. 14)
14	27888		Ring, Piston pin retaining
15	34854		Ring Set (Std.) (2-5/8" Bore)
15	34855		Ring Set (.010" OS)
15	34856		Ring Set (.020" OS)
16	31380C		Rod Assy., Connecting (Incl. 17)
	650662C		Bolt, Connecting rod (Incl. 2 pieces)
	34034		Lifter, Valve
	30622A		Extension, Blower housing
	650128		Screw, 10-24 x 1/2"
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063		Screw, 1/4-20 x 1/2" (Use as required )
	30684		Gasket Cylinder Cover
	31303B		Cover, Cylinder (Incl. 26 & 34)
	31546		Bushing, Crankshaft
	28427		Seal, Oil
	650488		Screw, 1/4-20 x 1-1/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30699C		Rod Assy., Governor (Incl. 30 & 31)
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29642		Ring, Retaining
	31845		Shaft, Mechanical governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
	30591		Gear Assy., Governor
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	32783		·
			Intake Valve (Std.)
	32784 37878 A		Intake Valve (1/32" OS) Exhaust Valve (Std.)
	27878A		Exhaust Valve (Std.)
	27880A		Exhaust Valve (1/32" OS)
	27882		Cap, Upper valve spring
	27881		Spring, valve
45	32581		Cap, Lower valve spring

	5 (1)	<u> </u>
		Description
	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
	34240	Ground Wire
	30884	Key, Flywheel
50A	30968	Nipple, Oil drain 1/4" x 2-1/2"
50	30969	Cap, Oil drain
51	28938C	Gasket, Cylinder head
52	30938A	Head, Cylinder
	34251	Resistor Spark Plug (RJ-17LM)
	610118	Cover, Spark plug (Use as required)
	30939A	Cover Assy., Cylinder head
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650690	Washer, Belleville (Use as required)
	650691	Washer, Flat (Use as required)
	30322	Locknut, 8-32
	29916	Clamp, Governor lever (Use as require d)
	33454	Lever Assy., Governor
	29918	Washer, Lock, No. 8 E.T.
	650548	Screw, 8-32 x 5/16"
	29216	Locknut, 10-32
63	29826	Screw, 10-32 x 3/4"
65A	34661	Link, Governor
65	34662	Link, Throttle
67A	34664	Control Bracket (Incl. 68, 69, 72 & 1 38)
68	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
	27272A	* Air Cleaner Gasket (Use as required)
	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
101	24450	Dragket Fuel took
	34158 650665	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
103	00002	required)
		iequiieu)

Ref #	Part Number	Qtv	Description
	34210	ربد	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
105	35355		Fuel Cap (Red plastic) (Use as requir ed)
	29774		Fuel Line (Braided, 8 1/4") (Use as required)
	30962		
			Fuel Line (Braided, 32") (Use as required)
	26460		Clamp, Fuel line (Use as required)
	32158E		Blower Housing (For electric starter)
	29747B		Screw, 5/16-24 x 21/32"
	27930A		* Gasket, Exhaust flange
111	32401		Muffler
111C	391026		Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
111D	33714		Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
111E	34390		Deflector, Exhaust (Optional)
112	30196		Screw, 5/16-18 x 3/4"
	26073		Washer, Flat
	650694A		Screw, 5/16 - 18 x 2"
	32125		Cup, Starter
	590417		Screen, Starter cup
	650815		Washer, Belleville
	8116		Nut, Hex
	29716		Screw, 1/4-28 x 7/16"
	35438		
			Knob, Speed control
	34663		Spring, Speed control
	650821		Screw, 10-32 x 1/2"
	33171		Screen, Muffler (Use as required)
	33185		Cover & tube, Muffler (Use as require d)
	650578		Screw, 8-18 x 3/8" (Use as required)
	33700		Cover & Tube, Muffler (Use as require d)
	33323		Screen, Muffler (Use as required)
	34011A		Dipstick (Incl. 146)
146	33590		"O" Ring
147	33893A		Oil Fill Tube
148A	570629A		Primer Assy.
149	32180C		Line, Primer
151	34672		Cover, Carburetor
153	650764		Nut, "U" Clip
	650760		Screw, 8-32 x 3/8"
	34126		Bracket, Grommet mounting
	650257		Screw, 8-32 x 5/16"
	650765		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	32398		Bracket, Choke
	650760		Screw, 8-32 x 3/8"
	28545		·
	265 <del>4</del> 5 31680		Grommet, Plastic
			Guard, Starter
	32576		Seal, Snow Guard
	33013		Cover, Starter bubble
	650760		Screw, 8-32 x 3/8"
	34174		Deflector, Exhaust
	650665		Screw, 1/4-15 x 7/8"
	32961		Valve, Fuel shut off
201	730164		Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
			230)(As req.)
2∩1	730164		Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
201			(Use as required)
			(OCC GO TOQUILOG)

Ref #	Part Number	Qty	Description
201B	730561		Air Cleaner Kit (Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C) (Used only on engine with an externally vented fully adjustable carburetor)
230 230F 230B 230E 231A 231 232A 240 241 242 242 243 244	730130 34416 34414 34417 34418 30548B 30547A 631021 611077 650868 611078 611079 590610 590613 631927		Muffler Adapter Kit (Incl.110,112)(As req.) Decal, Instruction Decal, Warning Decal, Primer Decal, Choke Condenser Breaker Assy (Used on Std. Point igni tion) Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt.) Connector, A.C. Lighting (Optional) Connector, D.C. Charging (Optional) Tube, Centering (Optional) Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page
251	610964A		140 for breakdown)  Magneto (w/ring gear for 120 volt sta rter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
252	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
254	33328D		Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A		Gasket Set (Incl. items marked*)