
H60-75473M Engine Parts List

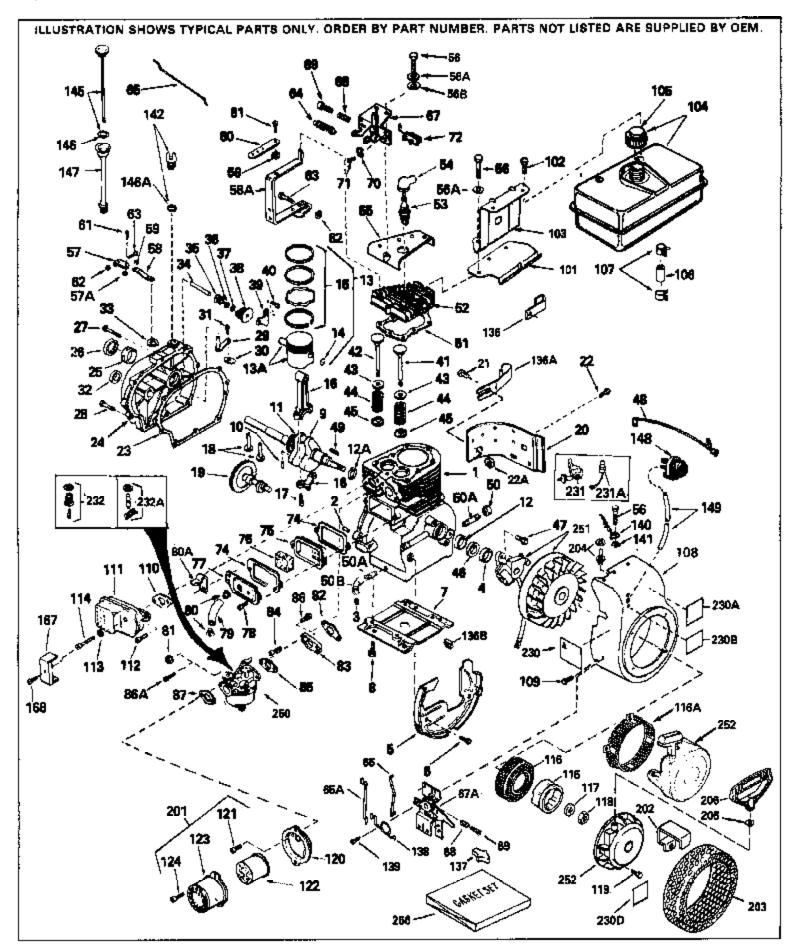

Ref #	Part Number Qty	Description
1	34919A	Cylinder (Incl. 2,3 & 4) (2-5/8" Bore)
2	27652	Pin, Dowel
	27642	Pipe plug, 1/4-18
	32630	Seal, Oil
5	29536	Blower Housing Baffle (Without electric starter knock out)
		(Use as required)
5	35256A	Blower Housing Baffle (With electric starter knockout) (As
		req.)(point ign.)
	650561 29538	Screw, 1/4-20 x 5/8"
		Base, Engine mounting
	650542	Screw, 5/16-18 x 3/4"
	34872	Crankshaft
10	29783	Pin, Crankshaft gear (Used on early p rod.)
11	27884	Gear, Crankshaft (Used on early production) This gear is
		serviceable ONLY when it is pinned to the crankshaft.
	33312B	Piston & Pin Ass'y. (Std.)(2-5/8")(In cl.14)
13A	33313B	Piston & Pin Ass'y. (.010" OS) (Incl. 14)
	33314B	Piston & Pin Ass'y. (.020" OS) (Incl. 14)
	34531	Piston, Pin & Ring Set (Std.) (2-5/8" Bore)
	34532	Piston, Pin & Ring Set (.010" OS)
	34533	Piston, Pin & Ring Set (.020" OS)
		,
	27888	Ring, Piston pin retaining
	34854	Ring Set (Std.) (2-5/8" Bore)
15	34855	Ring Set (.010" OS)
15	34856	Ring Set (.020" OS)
16	31380C	Rod Assy., Connecting (Incl. 17)
	650662C	Bolt, Connecting rod (Incl. 2 pieces)
	34034	Lifter, Valve
	30622A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	30684	Gasket Cylinder Cover
24	31303B	Cover, Cylinder (Incl. 26 & 34)
25	31546	Bushing, Crankshaft
	28427	Seal, Oil
	650488	Screw, 1/4-20 x 1-1/4"
	650493	Screw, 1/4-20 x 1-3/4"
	30699C	Rod Assy., Governor (Incl. 30 & 31)
	30700	•
		Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29642	Ring, Retaining
	31845	Shaft, Mechanical governor
35	30588A	Spool, Governor
36	35479	Washer, Flat
	29193	Ring, Retaining
	30591	Gear Assy., Governor
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	32783	Intake Valve (Std.)
	32784	Intake Valve (1/32" OS)
42	27878A	Exhaust Valve (Std.)
42	27880A	Exhaust Valve (1/32" OS)
43	2/002	
	27882 27881	Cap, Upper valve spring Spring, valve

	Part Number Qty	
	33876	Gasket, Stator
	650489	Screw, 1/4-20 x 5/8"
49	32589	Key, Flywheel
51	28938C	Gasket, Cylinder head
52	30938A	Head, Cylinder
	34251	Resistor Spark Plug (RJ-17LM)
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	30939A	Cover Assy., Cylinder head
	650690	
		Washer, Belleville (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650691	Washer, Flat (Use as required)
	30322	Locknut, 8-32
	29916	Clamp, Governor lever (Use as require d)
58A	32326A	Lever, Governor
59	29918	Washer, Lock, No. 8 E.T.
60	30205	Bracket, Governor adjusting
61	650548	Screw, 8-32 x 5/16"
62	29216	Locknut, 10-32
	29826	Screw, 10-32 x 3/4"
	31710	Link, Throttle
	610973	Terminal Assy. (Use as required)
	27896A	Gasket, Valve chamber cover
	28423	Breather Assy., Valve
	28424	Element, Breather
	28425	
		Cover, Valve spring box
	650128	Screw, 10-24 x 1/2"
	35350	Tube Breather
	27915A	* Gasket, Intake pipe to cylinder
	34712	Flange, Carburetor (Incl. 86A)
	30196	Screw, 5/16-18 x 3/4"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 13/16"
87	27272A	* Air Cleaner Gasket (Use as required)
87	30767	Spacer, Cleaner (Use as required)
94A	34819	Elbow Assy., Air cleaner (Incl. 90,91,92,93,94,96) (Use in
		730561 assembly only)
404	04450	
	34158	Bracket, Fuel tank
	650665	Screw, 1/4-14 x 7/8"
	34159	Plate, Fuel tank mounting
104	34186A	Fuel Tank (Incl. 105 & 107) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
105	4404440	Fuel Car (M/hite Blactic)/Otd)/(Ac reg uired)
	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
105	33032	Fuel Cap (Red Plastic) (Spurt resistant, Low profile) (Use as
		required)
105	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
100		required)
105	35355	Fuel Cap (Red plastic) (Use as requir ed)
106	30962	Fuel Line (Braided, 32") (Use as required)
	29774	Fuel Line (Braided, 8 1/4") (Use as r equired)
	26460	Clamp, Fuel line (Use as required)
	32158E	Blower Housing (For electric starter)
100		

109 29747B 110 27930A 111 22401	$Sorow = E/16 0.1 \times 0.1/20"$
	Screw, 5/16-24 x 21/32"
111 22/01	* Gasket, Exhaust flange
111 32401	Muffler
111D 33714	Opt.Spark Arrest Muf.(Incl.112,143,14 4,144A)
111E 34390	Deflector, Exhaust (Optional)
111C 391026	Opt.Spark Arrest Muf.(Incl.143,143A,1 43B)
112 30196	Screw, 5/16-18 x 3/4"
113 26073	Washer, Flat
114 650694A	Screw, 5/16 - 18 x 2"
115 32125	Cup, Starter
116 35009	Screen, Starter cup
117 650815	Washer, Belleville
118 8116	Nut, Hex
119 29716	Screw, 1/4-28 x 7/16"
120 31691	Bracket, Air cleaner
121 28820	Screw, 10-32 x 1/2"
122 30727	Element, Air cleaner
123 31715	Body, Air cleaner
124 650152	Screw, 8-32 x 3/8"
131 30845A	Bolt, Governor spring adjusting
132 33450	Nut, 10-32 Lock
133 30886A	Spring, Extension
140 30747	Clip, Spark plug shorting
141 650890	Lockwasher, Shakeproof, 5/16
143A 33171	Screen, Muffler (Use as required)
143B 33185	Cover & tube, Muffler (Use as require d)
143 650578	Screw, 8-18 x 3/8" (Use as required)
144 33700	Cover & Tube, Muffler (Use as require d)
144A 33323	Screen, Muffler (Use as required)
145 31297	Dipstick (Incl. 146A)
146A 29673	* Gasket, Oil fill
160 650760	Screw, 8-32 x 3/8"
161A 33356	Terminal, Ground
161 28545	Grommet, Plastic
178 650597	Screw, 10-24 x 5/8"
179	Lock Washer, #10 Heavy Split (Buy loc ally)
180 32328	Bracket, Speed adjusting
201A 730130	Muffler Adapter Kit (Incl.110,112)(As req.)
201 730164	Air Cleaner Ass'y. (Red Poly)(Incl.87,120,121,122,123,124 &
	230)(As req.)
201 730164	Air Cleaner Kit, Mini bike (Incl.87,120,121,122,123 & 124)
201 730104	
	(Use as required)
201B 730561	Air Cleaner Kit
	(Incl.74,79,80,87,88,89,90,91,92,94,95,96,97,99,100 & 230C)
	(Used only on engine with an externally vented fully
	adjustable carburetor)
	• ,
230 34346	Decal, Instruction
230 550223	Decal, Name
	Condenser
231A 30548B	Breaker Assy (Used on Std. Point igni tion)
231A 30548B 231 30547A	
231A 30548B 231 30547A 232A 631021	Inlet, Needle Seat & Clip Assy.
231A 30548B 231 30547A 232A 631021 240 611077	Inlet, Needle Seat & Clip Assy. Alternator (Optional)
231A 30548B 231 30547A 232A 631021 240 611077 241 650868	Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt .)
231A 30548B 231 30547A 232A 631021 240 611077 241 650868 242 611078	Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt .) Connector, A.C. Lighting (Optional)
231A 30548B 231 30547A 232A 631021 240 611077 241 650868	Inlet, Needle Seat & Clip Assy. Alternator (Optional) Screw, 8-18 x 1-1/8" (3 required)(Opt .)

		Qty Description
	590613 632230	Alternator Shaft (Optional) Carburetor (Incl. 85) (Refer to Division 5, Section A, Page 182 for breakdown)
251	611038	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
252	590420A	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
254	33328D	Starter Motor Kit (110-120 volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#255). Refer to service number stamped on end cap of motor or on decal for identificat
255	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition before 1982)
255	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter motor kits listed above) (Used on Std. point ignition 1982 or later)
255	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter motor kits listed above) (Used on solid state external ignition)
256	33235A	Gasket Set (Incl. items marked*)