



Def #	Dort N. mah ar	<u> </u>	Description
	Part Number 32586C	Qty	Description Odinder (Incl. 2, 3, 4, 8, 76) (2, 3/4" Pere)
			Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
7A	20810		Pin, Valve spring retainer (Use as re quired)
A8	27881		Spring, Valve
8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
9A	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
10	27001		servicable onlywhen it is pinned to the crankshaft.
14Δ	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034_		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
24	28427		Seal, Oil
25	31297		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
28	650488		Screw, 1/4-20 x 1-1/4"
30	29673		* Gasket, Oil filler
31	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		• • • •
			Resistor Spark Plug * Gasket Broather cover
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
42	26073		Washer (Use as required)

-			
Ref #	Part Number	Qty	Description
42	650691		Washer, Flat (Use as required)
42A	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
47	30196		Screw, 5/16-18 x 3/4"
48	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
	32326A		
52	32320A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
FF	30205		Proglect Adjusting
			Bracket, Adjusting
	31710		Link, Throttle
59	29216		Nut, Lock, 10-32
60	650152		Screw, 8-32 x 3/8"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
CO A	200000		Ded Asser Courses (led C4 9 C5)
	30699C		Rod Assy., Governor (Incl. 64 & 65)
64	30700		Yoke, Governor
65	650494		Screw, 6-40 x 5/16"
66	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
70	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
71	650815		Washer, Belleville
	8116		Nut, Hex
	29536		Blower Housing Baffle (without electric starter knock-out)
73	29330		·
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
73	30230A		, , , , , , , , , , , , , , , , , , , ,
			as required) (Point Ignition)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		
			* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
80	650572		Screw, 1/4-28 x 1-1/8"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
			(Use as required)
			,
83	27272A		* Gasket, Air cleaner
87	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
-			early production only.
			carry production only.
88	28820		Screw, 10-32 x 1/2"
	30727		Element, Air cleaner
	31715		
			Body, Air cleaner
	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
100	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
109	30590A		Washer, Flat
	29193		Ring, Retaining
	650561		Screw, 1/4-20 x 5/8"
	33350		Fuel Tank (Incl. 115 & 117A)
115	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)

Ref #	Part Number Qty	Description
	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
	00002	(Use as required)
445	0.404.0	,
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
115	35355	Fuel Cap (Use as required)
117	33395	Fitting, Fuel strainer & elbow (Incl. 119)
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	33679	Bushing, Fuel fitting
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	650890	Lockwasher
	610118	Cover, Spark plug (Use as required)
	650561	
	30939A	Screw, 1/4-20 x 5/8" (Use as required)
	32125	Cover, Cylinder head
	590417	Cup, Starter
	26460	Screen, Starter cup
		Clamp, Fuel line
	31461 31711B	Bushing, Crankshaft (Use as required)
	31711B 610073	Copntrol Bracket (Incl. 98, 99 & 274)
	610973	Terminal Ass'y. (As req. on late prod uction)
	34043	Spring, Control lever
	27275	Clip, Hi-tension wire (Use as require d)
	34246	Clip, Ground wire (Use as required)
	31752	Decal, Air cleaner
	550223	Decal, Name
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
336	631453	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
		for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show
		in parts list. (Refer to Division 5, Section B, page 24 for
		breakdown)
റ്റവ	500/20	
330	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
	000004	,
343	33239A	Gasket Set (Incl. items marked*)

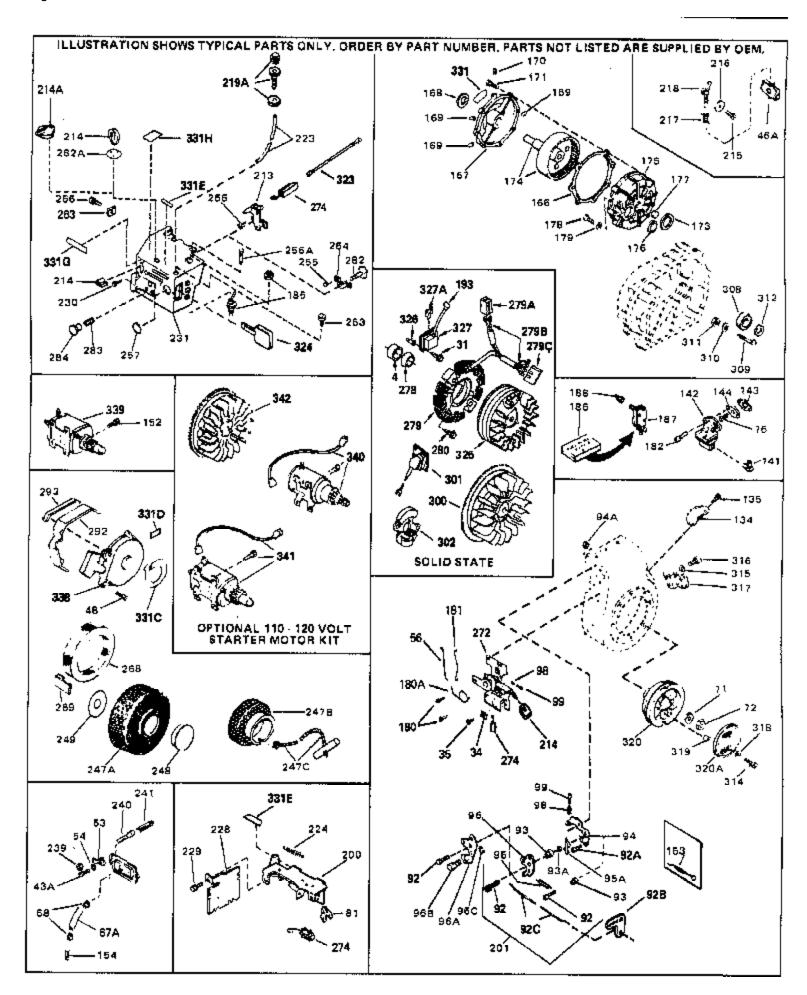

Ref #	Part Number	Qtv	Description
	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
193	610118		Cover, Spark plug (Use as required)
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	550223		Decal, Name
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

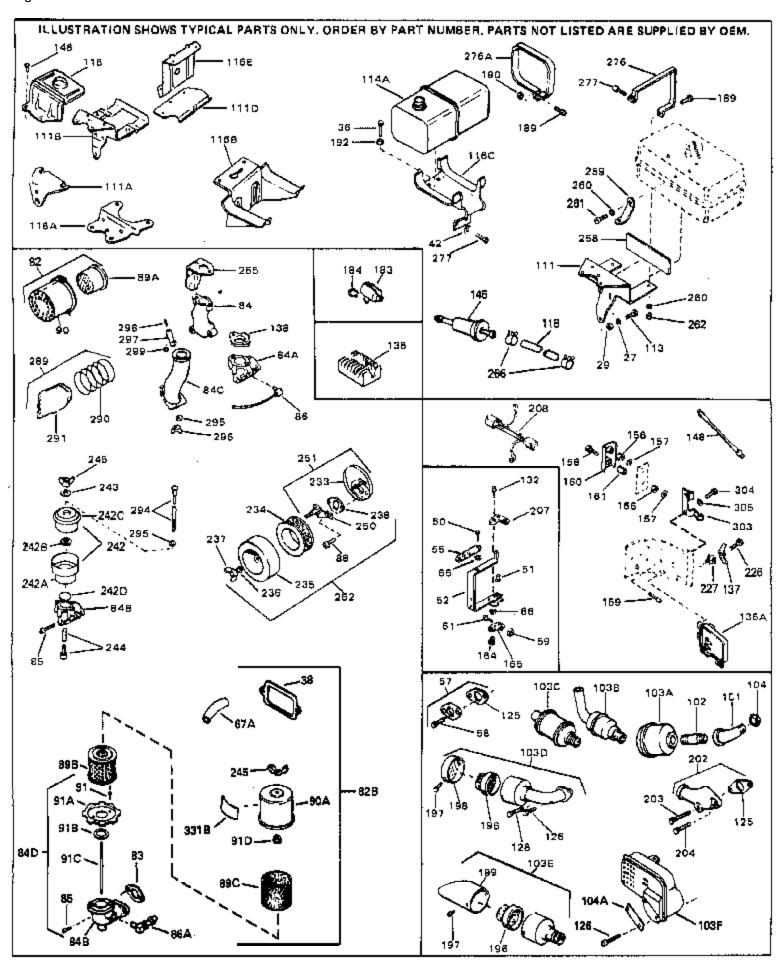

Ref #	Part Number	Qty	Description
	27513		Lockwasher, 1/4" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
59	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
66	29918		Lockwasher, #8 E.T.
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
	28820		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	33353		Bracket, Lower fuel tank
	650561		Screw, 1/4-20 x 5/8"
	33352A		Plate, Upper fuel tank mounting
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4" Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	792020 34067		Screw, 1/4-20 x 2-1/4" Wire Assy. Alternator adapter (4 1/4 ")
	34067		Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ")
	34069 31288		
	650697A		Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	26460		Clamp, Fuel line
	31752		Decal, Air cleaner
3310	017 <i>0</i> 2		Dodai, Ali Geallei