



	Part Number	Qty	Description Description
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
10/1	32330		34242 oil dipper but 650662C screw must be used.)
			54242 oil dipper but 050002C screw must be used.)
10	34242		Dipper, Oil
11	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
	27884		Gear, Crankshaft (Used in early production) This gear is
.0	2.00.		servicable onlywhen it is pinned to the crankshaft.
			, ,
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		,
			Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		•
			Element, Breather
	28425		Cover, Valve spring
42	26073		Washer (Use as required)

Ref #	Part Number C	ty Description
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	·
		* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
48	29716	Screw, 1/4-28 x 7/16"
50	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	31710	Link, Throttle
		·
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
72	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
70	252564	Player Hayaina Poffla (with alactric starter (read) out) (Haa
13	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
02/1	750104	(Use as required)
		,
	27272A	* Gasket, Air cleaner
87	31914	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
88	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	30831	Ground Wire (Incl. 137)
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	29538	Base, Engine mounting
103	32401	Muffler
106	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
		9
	650561	Screw, 1/4-20 x 5/8"  First Cap (M/hite Bleetie) (Stal) (Ap regulating)
115	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)

Ref #	Part Number	Qtv	Description
	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128		Screw, 10-24 x 1/2" (Use as required)
	30622A		Extension, Blower housing
	650542		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30939A		Cover, Cylinder head
	650760		Screw, 8-32 x 3/8"
	28545		Grommet
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	31711B		Copntrol Bracket (Incl. 98, 99 & 274)
	610973		Terminal Ass'y. (As req. on late prod uction)
	34043		Spring, Control lever
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	31752		Decal, Air cleaner
	550223		Decal, Name
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
000	301100		for breakdown)
337	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

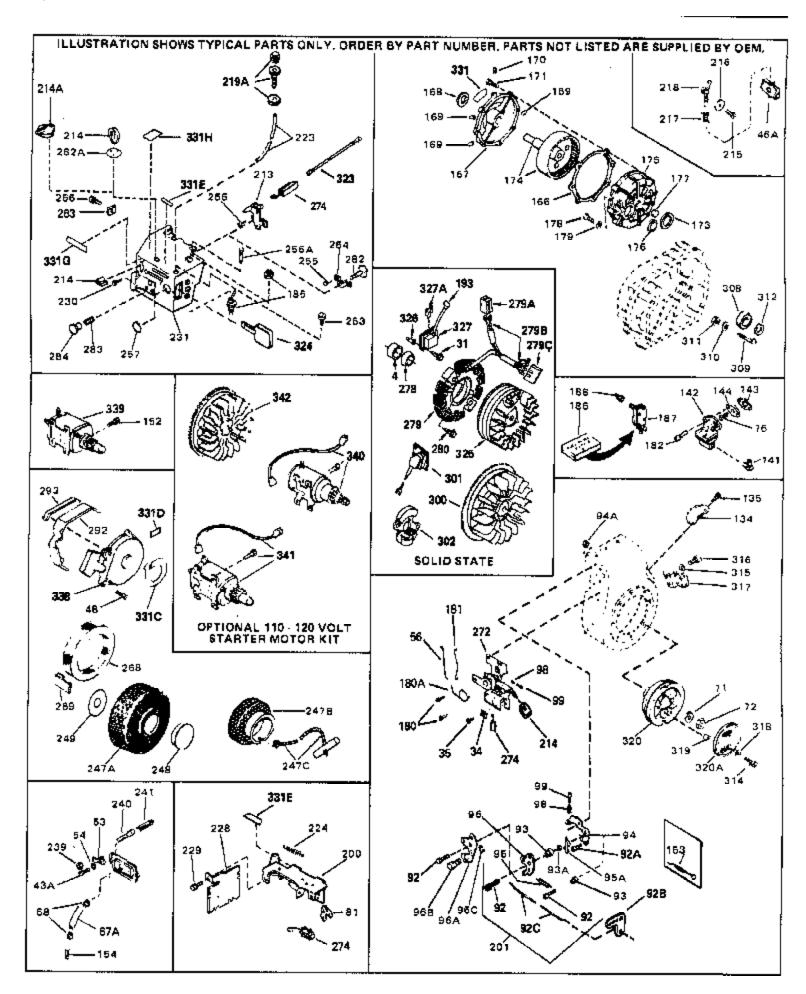

Ref #	Part Number	Qtv	Description
	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
193	610118		Cover, Spark plug (Use as required)
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	550223		Decal, Name
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

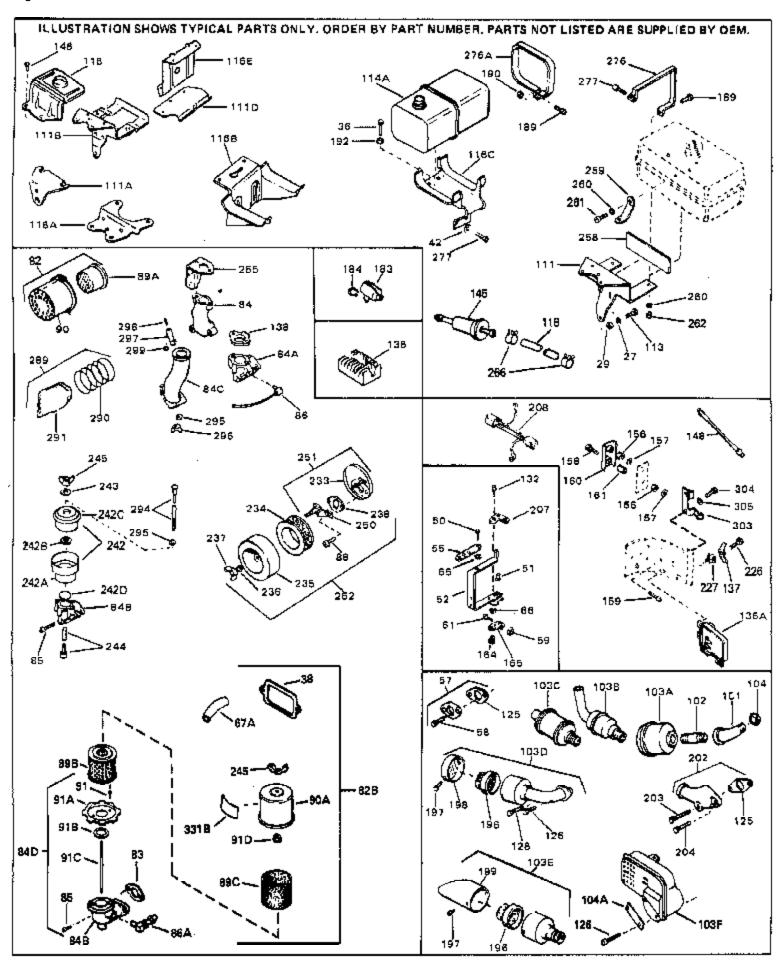

Ref #	Part Number	Qtv	Description
	27513		Lockwasher, 1/4" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
52	32320A		
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
OZD	750501		
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
83	27272A		* Gasket, Air cleaner
	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
040	3 <del>1</del> 019		
			in 730561 assembly only)
88	28820		Screw, 10-32 x 1/2"
90	31715		Body, Air cleaner
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A		Screw, 5/16-18 x 2" (Use as required)
132	650548		Screw, 8-32 x 5/16" (Early production )
137	33356		Terminal
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	31288		
			Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650760		Screw, 8-32 x 3/8"
	28545		Grommet
233	32380		Bracket, Air cleaner (Early Prod. Onl y)
	30804		Air Cleaner Element (Early Prod. Only )
	30805		Air Cleaner Cover (Early Prod. Only)
	31481		Washer, Fiber (Early Production Only)
	650513		Nut, Wing (Early Production Only)
	30767		Spacer, Air cleaner
	32376		Air Cleaner Bracket (Early Production Only)
251	30803		Air Cleaner Bracket Kit (Incl. 88, 233, 238 & 250) (Early
			Production Only)
050	720420		• /
252	730128		Air Cleaner Ass'y. (Incl. 83, 88, 233, 234, 235, 237, 238, 250
			& 321B) (Early Production Only)
266	26460		Clamp, Fuel line
	31752		Decal, Air cleaner
33.2			,