


1 2 3 4 5 5 6 6 7 7A 8A 8 9A 9	Part Number 32586C 27652 27642 32630 32783 32784 27878A 27880A 27882 20810 27881 27881 32581 32581 32590	Qty	Description Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore) Pin, Dowel Plug, Oil drain Seal, Oil Intake Valve (Std.) (Incl. 9) Intake Valve (1/32" OS) (Incl. 9) Exhaust Valve (Std.) (Incl. 9) Exhaust Valve (1/32" OS) (Incl. 9) Cap, Upper valve spring Pin, Valve spring retainer (Use as re quired) Spring, Valve Spring, Valve Cap, Lower valve spring Plate, Lock & Oil dipper (This plate may be replaced by 34242 oil dipper but 650662C screw must be used.) Dipper, Oil
12	32670 29783 27884		Crankshaft (Incl. 12 & 13) Crankshaft Gear Pin (Early production) Gear, Crankshaft (Used in early production) This gear is servicable onlywhen it is pinned to the crankshaft.
14A 14A 14 14 15 15 15 16 17 18 21 22 23 24B 24 25 26 28 30 31 32 33 34 35 36 36	32592B 32593B 32594B 34517 34518 34519 32595 32596 32597 27888 32591C 650662C 32115 34034 31303B 31546 28427 29668 30684 650488 29673 650489 32631A 30938A 27793 28942 650697A 650695A 650694A		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16) Piston & Pin Ass'y. (.010" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston & Pin Ass'y. (.020" OS) (Incl. 16) Piston, Pin & Ring Set (Std.) (2-3/4" Bore) Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Ring Set (Std.) (2-3/4" Bore) Ring Set (.010" OS) Ring Set (.020" OS) Ring, Piston pin retaining Rod Assy., Connecting (Incl. 10 & 18) Screw, Connecting rod (2 each) Camshaft (MCR) Lifter, Valve Cover, Cylinder (Incl. 24, 106 & 279) Bushing, Crankshaft (Use as required) Seal, Oil Dipstick, Oil (Incl. 30) * Gasket, Cylinder cover Screw, 1/4-20 x 1-1/4" * Gasket, Oil filler Screw, 1/4-20 x 5/8" * Gasket, Cylinder Clip, Conduit (Use as required) Screw, 10-32 x 3/8" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 2-1/4" (Use as required) Screw, 5/16-18 x 2-1/4" (Use as required) Screw, 5/16-18 x 2-1/4" (Use as required)
37 38 39 40 41	33636 34251 27896A 28423 28424 28425 650690		Resistor Spark Plug (RJ-8C) Resistor Spark Plug * Gasket, Breather cover Body, Breather Element, Breather Cover, Valve spring Washer, Belleville (Use as required)

42	Part Number 26073	Qty	Description Washer (Use as required)
	650691		Washer, Flat (Use as required)
43	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
			• , , ,
	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
50	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
32	02020/ (51,66,132,164,165,207)
			31,00,132,104,103,207)
55	30205		Bracket, Adjusting
	31710		Link, Throttle
	29216		Nut, Lock, 10-32
	650152		Screw, 8-32 x 3/8"
61	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
C4	20700		Valsa Causanan
	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
66	29918		Lockwasher, #8 E.T.
67	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		
			Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
72	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
			,
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
			as required) (Point Ignition)
7/	650561		Screw, 1/4-20 x 5/8"
			·
	31688A		* Gasket, Carburetor
79	29752		Nut & Lockwasher Assy., 1/4-28
80	650572		Screw, 1/4-28 x 1-1/8"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
<u></u>			(Use as required)
83	27272A		* Gasket, Air cleaner
	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
0.	0.001		early production only.
			early production only.
88	28820		Screw, 10-32 x 1/2"
	30727		Element, Air cleaner
	31715		Body, Air cleaner
	31582		Ground Wire
	29538		Base, Engine mounting
106	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
113	650561		Screw, 1/4-20 x 5/8"
114	31301		Fuel Tank (Incl. 115)
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
. 10	- · · · -		

Ref #	Part Number	Qty	Description
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
117	28584		Fitting, Fuel strainer & elbow
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
127	26073		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	27275		Clip, Hi-tension wire (Use as require d)
	34246 34346		Clip, Ground wire (Use as required)
	31752		Decal, Instruction Decal, Air cleaner
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
330	051405		for breakdown)
337	610694A		Magneto (w/ring gear for 110 volt sta rter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

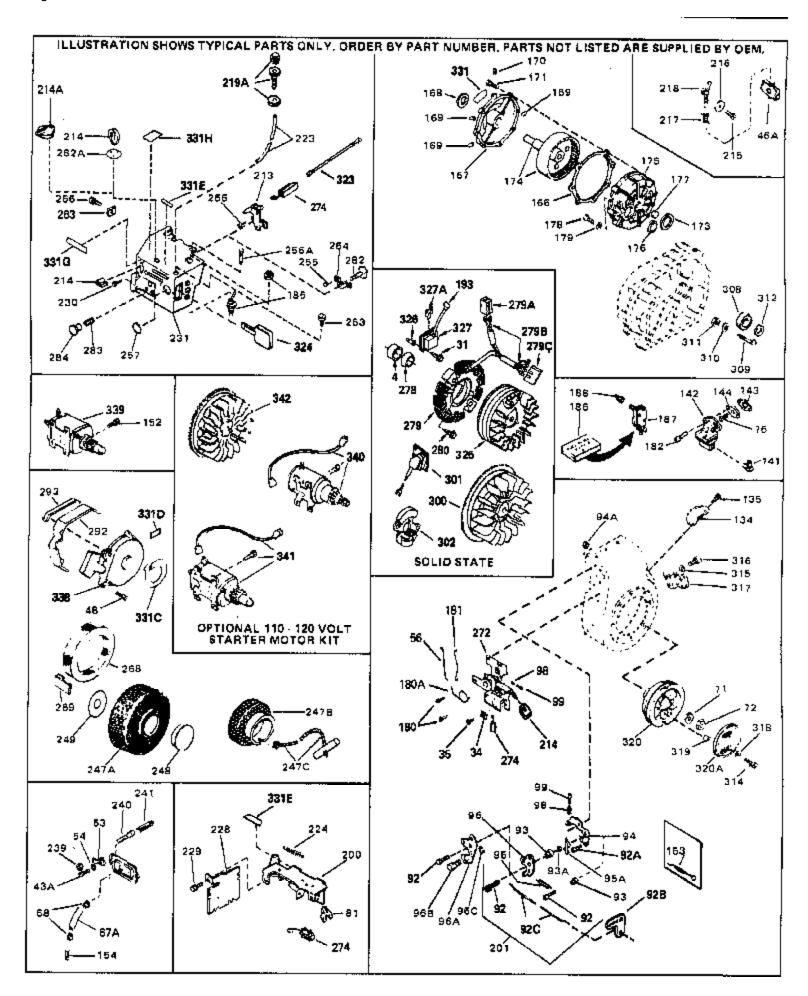

Ref #	Part Number C	Description	
31	650489	Screw, 1/4-20 x 5/8"	
34	27793	Clip, Conduit (Use as required)	
35	28942	Screw, 10-32 x 3/8" (Use as required)	
43A	650128	Screw, 10-24 x 1/2"	
48	29716	Screw, 1/4-28 x 7/16"	
56	31710	Link, Throttle	
71	650815	Washer, Belleville	
72	8116	Nut, Hex	
152	30063	Screw, 1/4-20 x 1/2"	
193	610118	Cover, Spark plug (Use as required)	
193	27276	Cover, Spark plug	
239	33450	Nut, Lock	
	30845A	Bolt, Governor adjusting	
	30886A	Spring, Governor bolt	
	650764	Nut, "U" Type (Use as required)	
	610973	Terminal Ass'y. (As req. on late prod uction)	
338	590420	Rewind Starter (Refer to Division 5, Section C, pa	ge 25 for
		breakdown)	
339	35765A	Electric Starter Motor (12 Volt) NOTE: The 2996 32468B, 33606, 35765 and 35765A startermotors interchangeably on these models. Refer to service stamped on end cap of motor, or on decal, for identification of the composition of the compositio	are used e number
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt motor kit may have been added to this engine. It added only if cylinder hasdrilled and tapped starte bosses and a ring gear flywheel (see#342). Refer number stamped on end cap of motor, or on decaidentifica	can be er mounting to service
342	30811A	Flywheel (Ring gear flywheel requiredon engines 110-120 volt starter kits listed above)	using
342	611042	Flywheel (Used on Type letters H and above) (Stignition) (Ring gear flywheel required on engines of 110-120 volt starter kits listed above)	
342	611085	Flywheel (Minimum ring gear flywheel required or using 110-120 volt starter kits listed above) (Use State ignition)	



Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
57	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
66	29918		Lockwasher, #8 E.T.
	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
92	27272A		* Gasket, Air cleaner
	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
04D	34019		in 730561 assembly only)
QQ	28820		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	29574		Muffler Elbow
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862		Conduit Nut
	31694		Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	650139		Screw, 8-32 x 3/10 (Larry production) Screw, 8-32 x 1/2"
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	6201		Screw, 1/4-28 x 7/8"
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	31725A		Extension, Governor lever
	29752		Nut, Lock
	26460		Clamp, Fuel line
	31697		Strap, Fuel tank
	29212		Screw, Hex hd. Sems, 1/4-28 x 7/16
	31752		Decal, Air cleaner
3316	01702		Doda, All Gloui loi