



Ref #	Part Number	Otv	Description
	32586C	٠.,	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
			·
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
8	27881		Spring, Valve
A8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
9A	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
40	0.40.40		,
	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (0.10" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (3.0.1) (2-3/4 Bore)
	32597		Ring Set (.010 'OS)
			• · · · · · · · · · · · · · · · · · · ·
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
24B	31546		Bushing, Crankshaft (Use as required)
25	29668		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
28	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
42	26073		Washer (Use as required)

	Part Number	Qty	Description
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)
47	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
	32326A		Lever, Governor (New lever does not need 1 of
52	02020/ C		51,66,132,164,165,207)
			01,00,102,104,100,201)
55	30205		Bracket, Adjusting
56	30824		Link, Throttle
59	29216		Nut, Lock, 10-32
60	650152		Screw, 8-32 x 3/8"
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
00	30033B		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
			used. It is replaced by 30033C assy., incl. 110. 03A)
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
64	30700		Yoke, Governor
65	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
. •	33_33.		as required) (Point Ignition)
			, , , ,
	650561		Screw, 1/4-20 x 5/8"
75	31688A		* Gasket, Carburetor
79	29752		Nut & Lockwasher Assy., 1/4-28
80	650572		Screw, 1/4-28 x 1-1/8"
82A	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
			(Use as required)
00	070704		
	27272A		* Gasket, Air cleaner
87	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
			early production only.
88	650521		Screw, 10-32 x 1-1/8"
	30727		Element, Air cleaner
	31715		Body, Air cleaner
	31902		Ground Wire
	31757		Base, Engine mounting
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
109	30590A		Washer, Flat
110	29193		Ring, Retaining
113	30063		Screw, 1/4-20 x 1/2"
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
			(Use as required)
			Y 1/

Ref #	Part Number Qty	Description
	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
115	35355	Fuel Cap (Use as required)
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
127	26073	Washer (Use as required)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
129	32589	Key, Flywheel
130	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
133	650493	Screw, 1/4-20 x 1-3/4"
149	30747	Clip, Shorting
193	610118	Cover, Spark plug (Use as required)
205	650561	Screw, 1/4-20 x 5/8" (Use as required)
209	30939A	Cover, Cylinder head
246	32125	Cup, Starter
247	590417	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	27275	Clip, Hi-tension wire (Use as require d)
	34246	Clip, Ground wire (Use as required)
	31752	Decal, Air cleaner
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
336	631454	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
		for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as show
		in parts list. (Refer to Division 5, Section B, page 24 for
		breakdown)
330	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
330	UUUTEU	breakdown)
		,
343	33239A	Gasket Set (Incl. items marked*)

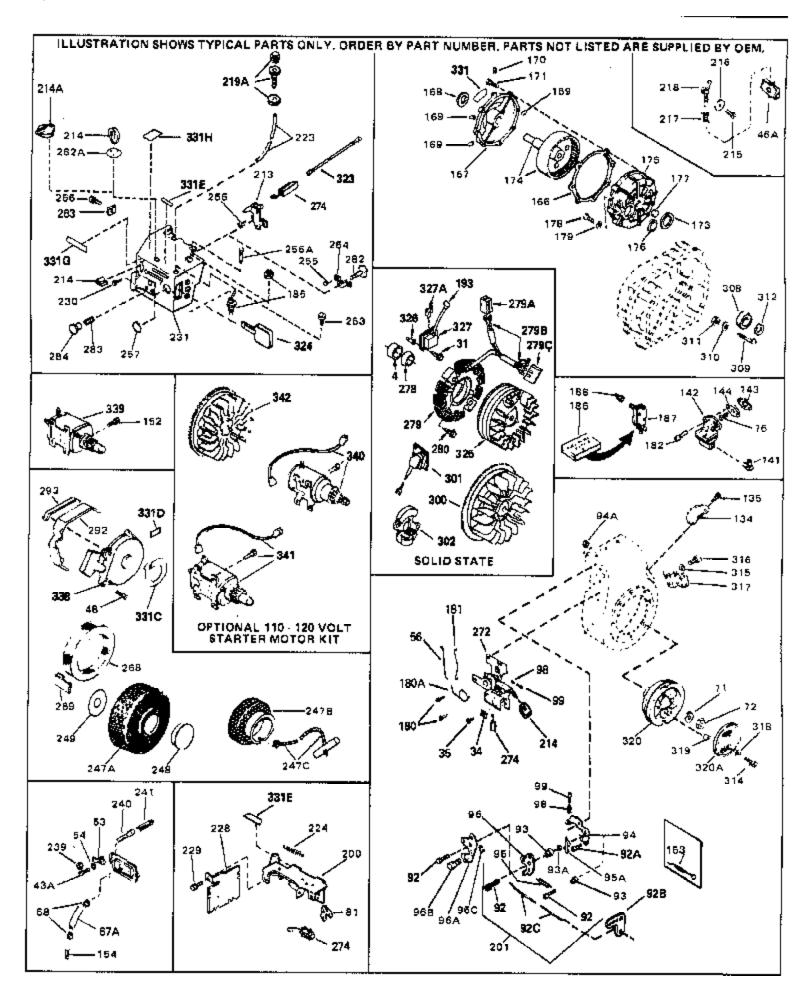

Ref #	Part Number	Otv	Description
	650489	٠.,	Screw, 1/4-20 x 5/8"
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	30824		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
193	610118		Cover, Spark plug (Use as required)
200	33110A		Control Bracket (Incl. 224 & 274)
224	30826		Spring, Extension
228	30820		Baffle, Heat
	28942		Screw, 10-32 x 3/8"
	650764		Nut, "U" Type (Use as required)
	32203		Air cleaner, Starter
	32204		Bracket, Starter air cleaner
	610973		Terminal Ass'y. (As req. on late prod uction)
	32179		Decal, "Super Start"
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

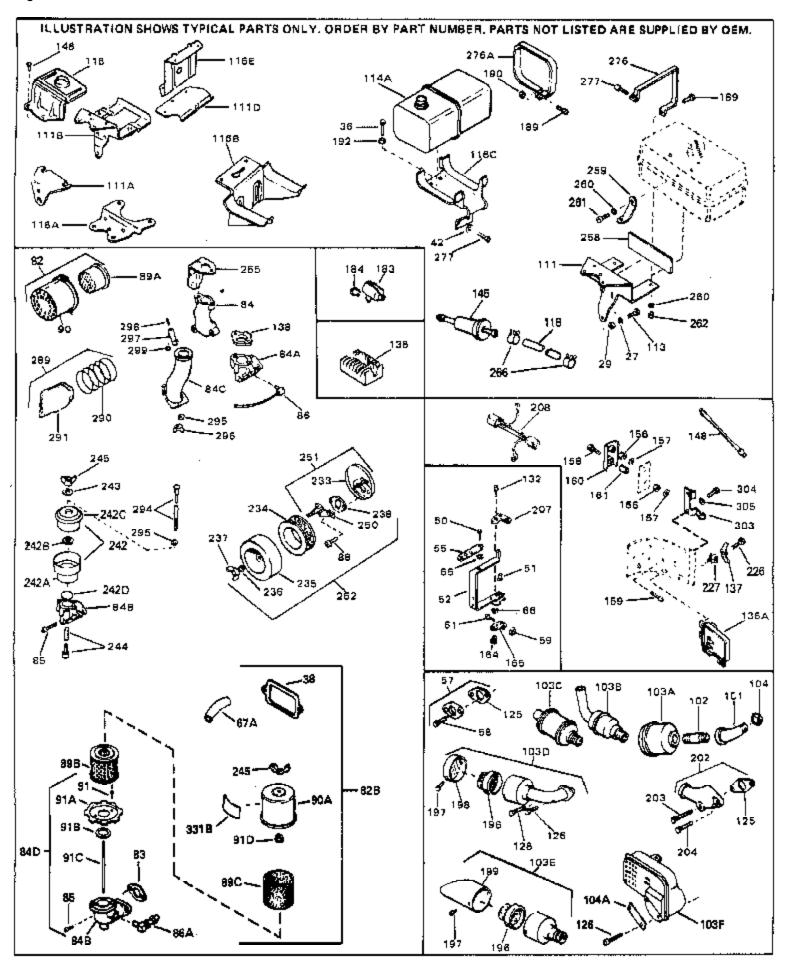

Ref #	Part Number	ty Descrip	ation
	27513		asher, 1/4" (Use as required)
	650697A		5/16-18 x 2-1/2" (Use as requi red)
	650695A		5/16-18 x 2-1/4" (Use as required)
	650694A		• • •
			5/16-18 x 2" (Use as required)
	27896A		et, Breather cover
	26073		r (Use as required)
	650691		r, Flat (Use as required)
	650548	•	8-32 x 5/16"
51	30319		Split (Used in early productio n)
52	32326A	Lever, C	Governor (New lever does not need 1 of
		51,66,1	32,164,165,207)
55	30205	Bracket	t, Adjusting
	730130		ap.Kit (Incl. 58 & 125) (Use as req.)
	30196		5/16-18 x 3/4" (Use as require d)
	29216		• • •
			ck, 10-32
	29826		10-32 x 3/4"
	29918		sher, #8 E.T.
82B	730561		ner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			IB, 91C, 91D, 245 & 331B) (Use only on engines with
		an exte	mally vented fully adjustable carburetor)
82	730127	Air Clea	aner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
02			Use as required)
	070704	, ,	
	27272A		et, Air cleaner
	31431		Air cleaner
84D	34819		aner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 7305	61 assembly only)
85	650163	Screw,	10-32 x 7/8"
88	650521		10-32 x 1-1/8"
	31715		Air cleaner
	29574	Muffler	
	391026		park Arrest Muffler (Incl.196,1 97,199)
	31506	Muffler	AIR 7 (1105) (1110). 150, 1 57, 155)
	28443	Conduit	· Nl. +
			••
_	32862	Conduit	- · · - <del>-</del>
	30063		1/4-20 x 1/2"
	29774		ne (Braided 8-1/4" 21 cm)(Use as req.)
	30705		ne (Braided 16") (41 cm) (Use as req.)
	30962		ne (Braided 32") (81 cm) (Use as req.)
	650694A		5/16-18 x 2" (Use as required)
	650548		8-32 x 5/16" (Early production )
138	30936	Flange,	Air cleaner
148	34067	Wire As	ssy., Alternator adapter (4-1/4 ")
148	34069		ssy., Alternator adapter (6-3/4 ")
	31288		daptor Kit (Incl.125,203,204) ( As req.)
	650697A		5/16-18 x 2-1/2" (Use as requi red)
	6021A		5/16-18 x 1-1/2" (Use as requi red)
	26460		Fuel line
	730512		-cleaner (Incl 290 & 291)
	31667		Pre-cleaner bag
	31668		rie-cleaner re-cleaner
	31752	•	e-cleaner Air cleaner
3310	01102	D <del>o</del> cai, /	THE GIGGIE