
H70-130050A Engine Parts List #1

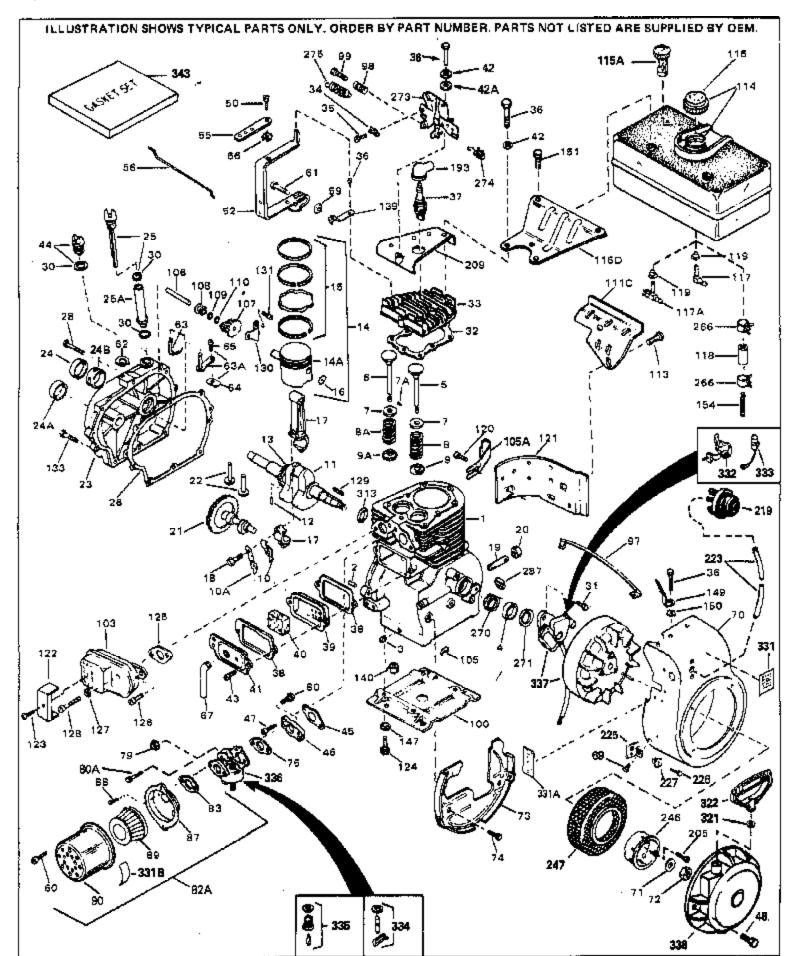

Ref #	Part Number	Qtv	Description
1			Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
-	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		
			Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
9A	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
1/1	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		
			Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
24	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		
			Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
39	28423		Body, Breather
40	28424		Element, Breather
41	28425		Cover, Valve spring
	26073		Washer (Use as required)
			x I 177

		Description
42	650691	Washer, Flat (Use as required)
42A	650690	Washer, Belleville (Use as required)
43	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205	Bracket, Adjusting
56	31710	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	
		Ring, Retaining
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longe
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter knock-out)
75	25550	(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
0ZA	730104	(Use as required)
83	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
01		early production only.
00	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	35349	Ground Wire
98	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	29538	Base, Engine mounting
	31845	•
		Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
109	30590A	Washer, Flat
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
		FUEL Lank (Incl. 115 x. 1174)
114	33350 410144B	Fuel Tank (Incl. 115 & 117A) Fuel Cap (White Plastic)(Std)(As requ ired)

		Qty Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355	Fuel Cap (Use as required)
	33395	Fitting, Fuel strainer & elbow (Incl. 119)
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	33679	Bushing, Fuel fitting
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	650890	Lockwasher
	610118	Cover, Spark plug (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30939A	Cover, Cylinder head
	650760	Screw, 8-32 x 3/8"
	28545	Grommet
	32125	Cup, Starter
	590417	Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
	31711B	Copntrol Bracket (Incl. 98, 99 & 274)
	610973	Terminal Ass'y. (As req. on late prod uction)
	34043	Spring, Control lever
	27275	Clip, Hi-tension wire (Use as require d)
	34246	Clip, Ground wire (Use as required)
	550223	Decal, Name
	31752	Decal, Air cleaner
	34346	Decal, Instruction
	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
336	631661	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)



	,	Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	9556	Plug, Pipe, 1/8-27
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)



Ref #	Part Number C	Qty Description
	27513	Lockwasher, 1/4" (Use as required)
	650697A	Screw, $5/16-18 \times 2-1/2$ " (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	
		Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
66	29918	Lockwasher, #8 E.T.
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
-		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
02	27272A	* Gasket, Air cleaner
04D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	30209	Elbow, Exhaust (45 degree)
103E	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
103A	29633	Muffler
104	28443	Conduit Nut
104	32862	Conduit Nut
	33353	Bracket, Lower fuel tank
	650561	Screw, 1/4-20 x 5/8"
	33352A	Plate, Upper fuel tank mounting
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 0-1/4 21 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	
		Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	33356	
	792020	Screw, 1/4-20 x 2-1/4"
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
203	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
204	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650760	Screw, 8-32 x 3/8"
	28545	Grommet
	26460	Clamp, Fuel line
	31752	Decal, Air cleaner
		,