
H70-130051 Engine Parts List #1

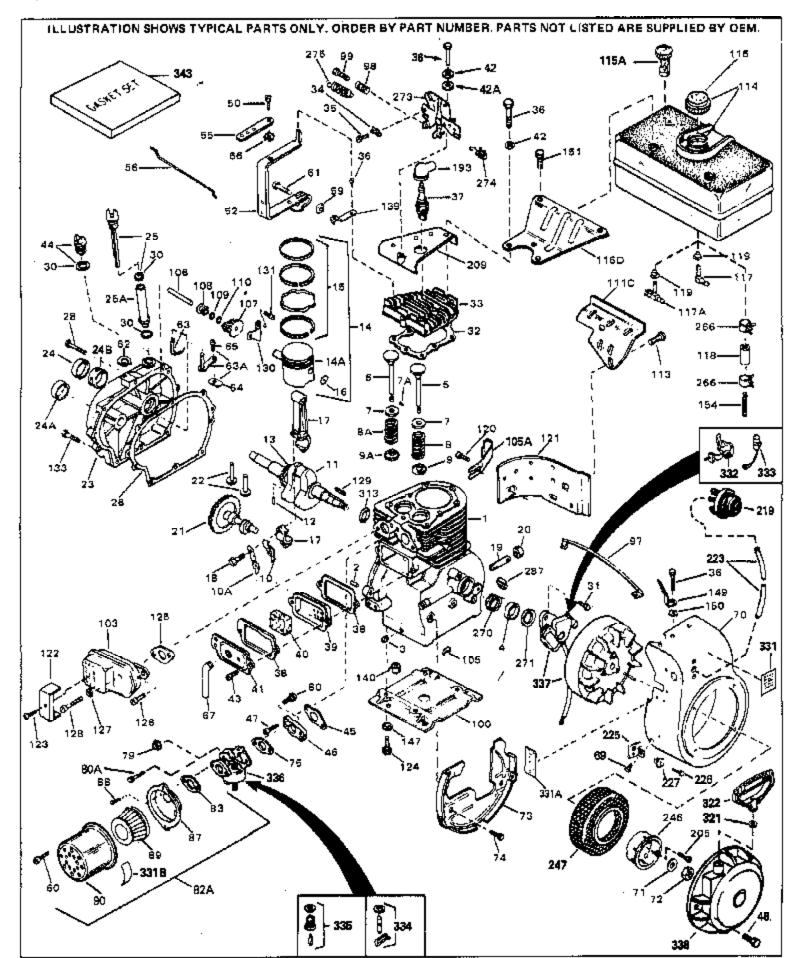


Ref #	Part Number Qty	Description
1	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652	Pin, Dowel
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
5	32784	Intake Valve (1/32" OS) (Incl. 9)
6	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	27882	Cap, Upper valve spring
	20810	
		Pin, Valve spring retainer (Use as re quired)
	27881	Spring, Valve
	27881	Spring, Valve
9	32581	Cap, Lower valve spring
9A	32581	Cap, Lower valve spring
	32590	Plate, Lock & Oil dipper (This plate may be replaced by
10/1	02000	
		34242 oil dipper but 650662C screw must be used.)
10	34242	Dipper, Oil
	32773	Crankshaft (Incl. 12 & 13)
	29783	Crankshaft Gear Pin (Early production)
13	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
140	20500D	Diaton & Dia Apoly (Std.)(2.2/4")(In al.16)
	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34517	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518	Piston, Pin & Ring Set (.010" OS)
	34519	Piston, Pin & Ring Set (.020" OS)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
16	27888	Ring, Piston pin retaining
17	32591C	Rod Assy., Connecting (Incl. 10 & 18)
18	650662C	Screw, Connecting rod (2 each)
	32115	Camshaft (MCR)
	34034	Lifter, Valve
	31451A	Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	31546	Bushing, Crankshaft (Use as required)
24	28460	Seal, Oil
25	31297	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
	29673	* Gasket, Oil filler
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
33	30938A	Head, Cylinder
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
37	33636	Resistor Spark Plug (RJ-8C)
37	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
		•
	28424	Element, Breather
	28425	Cover, Valve spring
42	26073	Washer (Use as required)

		ty Description
42	650691	Washer, Flat (Use as required)
42A	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Brocket Adjusting
		Bracket, Adjusting
	31710	Link, Throttle
	29216	Nut, Lock, 10-32
60	650152	Screw, 8-32 x 3/8"
61	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
	000002	used. It is replaced by 30699C ass'y.,Ref. no. 63A)
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
72	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
00	07070	* Cooket Air deeper
	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
00	28820	Sorow 10.22 x 1/2"
		Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
98	28569	Spring, Compression
99	29500	Screw, 8-32 x 3/4"
	29538	Base, Engine mounting
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
113	650561	Screw, 1/4-20 x 5/8"
114	31301	Fuel Tank (Incl. 115)
	410144B	Fuel Cap (White Plastic)(Std)(As required)
115		r der Cap (rr rine r lasno/(Stu)(As required)

		/ Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355	Fuel Cap (Use as required)
117	28584	Fitting, Fuel strainer & elbow
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	650890	Lockwasher
	610118	Cover, Spark plug (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30939A 32125	Cover, Cylinder head
	590417	Cup, Starter Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
	31711B	Copntrol Bracket (Incl. 98, 99 & 274)
	610973	Terminal Ass'y. (As req. on late prod uction)
	34043	Spring, Control lever
	27275	Clip, Hi-tension wire (Use as require d)
	34246	Clip, Ground wire (Use as required)
	550223	Decal, Name
	31752	Decal, Air cleaner
331A	34346	Decal, Instruction
332	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
336	631453	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)



Ref #	Part Number Qty	Description
31	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	31792	Washer, Thrust
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

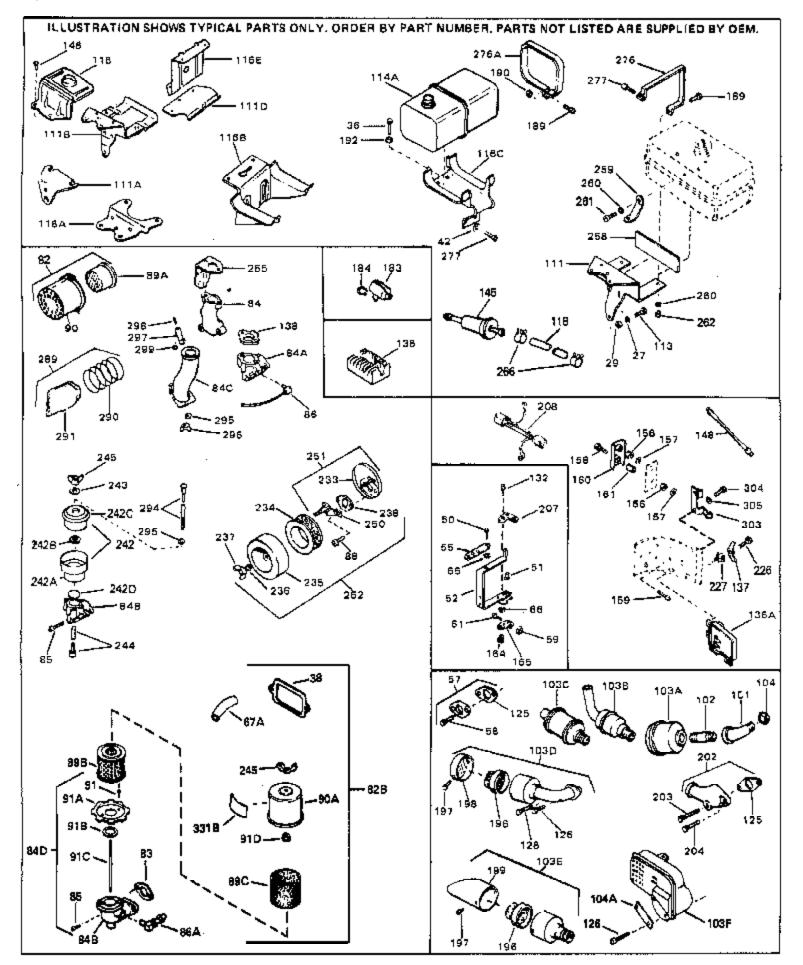

		y Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
02	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
88	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	30209	Elbow, Exhaust (45 degree)
	30244	
		Muffler Nipple
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	29633	Muffler
	32862	Conduit Nut
	31694	Bracket, Fuel tank
	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
132	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	6201	Screw, 1/4-28 x 7/8"
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, $5/16-18 \times 2-1/2"$ (Use as required)
	6021A	
		Screw, 5/16-18 x 1-1/2" (Use as required)
	29752	Nut, Lock
	26460	Clamp, Fuel line
276	31697	Strap, Fuel tank
		•
277	29212 31752	Screw, Hex hd. Sems, 1/4-28 x 7/16 Decal, Air cleaner