



	D (N)	N. D. 18
		Oty Description
	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652	Pin, Dowel
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
5	32784	Intake Valve (1/32" OS) (Incl. 9)
6	27878A	Exhaust Valve (Std.) (Incl. 9)
6	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
7	27882	Cap, Upper valve spring
7A	20810	Pin, Valve spring retainer (Use as re quired)
8A	27881	Spring, Valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
	34242	Dipper, Oil
	32590	Plate, Lock & Oil dipper (This plate may be replaced by
10/ (02000	34242 oil dipper but 650662C screw must be used.)
11	32773	Crankshaft (Incl. 12 & 13)
12	29783	Crankshaft Gear Pin (Early production)
	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
14A	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518	Piston, Pin & Ring Set (.010" OS)
	34519	Piston, Pin & Ring Set (.020" OS)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
	650662C	• · · · · · · · · · · · · · · · · · · ·
	32115	Screw, Connecting rod (2 each) Camshaft (MCR)
		,
	34034	Lifter, Valve
	31451A	Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	28460	Seal, Oil
	31546	Bushing, Crankshaft (Use as required)
	31297	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
	29673	* Gasket, Oil filler
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
37	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Valve spring
	26073	Washer (Use as required)
72	20010	reaction (Goo do roquirou)

Ref #	Part Number	Qty	Description
	650691		Washer, Flat (Use as required)
42A	650690		Washer, Belleville (Use as required)
43	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)
47	30196		Screw, 5/16-18 x 3/4"
	650548		Screw, 8-32 x 5/16"
	32326A		Lever, Governor (New lever does not need 1 of
<u>~_</u>	5_5_5.		51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	31710		Link, Throttle
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
00	30033D		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
	8116		Nut, Hex
	29536		Blower Housing Baffle (without electric starter knock-out)
73	29000		(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
<i>521</i> (100101		(Use as required)
83	27272A		* Gasket, Air cleaner
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
100	29538		Base, Engine mounting
106	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
	650561		Screw, 1/4-20 x 5/8"
	31301		Fuel Tank (Incl. 115)
	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
110			(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
			required)
	35355		Fuel Cap (Use as required)
	28584		Fitting, Fuel strainer & elbow
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)

Ref #	Part Number	Qty Des	
118	30705	Fuel	el Line (Braided 16") (41 cm) (Use as req.)
118	30962		el Line (Braided 32") (81 cm) (Use as req.)
120	650128	Scre	ew, 10-24 x 1/2" (Use as required)
121	30622A	Exte	ension, Blower housing
124	650542	Scre	ew, 5/16-18 x 3/4"
127	26073	Was	sher (Use as required)
128	650694A	Scre	ew, 5/16-18 x 2" (Use as required)
129	32589	Key,	v, Flywheel
130	31843A	Brac	cket, Governor gear
131	650836	Scre	ew, 10-24 x 1/2"
133	650493	Scre	ew, 1/4-20 x 1-3/4"
149	30747	Clip,	o, Shorting
150	650890	Lock	kwasher
193	610118	Cove	ver, Spark plug (Use as required)
	650561	Scre	ew, 1/4-20 x 5/8" (Use as required)
	30939A		ver, Cylinder head
	26460		mp, Fuel line
270	31461	Busl	shing, Crankshaft (Use as required)
273	31711B	Cop	ontrol Bracket (Incl. 98, 99 & 274)
	610973		minal Ass'y. (As req. on late prod uction)
	34043		ing, Control lever
	27275		, Hi-tension wire (Use as require d)
	34246		, Ground wire (Use as required)
	34346		cal, Instruction
	31752		cal, Air cleaner
	550223		cal, Name
	30547A		ntact Assy., Breaker
	30548B		ndenser
	631021		t Needle, Seat & Clip Assy.
336	631480		buretor (Incl. 75) (Refer to Division 5, Section A, page 100 preakdown)
337	610689A	an a purp in pa	gneto NOTE: The complete magneto is not available as assembly. The magneto number is shown for reference coses only. Order component parts individually, as show arts list. (Refer to Division 5, Section B, page 24 for akdown)
343	33239A	Gas	sket Set (Incl. items marked*)

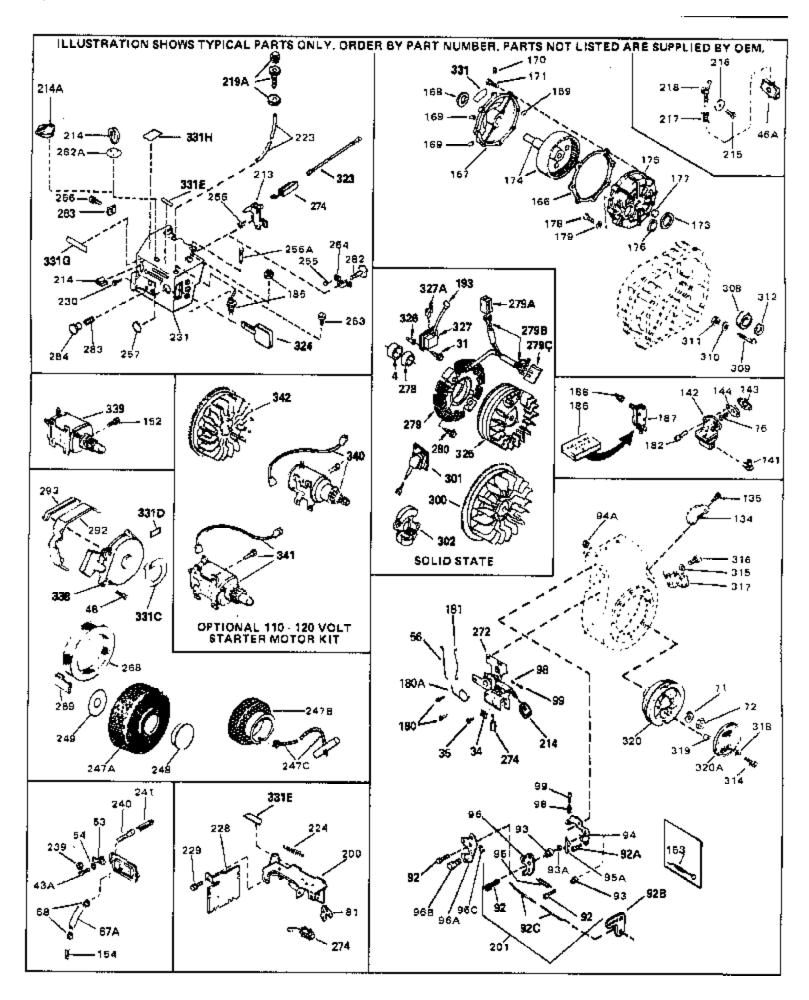

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
56	31710		Link, Throttle
71	650815		Washer, Belleville
	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
	610118		Cover, Spark plug (Use as required)
	590343		Rope Assy., Starter
247B	28301		Pulley, Rope starter
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	31793		Bearing, Ball
	31855		Retainer, Bearing
	650778		Washer, Lock
	650580		Nut, Lock
	31792		Washer, Thrust
	550223		Decal, Name
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for
			identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point
			ignition) (Ring gear flywheel required on engines using
			110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use with Solid
			State ignition)
			• ,

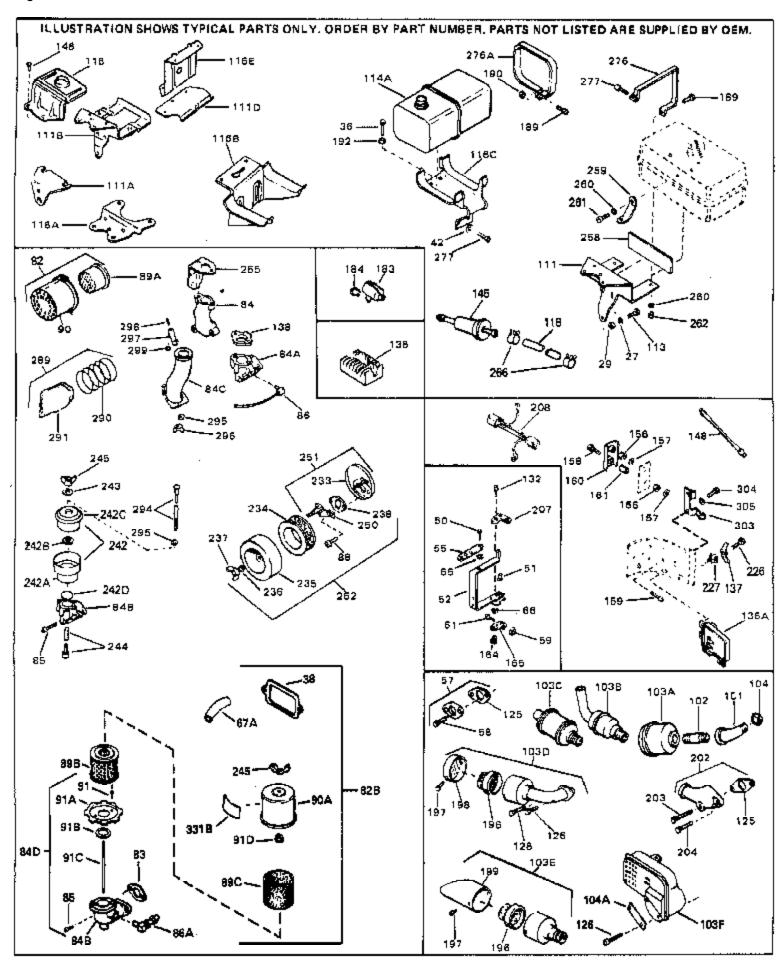

27	Part Number 27513 650697A	Qty	Description Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early production)
	32326A		Lever, Governor (New lever does not need 1 of
32	32320A		51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
			• • •
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
84B	32560		Elbow, Air cleaner
85	29786		Screw, 10-32 x 1-5/8" NOTE: 130010 thru 10C & 11 used in early production only.
101	30209		Elbow, Exhaust (45 degree)
102	30244		Muffler Nipple
103A	29633		Muffler
103E	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862		Conduit Nut
	31694		Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (4-1/4) Wire Assy., Alternator adapter (6-3/4 ")
	6201		Screw, 1/4-28 x 7/8" Exh. Adaptor Kit (Incl 125 203 204) (As reg.)
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	31670		Bowl, Oil bath cleaner
	32561		Oil Bath A/C Ass'y.(Incl.242A,242B,24 2C.242D)
	31479		Washer, Fiber
	31669		Cover, Oil bath cleaner
	31480		"O" Ring
	27183		Washer, Fiber
	32562		Screw, 10-24 x 6-11/16"
	9577		Nut, Wing
262	29752		Nut, Lock

Ref #	Part Number C	Qty Description
266	26460	Clamp, Fuel line
276	31697	Strap, Fuel tank
277	29212	Screw, Hex hd. Sems, 1/4-28 x 7/16
331B	31752	Decal, Air cleaner