
H70-130053A Engine Parts List #1

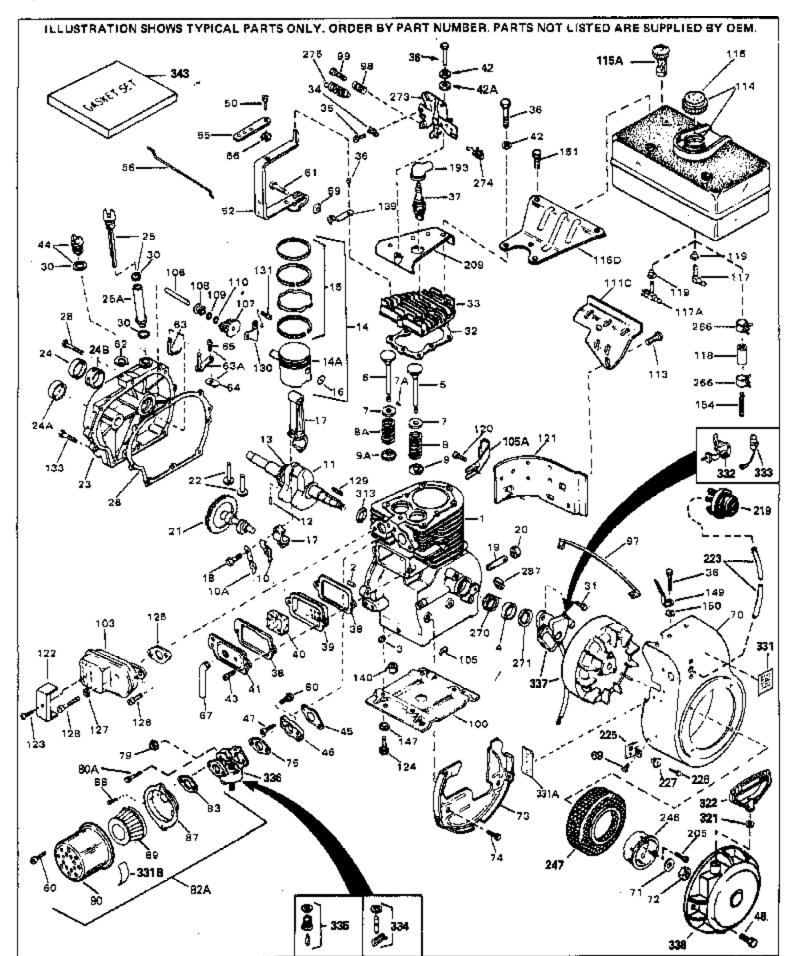


Ref #	Part Number	Qty	Description
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		
			Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810		Pin, Valve spring retainer (Use as re quired)
7	27882		Cap, Upper valve spring
8A	27881		Spring, Valve
8	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		
IUA	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32773		Crankshaft (Incl. 12 & 13)
	29783		
			Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		
			Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		
			Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
23	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
24B	31546		Bushing, Crankshaft (Use as required)
24	28460		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, $5/16-18 \times 2"$ (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
39	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	650690		
42A	000090		Washer, Belleville (Use as required)

		Qty Description
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
43	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205	Bracket, Adjusting
56	31710	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longe used. It is replaced by 30699C ass'y.,Ref. no. 63A)
	30699C	Rod Assy., Governor (Incl. 64 & 65)
	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	
		Washer, Belleville
	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
021	100104	(Use as required)
83	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
98	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	29538	Base, Engine mounting
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
114	33350	Fuel Tank (Incl. 115 & 117A)
115	410144B	Fuel Cap (White Plastic)(Std)(As required)
	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
115		

		Qty	Description
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
	33395		Fitting, Fuel strainer & elbow (Incl. 119)
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
119	33679		Bushing, Fuel fitting
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
127	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
129	32589		Key, Flywheel
130	31843A		Bracket, Governor gear
131	650836		Screw, 10-24 x 1/2"
133	650493		Screw, 1/4-20 x 1-3/4"
149	30747		Clip, Shorting
150	650890		Lockwasher
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30939A		Cover, Cylinder head
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	31726B		Control Bracket (Incl. 98, 99, 214 & 274)
	610973		Terminal Ass'y. (As req. on late prod uction)
	34043		Spring, Control lever
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	550223		Decal, Name
	34346		Decal, Instruction
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
330	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610689A		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)



Ref #	Part Number Qty	Description
	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
56	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	590343	Rope Assy., Starter
247B		Pulley, Rope starter
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	31792	Washer, Thrust
	550223	Decal, Name
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be
		added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel (see#342). Refer to service
		number stamped on end cap of motor, or on decal, for
		identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using
		110-120 volt starter kits listed above)
0.40	011010	,
342	611042	Flywheel (Used on Type letters H and above) (Std. Point
		ignition) (Ring gear flywheel required on engines using
		110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines
		using 110-120 volt starter kits listed above) (Use with Solid
		State ignition)
		<b>č</b> ,

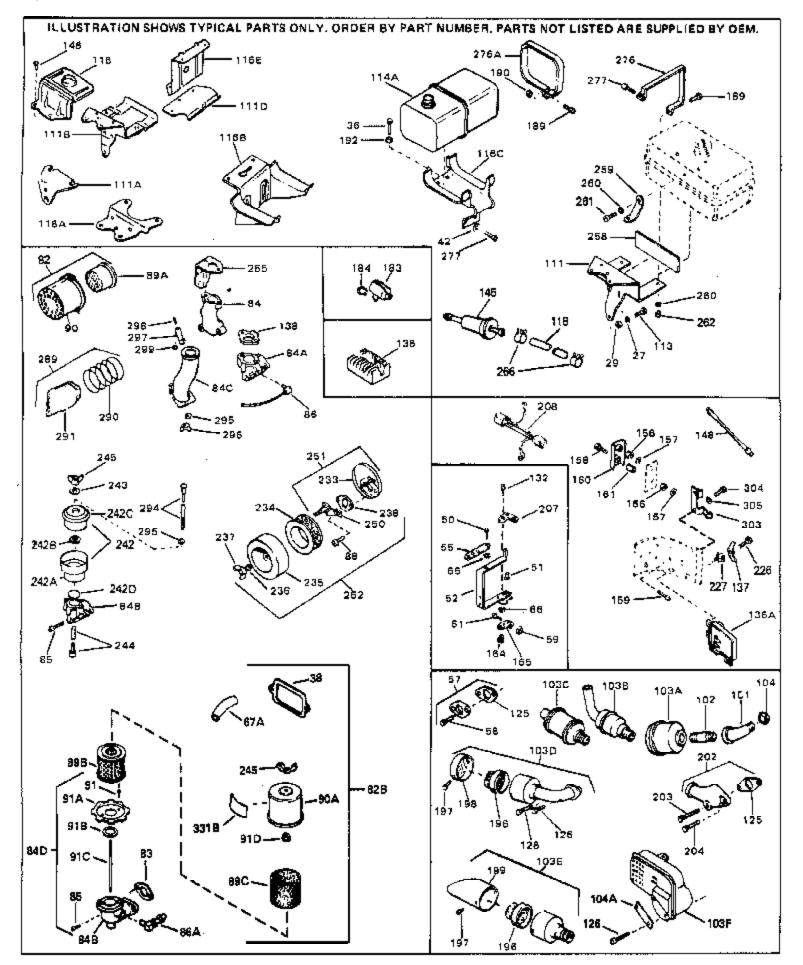

Ref #	Part Number	Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	
		Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205	Bracket, Adjusting
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
0		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
83	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
88	28820	Screw, 10-32 x 1/2"
	31700	Element, Air cleaner
	31715	
		Body, Air cleaner
	30209	Elbow, Exhaust (45 degree)
	30244	Muffler Nipple
	29633	
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862	Conduit Nut
	33353	Bracket, Lower fuel tank
	650561	Screw, 1/4-20 x 5/8"
	33352A	Plate, Upper fuel tank mounting
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	792020	Screw, 1/4-20 x 2-1/4"
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
200	26460	Clamp, Fuel line