



	Dout Ni week ou	N. Dagariation
		Otto Description
	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652	Pin, Dowel
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	20810	Pin, Valve spring retainer (Use as re quired)
	27882	Cap, Upper valve spring
	27881	Spring, Valve
8A	27881	Spring, Valve
9	32581	Cap, Lower valve spring
9A	32581	Cap, Lower valve spring
10A	32590	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
10	34242	Dipper, Oil
	32587	Crankshaft (Incl. 12 & 13)
	29783	Crankshaft Gear Pin (Early production )
	27884	Gear, Crankshaft (Used in early production) This gear is
10	27001	servicable onlywhen it is pinned to the crankshaft.
1.1	34517	,
	34517 34518	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
		Piston, Pin & Ring Set (.010" OS)
	34519 33533B	Piston, Pin & Ring Set (.020" OS)
	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
	650662C	Screw, Connecting rod (2 each)
	32178	Camshaft (MCR) (Extended)
	34034	Lifter, Valve
	31720A	Cover, Cylinder (Incl. 24, 24A, 106 & 279)
24A	28926	Seal, Oil
24B	31546	Bushing, Crankshaft (Use as required)
24	28427	Seal, Oil
25	29668	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
	29673	* Gasket, Oil filler
31	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
33	30938A	Head, Cylinder
34	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Valve spring
41	LUTLU	Oovoi, vaive spirily

42A 42 42 43 45 46 47 48 50	Part Number 650690 26073 650691 650128 27915A 30195A 30196 29716 650548 32326A	Qty	Description  Washer, Belleville (Use as required)  Washer (Use as required)  Washer, Flat (Use as required)  Screw, 10-24 x 1/2"  * Gasket, Intake  Flange, Carburetor (Incl. 79 & 80)  Screw, 5/16-18 x 3/4"  Screw, 1/4-28 x 7/16"  Screw, 8-32 x 5/16"  Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 61 62	30205 31710 29216 29826 29642 30699B		Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 10-32 x 3/4" Ring, Retaining Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64 65 66 67 69 70 71 72	30699C 30700 650494 29918 35350 29747B 32158E 650815 8116 29536		Rod Assy., Governor (Incl. 64 & 65) Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 79 80	650561 31688A 29752 650572 730164		Screw, 1/4-20 x 5/8"  * Gasket, Carburetor  Nut & Lockwasher Assy., 1/4-28  Screw, 1/4-28 x 1-1/8"  Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)  (Use as required)
87	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
97 100 103 106 107 108 109 110 113 114	28820 35349 29538 32401 31845 30591 30588A 30590A 29193 650561 31301 410144B 33032		Screw, 10-32 x 1/2" Ground Wire Base, Engine mounting Muffler Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Screw, 1/4-20 x 5/8" Fuel Tank (Incl. 115) Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)

Ref #	Part Number Qty	Description
	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
115	35355	Fuel Cap (Use as required)
	29683	Valve, Fuel shut-off
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
121	30622A	Extension, Blower housing
124	650542	Screw, 5/16-18 x 3/4"
125	27930A	Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
127	26073	Washer (Use as required)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
129	32589	Key, Flywheel
130	31843A	Bracket, Governor gear
131	650836	Screw, 10-24 x 1/2"
133	650493	Screw, 1/4-20 x 1-3/4"
149	30747	Clip, Shorting
193	610118	Cover, Spark plug (Use as required)
205	650561	Screw, 1/4-20 x 5/8" (Use as required )
209	30939A	Cover, Cylinder head
246	32125	Cup, Starter
247	590417	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331A	34346	Decal, Instruction
331	32679	Decal, 7 HP
332	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
336	631440	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 78
		for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as
00.	0.00007.1	an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as show
		in parts list. (Refer to Division 5, Section B, page 24 for
		breakdown)
000	F00.420	,
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
343	33239A	Gasket Set (Incl. items marked*)
		•

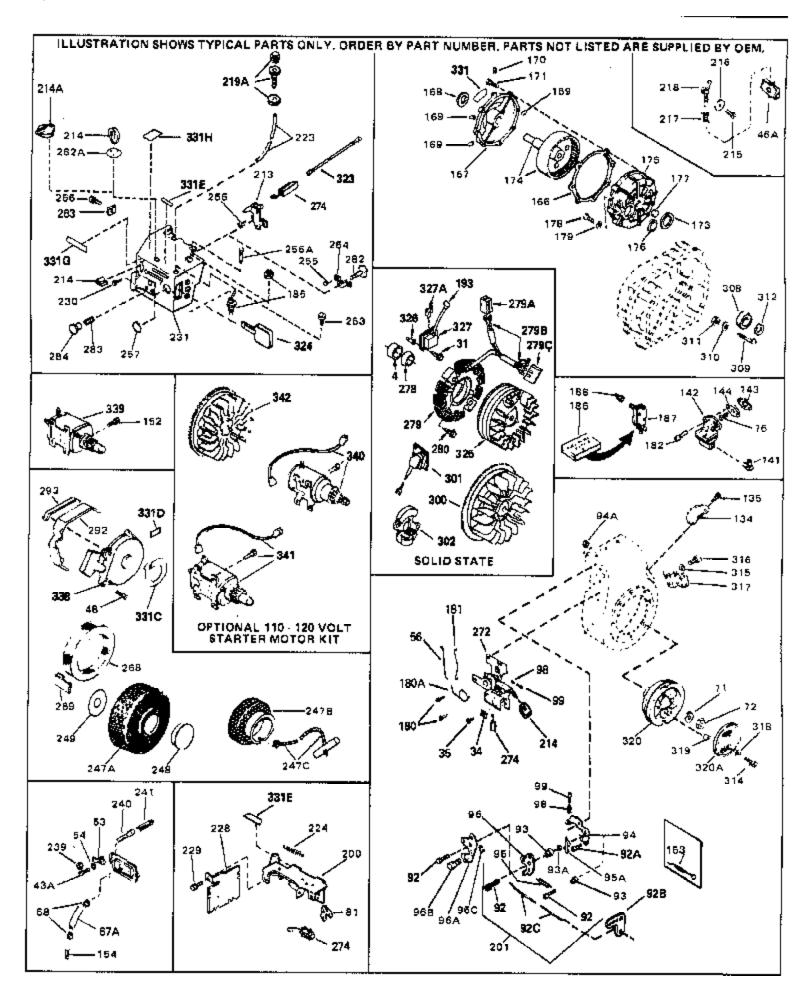

Ref #	Part Number Qty	Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	610118	
	33108A	Cover, Spark plug (Use as required)
	30826	Control Bracket (Incl. 224 & 274)
		Spring, Extension
	650257	Screw, 8-32 x 5/16"
	32395	Cover, Carburetor
	32398	Bracket, Choke
	28820	Screw, 10-32 x 1/2"
	650760	Screw, 8-32 x 3/8"
	650765	Screw, 10-32 x 1/2"
	31291	Plug, Cover
	650764	Nut, "U" Type (Use as required)
274	610973	Terminal Ass'y. (As req. on late prod uction)
282	32397	Plate Assy., Choke
283	32399	Spring, Choke stop
284	32400	Knob, Choke
292	31680	Guard, Starter
	32576	Seal, Snow guard
	31682	Decal, Instruction
	31718	Decal, Choke
	32679	Decal, 7 HP
	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

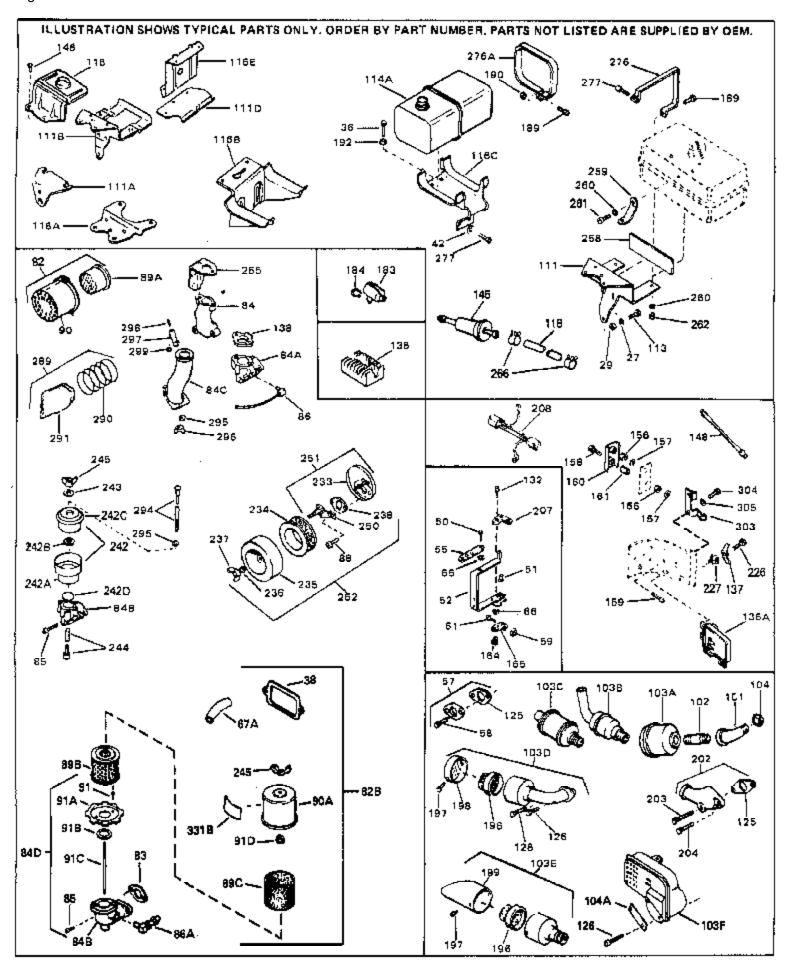

Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
02	02020/1		51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
020	730301		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
			an externally verified fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
88	28820		Screw, 10-32 x 1/2"
103E	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	31694		Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production )
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	6201		Screw, 1/4-28 x 7/8"
	31288		Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	29752		Nut, Lock
	26460		Clamp, Fuel line
	31697		•
			Strap, Fuel tank
211	29212		Screw, Hex hd. Sems, 1/4-28 x 7/16