



Ref #	Part Number	Otv	Description
	32586C	٠.,	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
			·
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
8	27881		Spring, Valve
8A	27881		Spring, Valve
9A	32581		Cap, Lower valve spring
9	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
	0_000		34242 oil dipper but 650662C screw must be used.)
			,
	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
12	29783		Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	29668		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		· · · · · · · · · · · · · · · · · · ·
			Screw, 1/4-20 x 5/8" Screw, 1/4-20 x 1 1/9"
	650516		Screw, 1/4-20 x 1-1/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	33636		Resistor Spark Plug (RJ-8C)
37	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
71			22.3., Taile opining

		Description
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
42A	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	,
		Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
50	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
56	31710	Link, Throttle
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
		·
	29642	Ring, Retaining
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
	30699C	Rod Assy., Governor (Incl. 64 & 65)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
		·
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
72	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
		Screw, 1/4-28 x 1-1/8"
	650572	
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
00	20020	( 1 /
	28820	Screw, 10-32 x 1/2"
	35349	Ground Wire
100	29538	Base, Engine mounting
103	32401	Muffler
106	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
		·
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
	31301	Fuel Tank (Incl. 115)
115	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
		(Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
115	35355	Fuel Cap (Use as required)

Ref #	Part Number C	ty Description
117A	29683	Valve, Fuel shut-off
118	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128	Screw, 10-24 x 1/2" (Use as required)
121	30622A	Extension, Blower housing
124	650542	Screw, 5/16-18 x 3/4"
125	27930A	Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
127	26073	Washer (Use as required)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
129	32589	Key, Flywheel
130	31843A	Bracket, Governor gear
131	650836	Screw, 10-24 x 1/2"
133	650493	Screw, 1/4-20 x 1-3/4"
149	30747	Clip, Shorting
193	610118	Cover, Spark plug (Use as required)
205	650561	Screw, 1/4-20 x 5/8" (Use as required )
209	30939A	Cover, Cylinder head
246	32125	Cup, Starter
247	590417	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
274	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331	550223	Decal, Name
331A	34346	Decal, Instruction
332	30547A	Contact Assy., Breaker
333	30548B	Condenser
334	631021	Inlet Needle, Seat & Clip Assy.
336	631459	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
		for breakdown)
227	610826	Magnete (wiring gear)/12 \/t/2 \/mp\/2 NOTE: The complete
331	010020	Magneto (w/ring gear)(12 Vt/3 Amp)(2 NOTE: The complete magneto is not available as an assembly. The magneto
		number is shown for reference purposes only. Order
		component parts individually, as show in parts list. Circuit)
		(Refer to Division 5, Section B, page 27 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
343	33239A	Gasket Set (Incl. items marked*)

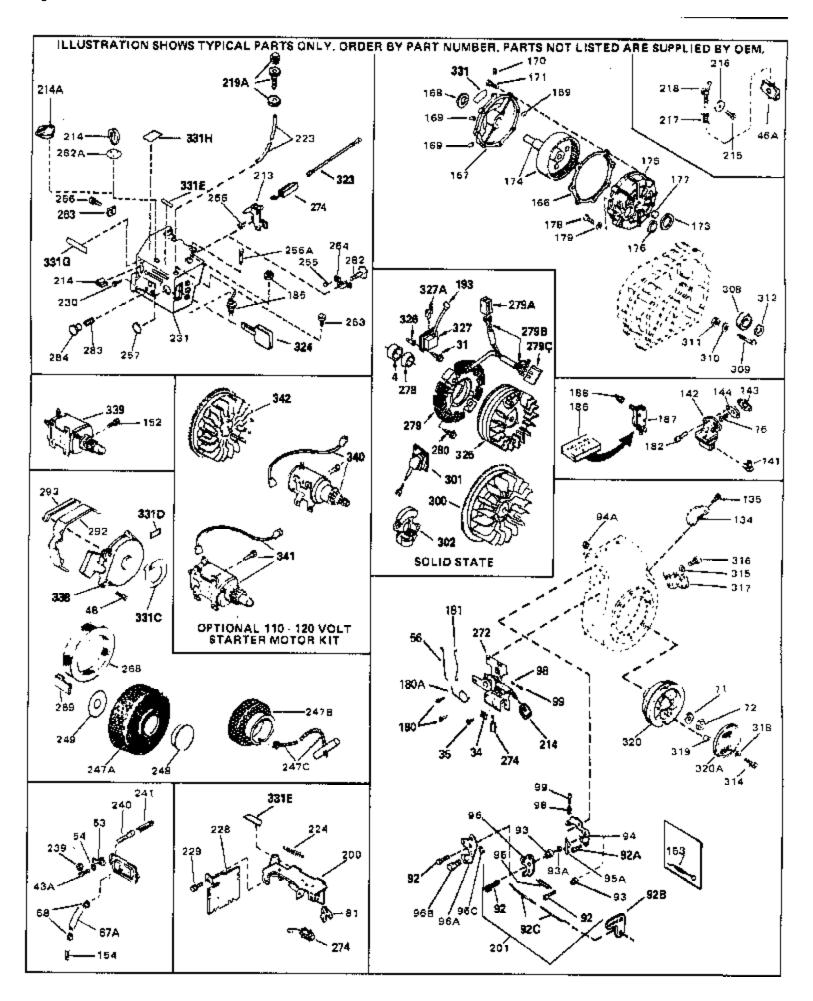

Pof #	Part Number Q	h, Da	Description
	650489		icrew, 1/4-20 x 5/8"
	650516		crew, 1/4-20 x 3/6
	27793		Clip, Conduit (Use as required)
	28942		·
	650128		crew, 10-32 x 3/8" (Use as required) crew, 10-24 x 1/2"
	29716		crew, 1/4-28 x 7/16"
	31710		ink, Throttle
	650815		Vasher, Belleville
	8116		lut, Hex
	33013		Cover, Bubble
	650736		crew, 10-16 x 3/8"
	610118		Cover, Spark plug (Use as required)
	33108A		Control Bracket (Incl. 224 & 274)
	30826		pring, Extension
	650257		crew, 8-32 x 5/16"
	32911		Cover, Carburetor
	32398		racket, Choke
	28820		crew, 10-32 x 1/2"
	650765		crew, 10-32 x 1/2"
	650760		crew, 8-32 x 3/8"
	31291		lug, Cover
	650764		lut, "U" Type (Use as required)
	610973		erminal Ass'y. (As req. on late prod uction)
	32397		late Assy., Choke
	32399		pring, Choke stop
	32400		nob, Choke
	31680		Suard, Starter
	32576		eal, Snow guard
	550223		ecal, Name
	31683		ecal, Choke
	31682		Decal, Instruction
338	590420		Lewind Starter (Refer to Division 5, Section C, page 25 for
		bre	reakdown)
340	33328D	mo ad bo nu	starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be dded only if cylinder hasdrilled and tapped starter mounting osses and a ring gear flywheel (see#342). Refer to service umber stamped on end cap of motor, or on decal, for lentifica
342	30811A		lywheel (Ring gear flywheel requiredon engines using 10-120 volt starter kits listed above)
342	611042	igr	lywheel (Used on Type letters H and above) (Std. Point Inition) (Ring gear flywheel required on engines using 10-120 volt starter kits listed above)
342	611085	us	lywheel (Minimum ring gear flywheel required on engines sing 110-120 volt starter kits listed above) (Use withSolid state ignition)

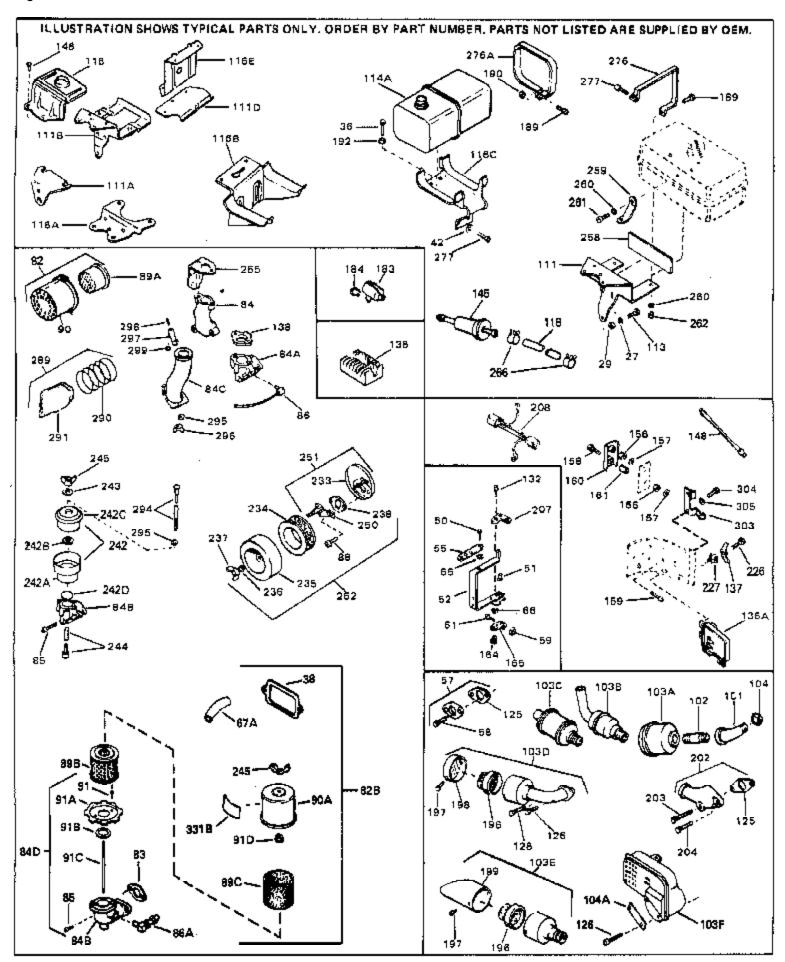

Ref #	Part Number	Qty	Description
36 36 38 42 42 50 51	27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A		Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 2-1/4" (Use as requi red) Screw, 5/16-18 x 2" (Use as required) * Gasket, Breather cover Washer (Use as required) Washer, Flat (Use as required) Screw, 8-32 x 5/16" Rivet, Split (Used in early productio n) Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
57 58 59 61 66	30205 730130 30196 29216 29826 29918 730561		Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only) NOTE: 130010 thru 10C & 11 used in early production only.
103E 111 113 118 118 118 125 126 128 132 148 148 148 202 203 204 262 266 276	28820 391026 31694 650561 29774 30705 30962 27930A 30196 650694A 650548 34067 34069 6201 31288 650697A 6021A 29752 26460 31697 29212		Screw, 10-32 x 1/2" Opt. Spark Arrest Muffler (Incl.196,1 97,199) Bracket, Fuel tank Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Gasket, Exhaust Screw, 5/16-18 x 3/4" Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production ) Wire Assy., Alternator adapter (4-1/4") Wire Assy., Alternator adapter (6-3/4") Screw, 1/4-28 x 7/8" Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Nut, Lock Clamp, Fuel line Strap, Fuel tank Screw, Hex hd. Sems, 1/4-28 x 7/16