



		Qty	Description
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	32680A		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
13	27004		
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518		Piston, Pin & Ring Set (.010" OS)
14	34519		Piston, Pin & Ring Set (.020" OS)
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010." (.05)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
24	28427		Seal, Oil
24B	31546		Bushing, Crankshaft (Use as required)
25	31297		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder Head, Cylinder
	27793		
			Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
38	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
72	200.0		Tradition (300 do Toquillou)

Pof #	Part Number Q	ty Description
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
		·
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	30824	Link, Throttle
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
03	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
66	29918	Lockwasher, #8 E.T.
67	35350	Tube, Breather
69	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter knock-out)
70	20000	(Use as required)
70	050504	,
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
80	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
		(Use as required)
07	25240	Ground Wire
	35349	
	29538	Base, Engine mounting
	32401	Muffler
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
	31301	Fuel Tank (Incl. 115)
	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
		(Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
110	0.2.0	required)
445	25255	. ,
	35355	Fuel Cap (Use as required)
	29683	Valve, Fuel shut-off
118	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)

Ref #	Part Number	Qty	Description
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
125	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
127	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	34346		Decal, Instruction
	32679		Decal, 7 HP
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
336	631459		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
			for breakdown)
337	610694A		Magneto (w/ring gear for 110 volt sta rter) NOTE: The
			complete magneto is not available as an assembly. The
			magneto number is shown for reference purposes only.
			Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
			(India to Division 3, Section B, Page 24 to Dieakuowin)
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
			breakdown)
343	33239A		Gasket Set (Incl. items marked*)
310			

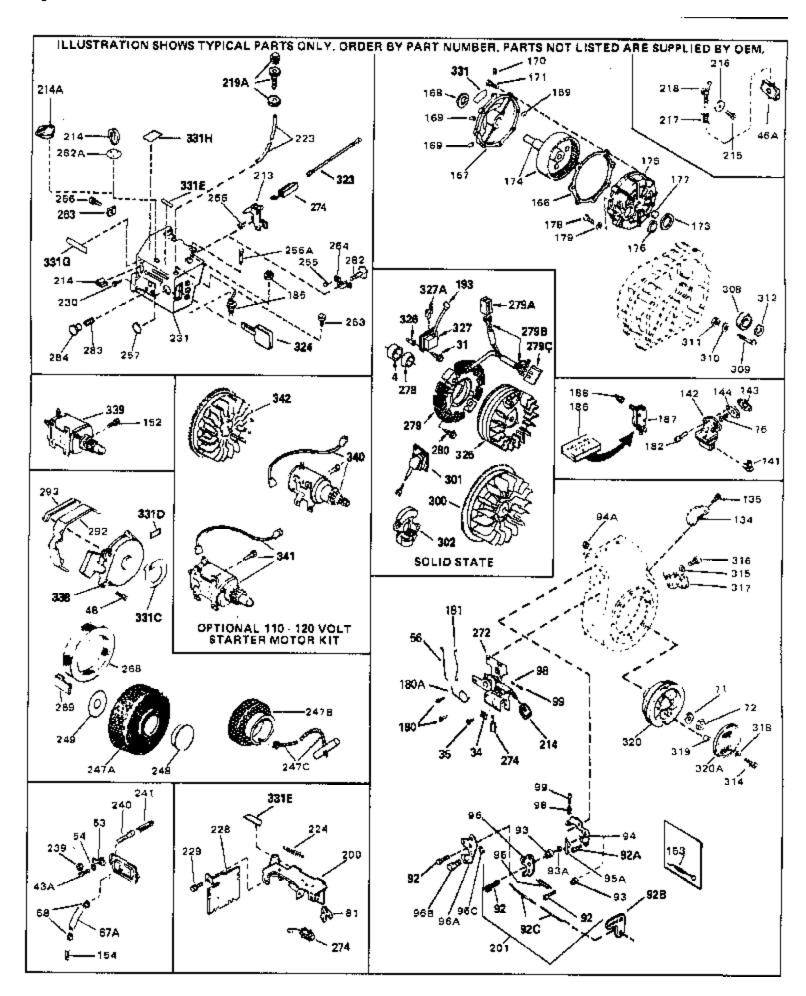

Ref #	Part Number Qty	Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	30824	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	33013	Cover, Bubble
	650736	Screw, 10-16 x 3/8"
	610118	Cover, Spark plug (Use as required)
	33109A	Control Bracket (Incl. 224 & 274)
	30826	Spring, Extension
	650257	Screw, 8-32 x 5/16"
	33134	Cover, Carburetor
	32398	Bracket, Choke
	28820	Screw, 10-32 x 1/2"
	650765	Screw, 10-32 x 1/2"
	650760	Screw, 8-32 x 3/8"
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	32397	Plate Assy., Choke
	32399	Spring, Choke stop
	32400	Knob, Choke
	31680	Guard, Starter
	32576	Seal, Snow guard
	31683	Decal, Choke
	32679	Decal, 7 HP
331H	31682	Decal, Instruction
331E	35344	Decal, Control
338	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel (see#342). Refer to service
		number stamped on end cap of motor, or on decal, for
		identifica
242	20044 A	That hook (Ding goor that hook required on engines using
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
242	611042	Flywheel (Used on Type letters H and above) (Std. Point
342	011042	ignition) (Ring gear flywheel required on engines using
		110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines
		using 110-120 volt starter kits listed above) (Use with Solid
		State ignition)

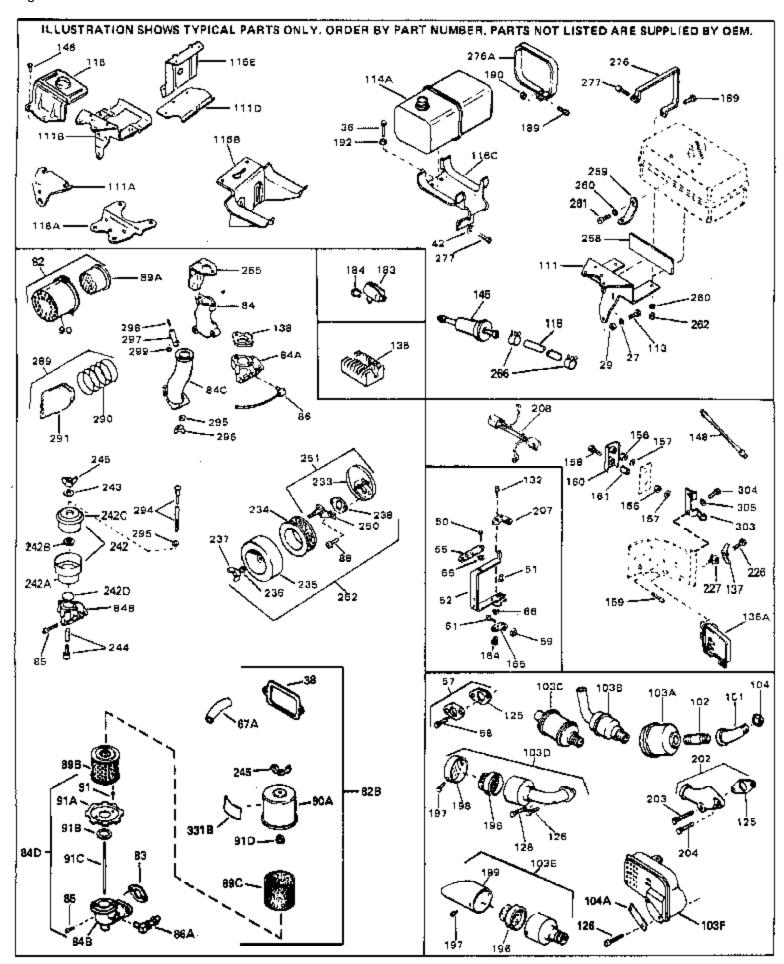

Ref #	Part Number (Qty	Description
27	27513	Ť	Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
50	650548		Screw, 8-32 x 5/16"
51	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
92	730127		• • • •
02	130121		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
			, ,
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only) NOTE: 130010 thru 10C & 11
			used in early production only.
103E	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
111	31694		Bracket, Fuel tank
113	650561		Screw, 1/4-20 x 5/8"
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	6201		Screw, 1/4-28 x 7/8"
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	29752		Nut, Lock
	26460		Clamp, Fuel line
	31697		Strap, Fuel tank
277	29212		Screw, Hex hd. Sems, 1/4-28 x 7/16