


Ref #	Part Number	Otv	Description
1		QU	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
-	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
7A	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
104	32390		
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32773		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
10	21004		servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		
	32590		Ring Set (.010" OS)
			Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
23	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
24B	31546		Bushing, Crankshaft (Use as required)
24	28460		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		
			Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
37	34251		Resistor Spark Plug
38	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
72	20010		

Ref # Part Number	Qty Description
42 650691	Washer, Flat (Use as required)
42A 650690	Washer, Belleville (Use as required)
43 650128	Screw, 10-24 x 1/2"
45 27915A	* Gasket, Intake
46 30195A	Flange, Carburetor (Incl. 79 & 80)
47 30196	Screw, 5/16-18 x 3/4"
48 29716	Screw, 1/4-28 x 7/16"
50 650548	Screw, 8-32 x 5/16"
52 32326A	Lever, Governor (New lever does not need 1 of
	51,66,132,164,165,207)
55 30205	Brockot Adjusting
	Bracket, Adjusting
56 31710	Link, Throttle
59 29216	Nut, Lock, 10-32
60 650152	Screw, 8-32 x 3/8"
61 29826	Screw, 10-32 x 3/4"
62 29642	Ring, Retaining
63 30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
	used. It is replaced by 30699C ass'y, Ref. no. 63A)
004 000000	
63A 30699C	Rod Assy., Governor (Incl. 64 & 65)
64 30700	Yoke, Governor
65 650494	Screw, 6-40 x 5/16"
66 29918	Lockwasher, #8 E.T.
67 35350	Tube, Breather
69 29747B	Screw, 5/16-24 x 21/32"
70 32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71 650815	Washer, Belleville
72 8116	
	Nut, Hex
73 29536	Blower Housing Baffle (without electric starter knock-out)
	(Use as required)
73 35256A	Blower Housing Baffle (with electric starter knock-out) (Use
	as required) (Point Ignition)
74 050504	
74 650561	Screw, 1/4-20 x 5/8"
75 31688A	* Gasket, Carburetor
79 29752	Nut & Lockwasher Assy., 1/4-28
80 650572	Screw, 1/4-28 x 1-1/8"
82A 730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
	(Use as required)
00.070704	
83 27272A	* Gasket, Air cleaner
87 31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
	early production only.
88 28820	Screw, 10-32 x 1/2"
89 30727	Element, Air cleaner
90 31715	Body, Air cleaner
98 28569	Spring, Compression
99 29500	Screw, 8-32 x 3/4"
100 29538	Base, Engine mounting
103 32401	Muffler
	Shaft, Mechanical governor
100 31043	Gear Assy., Governor (Incl. 109)
106 31845 107 30591	
107 30591	
107 30591 108 30588A	Spool, Governor
107 30591 108 30588A 109 30590A	Spool, Governor Washer, Flat
107 30591 108 30588A 109 30590A 110 29193	Spool, Governor Washer, Flat Ring, Retaining
107 30591 108 30588A 109 30590A	Spool, Governor Washer, Flat

	Part Number 33032	QtyDescriptionFuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use a required)
118 118 118 120 121 124 125 126 127 128 129 130 131 133 149 150 193 205 209 246 247 266 270 273 274 275 287 273 274 275 287 331A 331 331 331 332 333	35355 29774 30705 30962 650128 30622A 650542 27930A 30196 26073 650694A 32589 31843A 650836 650493 30747 650890 610118 650561 30939A 32125 590417 26460 31461 31726B 610973 34043 27275 34246 34346 550223 31752 30547A 30548B 631021	Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Gasket, Exhaust Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Lockwasher Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Control Bracket (Incl. 98, 99, 214 & 274) Terminal Ass'y. (As req. on late prod uction) Spring, Control lever Clip, Hi-tension wire (Use as required) Decal, Instruction Decal, Name Decal, Name Decal, Air cleaner Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
	631453 610689A	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 10 for breakdown) Magneto NOTE: The complete magneto is not available as
337	DIODOAN	an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
	33239A	



Ref #	Part Number Qty	Description
31	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
56	31710	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	28569	Spring, Compression
	29500	Screw, 8-32 x 3/4"
	610118	Cover, Spark plug (Use as required)
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
	650580	Nut, Lock
	31792	Washer, Thrust
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

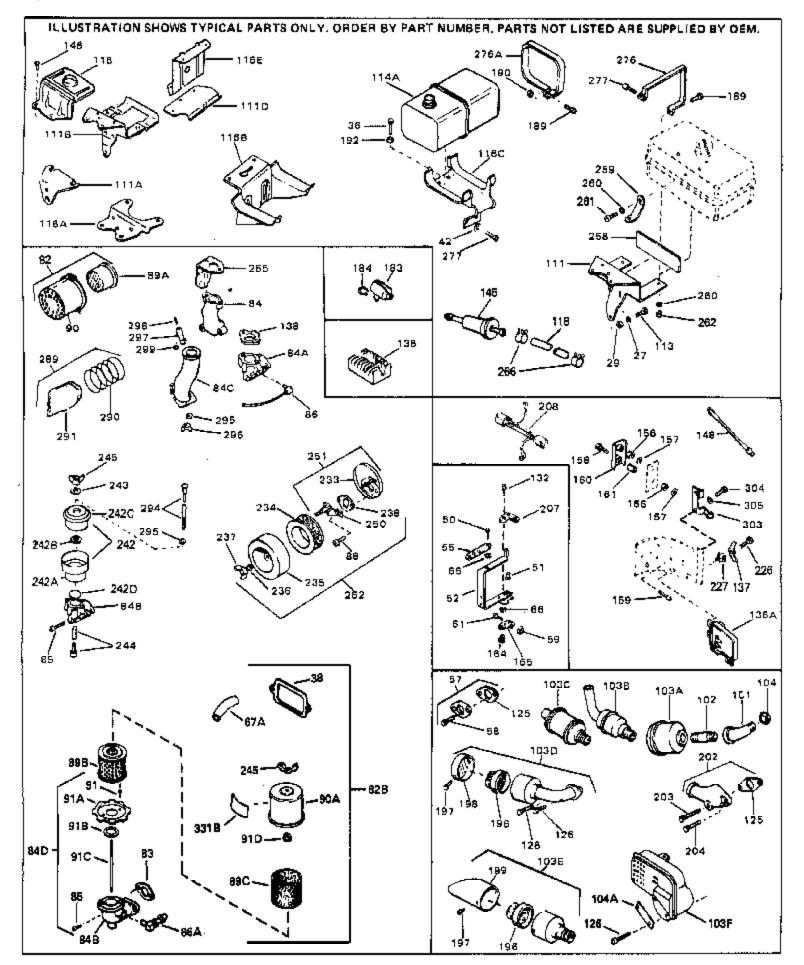

		Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
02		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 9
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines wi
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (U
		in 730561 assembly only)
88	28820	Screw, 10-32 x 1/2"
90	31715	Body, Air cleaner
103E	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
113	30063	Screw, 1/4-20 x 1/2"
118	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
125	27930A	Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy, Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	26460	Clamp, Fuel line
	31752	Decal, Air cleaner