



		Qty	Description
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32681A		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		
13	2/004		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		
			Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
24	28427		Seal, Oil
24B	31546		Bushing, Crankshaft (Use as required)
25	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650516		Screw, 1/4-20 x 1-1/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
38	27896A		* Gasket, Breather cover
39	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
72			(000 00 104000)

	B (N)	B 12
	,	Description
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
50	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
EE	30205	Product Adjusting
		Bracket, Adjusting
	31710	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
		·
	35350 30747B	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
/3	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
. •		as required) (Point Ignition)
7.4	050504	
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
		(Use as required)
83	27272A	* Gasket, Air cleaner
	31914	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
O/	31914	early production only.
		eany production only.
88	28820	Screw, 10-32 x 1/2"
89	30727	Element, Air cleaner
90	31715	Body, Air cleaner
98	28569	Spring, Compression
99	29500	Screw, 8-32 x 3/4"
	29538	Base, Engine mounting
	391014	Muffler
	29443	Clip, Wire
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	
		Ring, Retaining
	650561	Screw, 1/4-20 x 5/8" Fuel Cap (\(\lambda \lambda \) its Plactic \(\lambda \) a regular irod \(\lambda \)
115	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)

		Qty Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 125 126 127 128 129 130 131 133 149 193 205 209 246 247 266 270 273 274 275 287 331B 331A 331 332 333	35355 29774 30705 30962 650128 30622A 650542 27930A 30196 26073 650694A 32589 31843A 650836 650493 30747 610118 650561 30939A 32125 590417 26460 31461 31711B 610973 34043 27275 34246 31752 34346 550223 32434 610767A	Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Gasket, Exhaust Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Copntrol Bracket (Incl. 98, 99 & 274) Terminal Ass'y. (As req. on late prod uction) Spring, Control lever Clip, Hi-tension wire (Use as required) Decal, Air cleaner Decal, Instruction Decal, Name Contact Assy., Breaker Condenser
	631021 631661	Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610816	Magneto (w/ring gear) (12 Volt) (7 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 26 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)

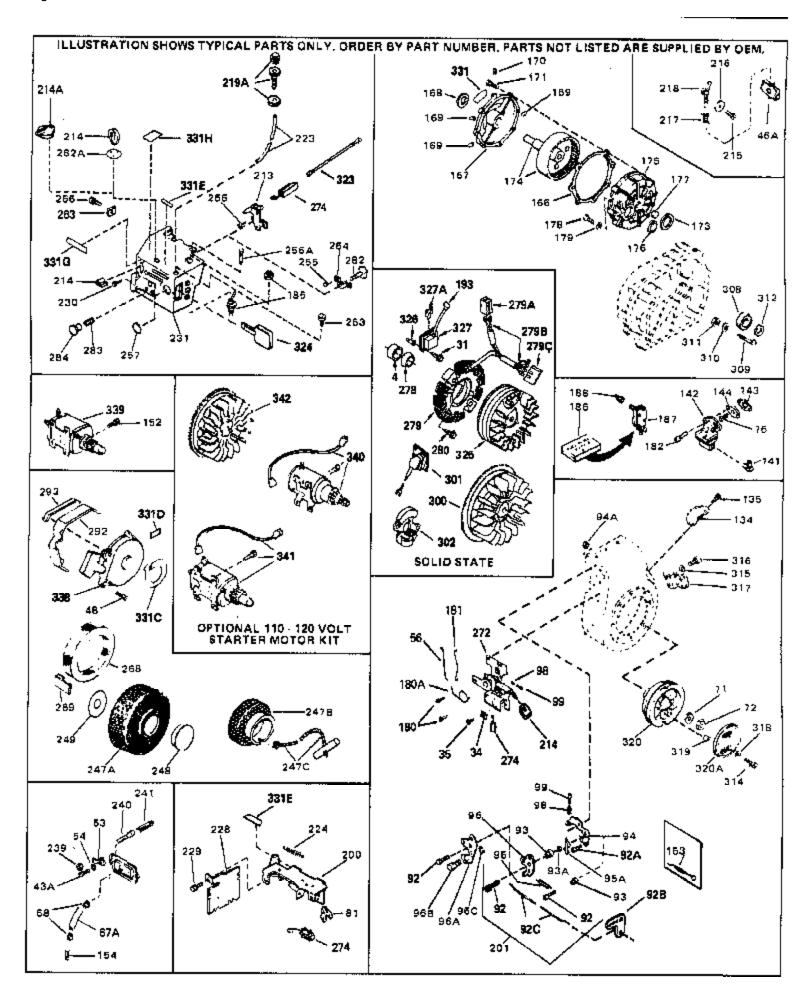

Ref #	Part Number	Qtv	Description
	650516		Screw, 1/4-20 x 1-1/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
98	28569		Spring, Compression
99	29500		Screw, 8-32 x 3/4"
152	30063		Screw, 1/4-20 x 1/2"
193	610118		Cover, Spark plug (Use as required)
263	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	550223		Decal, Name
339	35765A		Electric Starter Motor (12 Volt) NOTE: The 29965, 32468, 32468B, 33606, 35765 and 35765A startermotors are used interchangeably on these models. Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown.
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

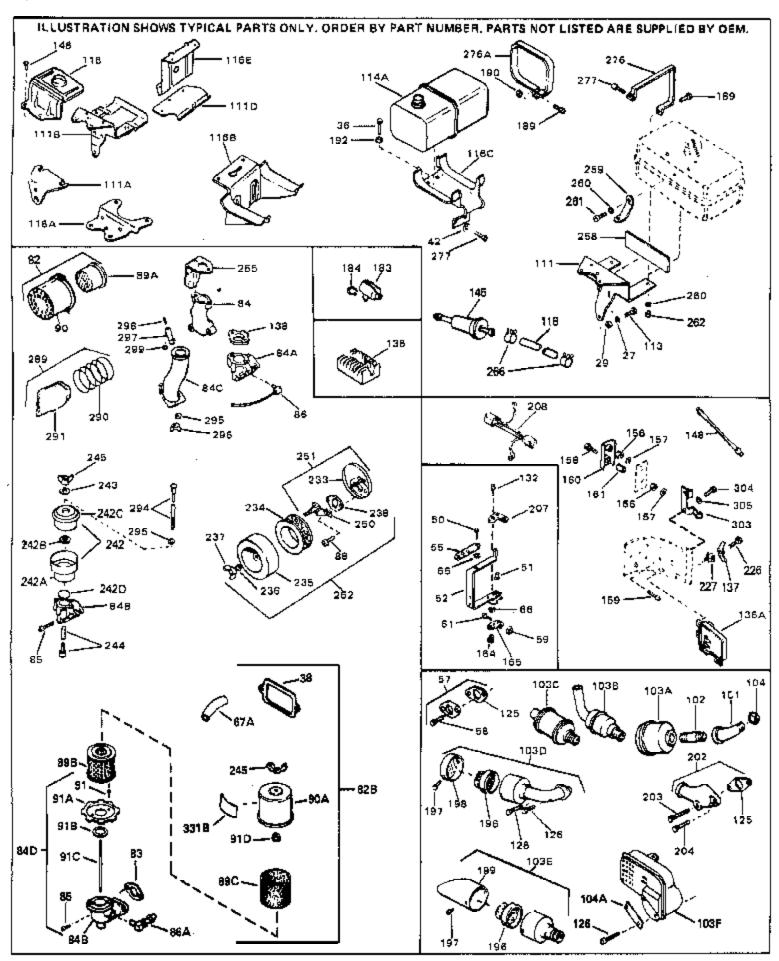

	Part Number	Qty	Description
	27513		Lockwasher, 1/4" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
-			331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
83	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
88	28820		Screw, 10-32 x 1/2"
90	31715		Body, Air cleaner
103E	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
113	650561		Screw, 1/4-20 x 5/8"
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
125	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
128	650694A		Screw, 5/16-18 x 2" (Use as required)
132	650548		Screw, 8-32 x 5/16" (Early production)
148	34067		Wire Assy., Alternator adapter (4-1/4 ")
148	34069		Wire Assy., Alternator adapter (6-3/4 ")
202	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
203	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
204	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
208	33018		Harness, Adapter
266	26460		Clamp, Fuel line
331B	31752		Decal, Air cleaner
00 ID	··· 0_		2 3 3 and 1