


Ref #	Part Number	Otv	Description
	32586C	٠.,	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
15	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
28	650488		Screw, 1/4-20 x 1-1/4"
30	29673		* Gasket, Oil filler
	650516		Screw, 1/4-20 x 1-1/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		
			Cover, Valve spring
42	26073		Washer (Use as required)

42 42A 43 45 46 47 50	Part Number 650691 650690 650128 27915A 30195A 30196 650548 32326A	Qty	Description Washer, Flat (Use as required) Washer, Belleville (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62 63A	30205 31710 29216 650152 29826 29642 30699C 30699B		Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72	30700 650494 29918 35350 29747B 32158E 650815 8116 29536		Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 79 80	650561 31688A 29752 650572 730164		Screw, 1/4-20 x 5/8" * Gasket, Carburetor Nut & Lockwasher Assy., 1/4-28 Screw, 1/4-28 x 1-1/8" Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31914		* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 98 99 100 103 105 106 107 108 109 110	28820 30727 31715 28569 29500 29538 391014 29443 31845 30591 30588A 30590A 29193 30063 410144B		Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Spring, Compression Screw, 8-32 x 3/4" Base, Engine mounting Muffler Clip, Wire Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Screw, 1/4-20 x 1/2" Fuel Cap (White Plastic)(Std)(As requ ired)
. 10	- · · -		

	Part Number 33032	Qty	Description Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 125 126 127 128 129 130 131 133 149 193 205 209 246 247 266 270 271 273 274 275 287 287 331 331B 331A 332 333 334	35355 29774 30705 30962 650128 30622A 650542 27930A 30196 26073 650694A 32589 31843A 650836 650493 30747 610118 650561 30939A 32125 590417 26460 31461 33876 31711B 610973 34043 27275 34246 550223 31752 34346 30547A 30548B 631021		Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Gasket, Exhaust Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Copntrol Bracket (Incl. 98, 99 & 274) Terminal Ass'y. (As req. on late prod uction) Spring, Control lever Clip, Hi-tension wire (Use as required) Decal, Name Decal, Name Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
	631661		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610954		Magneto (w/ring gear) (12 Volt) (7 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 33 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)

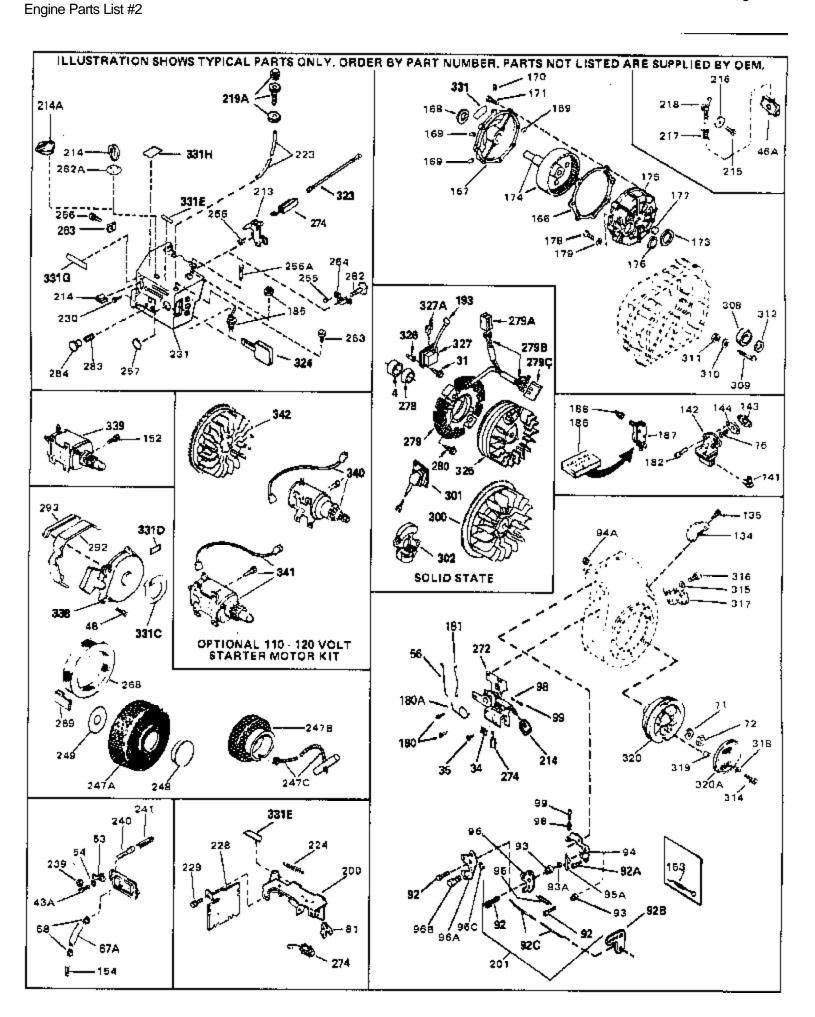

Ref #	Part Number	Qty	Description
31	650516	-	Screw, 1/4-20 x 1-1/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
56	31710		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
	28569		Spring, Compression
	29500		Screw, 8-32 x 3/4"
	30063		Screw, 1/4-20 x 1/2"
	610118		Cover, Spark plug (Use as required)
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	550223		Decal, Name
339	35765A		Electric Starter Motor (12 Volt) NOTE: The 29965, 32468, 32468B, 33606, 35765 and 35765A startermotors are used interchangeably on these models. Refer to service number stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown.
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)



Ref #	Part Number	Qty	Description
27	27513	•	Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
~ _			331B) (Use as required)
920	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
020	730301		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
			, ,
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
	28820		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	30063		Screw, 1/4-20 x 1/2"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	610920		Regulator, Rectifier (7 Amp)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	34070		Wire Assy., Alternator adapter (24-1/4")
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	26460		Clamp, Fuel line
	32765		Clamp, Blower housing extension
	650735		Screw, 10-24 x 3/8"
331B	31752		Decal, Air cleaner