



Pof #	Part Number Q	ty Description
	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652	Pin, Dowel
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
7	27882	Cap, Upper valve spring
7A	20810	Pin, Valve spring retainer (Use as re quired)
8	27881	Spring, Valve
8A	27881	Spring, Valve
9A	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
	32590	Plate, Lock & Oil dipper (This plate may be replaced by
10/1	32330	34242 oil dipper but 650662C screw must be used.)
		34242 Oil dipper but 0000020 Screw Must be used.)
10	34242	Dipper, Oil
11	32680A	Crankshaft (Incl. 12 & 13)
12	29783	Crankshaft Gear Pin (Early production)
	27884	Gear, Crankshaft (Used in early production) This gear is
.0	2.00	servicable onlywhen it is pinned to the crankshaft.
		'
	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14	34517	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518	Piston, Pin & Ring Set (.010" OS)
14	34519	Piston, Pin & Ring Set (.020" OS)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
	650662C	,
		Screw, Connecting rod (2 each)
	32678	Nipple, Oil drain
	30969	Cap, Oil drain
	32115	Camshaft (MCR)
	34034_	Lifter, Valve
	31303B	Cover, Cylinder (Incl. 24, 106 & 279)
24	28427	Seal, Oil
24B	31546	Bushing, Crankshaft (Use as required)
25	34011A	Dipstick, Oil (Incl. 30)
25A	33893A	Tube, Oil filler
	30684	* Gasket, Cylinder cover
28	650488	Screw, 1/4-20 x 1-1/4"
	33590	"O" Ring
	650489	Screw, 1/4-20 x 5/8"
	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder Head, Cylinder
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
37	34251	Resistor Spark Plug
38	27896A	* Gasket, Breather cover
	28423	Body, Breather
90		•

Ref #	Part Number Qt	/ Description
40	28424	Element, Breather
41	28425	Cover, Valve spring
42A	650690	Washer, Belleville (Use as required)
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
	32326A	Lever, Governor (New lever does not need 1 of
52	02020/1	51,66,132,164,165,207)
		31,00,132,104,103,201)
55	30205	Bracket, Adjusting
56	30824	Link, Throttle
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
62	29642	Ring, Retaining
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y., Ref. no. 63A)
64	30700	
		Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
/3	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
32 (100101	(Use as required)
07	35349	Ground Wire
	29538	
	29036 32401	Base, Engine mounting Muffler
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8" First Torly (loc) 445 8 447A)
	33350	Fuel Tank (Incl. 115 & 117A)
	410144B	Fuel Cap (White Plastic)(Std)(As required)
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
		(Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
		· ,

	Part Number	Qty	Description
115	35355		Fuel Cap (Use as required)
117A	33351		Valve, Fuel strainer & shut-off (Incl 119)
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	33679		Bushing, Fuel fitting
	650128		Screw, 10-24 x 1/2" (Use as required)
	30622A		Extension, Blower housing
	34174		Deflector, Exhaust
	650665		Screw, 1/4-15 x 7/8"
	650542		Screw, 5/16-18 x 3/4"
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2" Screw, 1/4 20 x 1 2/4"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	32180C		Line, Primer
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	27275		Clip, Hi-tension wire (Use as require d)
287	34246		Clip, Ground wire (Use as required)
331A	34346		Decal, Instruction
332	30547A		Contact Assy., Breaker
333	30548B		Condenser
334	631021		Inlet Needle, Seat & Clip Assy.
336	631711		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 122
			for breakdown)
227	0400044		Magnata (w/sing grows for 440 walk ato star) NOTE: The
337	610694A		Magneto (w/ring gear for 110 volt sta rter) NOTE: The
			complete magneto is not available as an assembly. The
			magneto number is shown for reference purposes only.
			Order component parts individually, as show in parts list.
			(Refer to Division 5, Section B, page 24 for breakdown)
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
300	-		breakdown)
	000004		•
343	33239A		Gasket Set (Incl. items marked*)

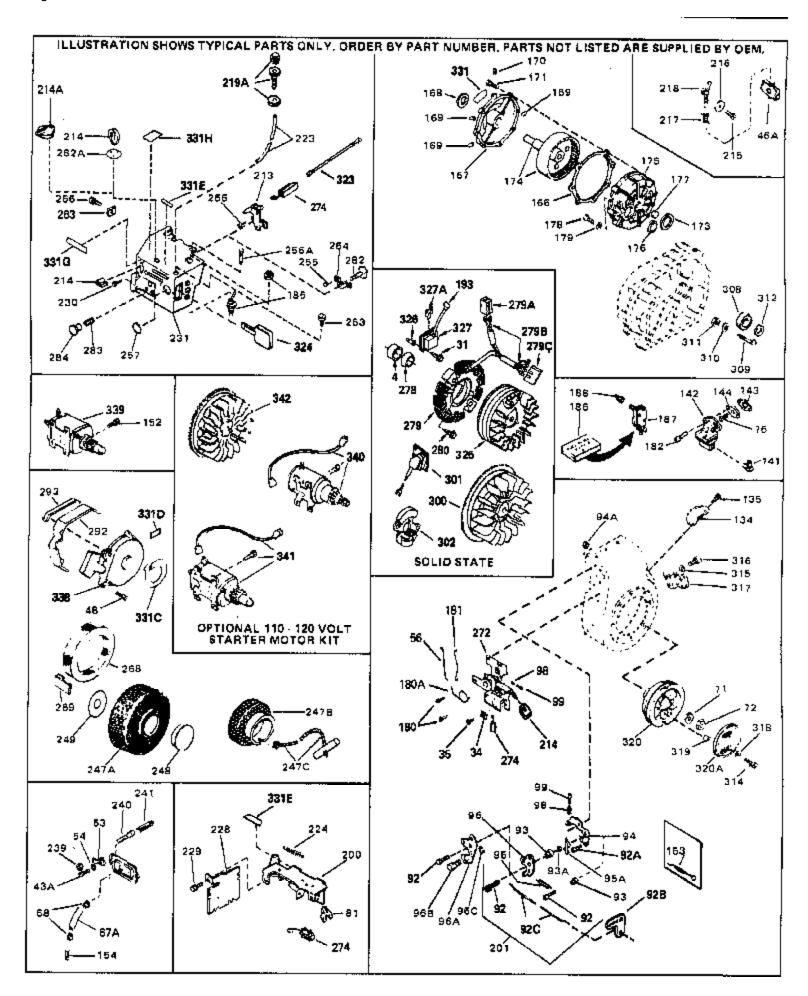

Ref #	Part Number Qty	Description
31	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
35	28942	Screw, 10-32 x 3/8" (Use as required)
43A	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	30824	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	33013	Cover, Bubble
	650736	Screw, 10-16 x 3/8"
	610118	Cover, Spark plug (Use as required)
	33109A	Control Bracket (Incl. 224 & 274)
	570629A	Primer Assy.
	32180C	•
		Line, Primer
	33765	Spring, Extension
	650257	Screw, 8-32 x 5/16"
	33723	Cover, Carburetor
	32398	Bracket, Choke
	28820	Screw, 10-32 x 1/2"
	650760	Screw, 8-32 x 3/8"
	650765	Screw, 10-32 x 1/2"
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31680	Guard, Starter
	32576	Seal, Snow guard
	31718	Decal, Choke
	32187	Decal, "Super Start"
	33722	Decal, Instruction
338	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

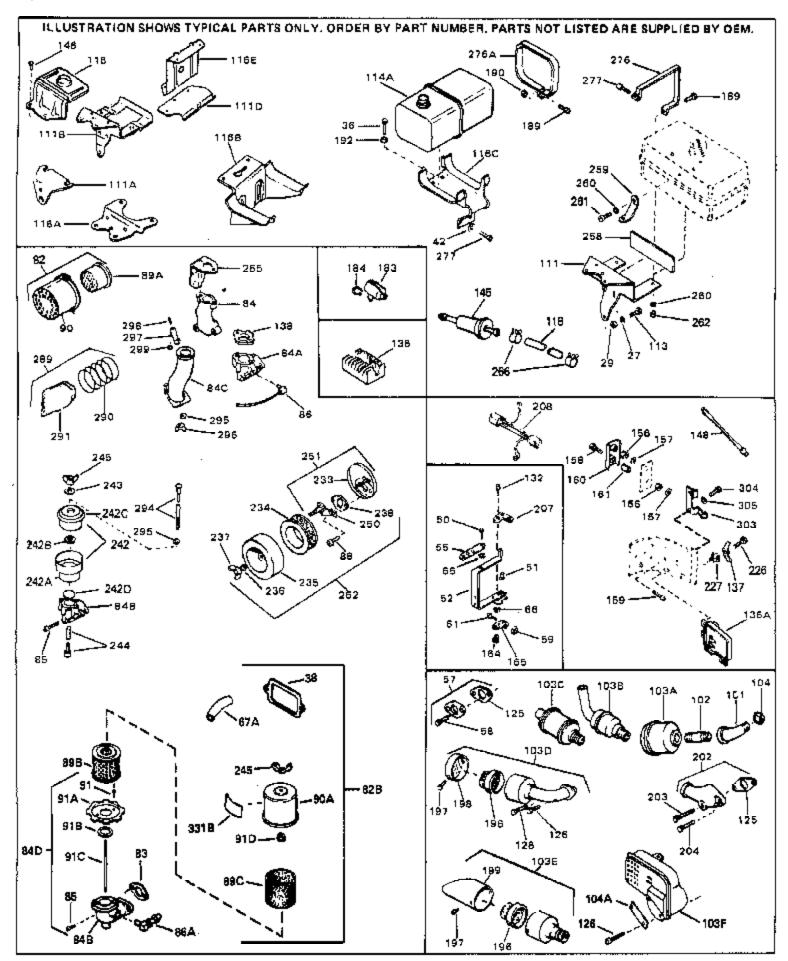

Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
57	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196		Screw, 5/16-18 x 3/4" (Use as require d)
59	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
66	29918		Lockwasher, #8 E.T.
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
5 _	. 60 .=.		331B) (Use as required)
0.4D	24040		, ,
6 4 D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only) NOTE: 130010 thru 10C & 11 used in early production only.
			used in early production only.
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	33353		Bracket, Lower fuel tank
	650561		Screw, 1/4-20 x 5/8"
	33352A		Plate, Upper fuel tank mounting
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	792020		Screw, 1/4-20 x 2-1/4"
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069 31288		Wire Assy., Alternator adapter (6-3/4 ") Exp. Adapter Kit (Incl. 125.203.204) (As. rog.)
	650697A		Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	26460		Clamp, Fuel line
200	20100		Olamp, i del illie