



		Qty	
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (3/32" OS) (Incl. 9)
			, , ,
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	22507		Cronkahaft (Inal. 12.9.12)
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	29668		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
			·
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
37	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	650690		Washer, Belleville (Use as required)
4211	00000		vvasi ici, Delleville (Ose as requireu)

42 42 43 45 46 47 50	Part Number 26073 650691 650128 27915A 30195A 30196 650548 32326A	Qty	Description Washer (Use as required) Washer, Flat (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62 63A	30205 30206 29216 650152 29826 29642 30699C 30699B		Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72	30700 650494 29918 35350 29747B 31754A 650815 8116 29536		Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Housing, Blower Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 79 80	650561 31688A 29752 650572 730164		Screw, 1/4-20 x 5/8"  * Gasket, Carburetor  Nut & Lockwasher Assy., 1/4-28  Screw, 1/4-28 x 1-1/8"  Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)  (Use as required)
	27272A 31691		* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 97 98 99 100 106 107 108 109 110	28820 30727 31715 31902 32924 650688 31757 31845 30591 30588A 30590A 29193 30063 410144B		Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Ground Wire Spring, Compression Screw, 10-32 x 1" Base, Engine mounting Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Screw, 1/4-20 x 1/2" Fuel Cap (White Plastic)(Std)(As requ ired)

Ref #	Part Number	Qtv [	Description
	33032	F	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 127 128 129 130 131 133 139 149 193 205 209 266 270 274 287 287 331B 331A 332 333	35355 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30972 30747 610118 650561 30939A 26460 31461 610973 27275 34246 31752 34346 30547A 30548B 631021 631453	F F F S E S V S M E S S E O O S O O E T O O C C C O O II	Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm) (Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Bracket, Choke control Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Clamp, Fuel line Bushing, Crankshaft (Use as required) Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
337	610689A	N a p ii	for breakdown)  Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference burposes only. Order component parts individually, as shown parts list. (Refer to Division 5, Section B, page 24 for
343	33239A		oreakdown) Gasket Set (Incl. items marked*)

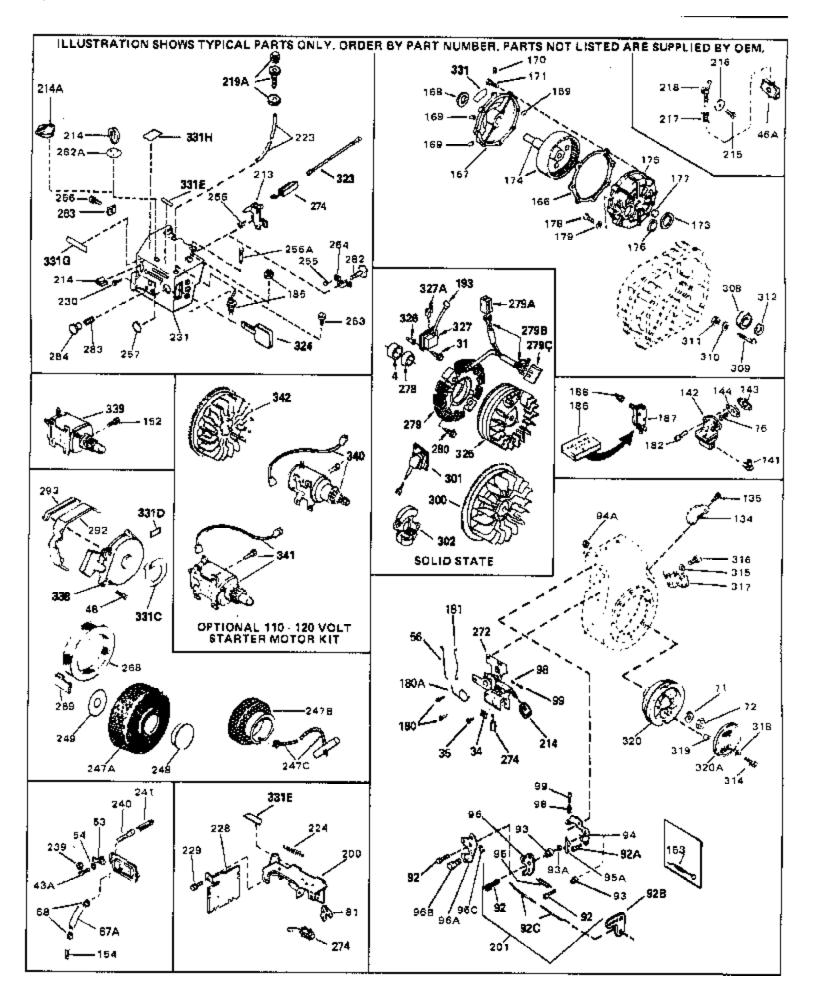

Dof #	Part Number Qty	Doscription
	650489	Description Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
		·
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	30206	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	650399	Screw, 10-32 x 5/8" (Supplied by OEM)
	30312	Screw, 10-32 x 1/2"
	31879	Link, Governor lever-to-bellcrank
	30712	Lever, Bellcrank
	29530	Bushing, Bellcrank
	28562	Bushing, RPM adjusting lever
	33450	Nut, Lock
	30199A	Bracket, Speed control (Incl. 98 & 99)
	30202	Spring, Extension
	30201A	Lever, Speed control
	32924	Spring, Compression
	650688	Screw, 10-32 x 1"
	610118	Cover, Spark plug (Use as required)
201	730152	Control Bracket (Incl. 92, 92A, 92B,93, 93A,94, 95, 95A &
		96)
263	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	650800	Screw, 10-24 x 5/8"
	650147	Washer, Flat
	28942	Screw, 10-32 x 3/8"
	31755	Bracket, Guard
	650583	Washer, Flat
	31880	Spacer, Screen
	31756	Screen, Air
	31753	Pulley, Rope starter
	32187	Decal, "Super Start"
	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
0.10	000202	motor kit may have been added to this engine. It can be
		added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel (see#342). Refer to service
		number stamped on end cap of motor, or on decal, for
		identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using
		110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point
		ignition) (Ring gear flywheel required on engines using
		110-120 volt starter kits listed above)
0.40	C1100E	,
342	611085	Flywheel (Minimum ring gear flywheel required on engines
		using 110-120 volt starter kits listed above) (Use with Solid
		State ignition)

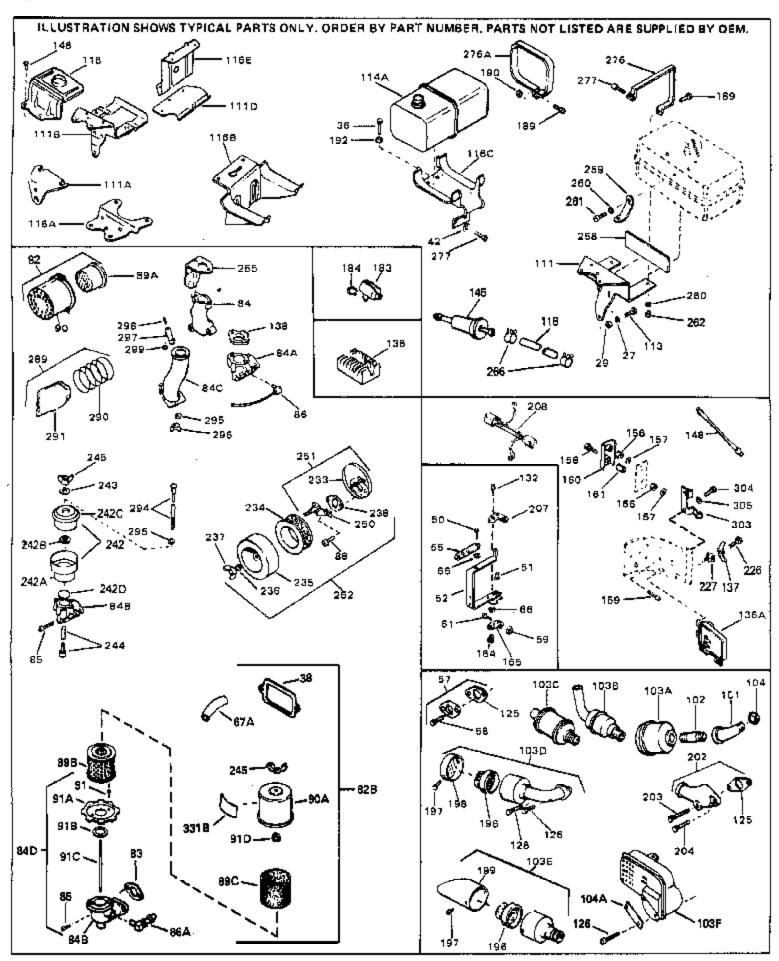

Pof #	Part Number (	Oty Description
	Part Number 0	Qty Description  Lockwasher, 1/4" (Use as required)
		• • •
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
52	32326A	Lever, Governor (New lever does not need 1 of
-		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	
		Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
00	070704	
	27272A	* Gasket, Air cleaner
	31988	Elbow, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
85	650163	Screw, 10-32 x 7/8"
88	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	29574	Muffler Elbow
	30244	Muffler Nipple
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	29633	Muffler
	32862	Conduit Nut
	30063	Screw, 1/4-20 x 1/2"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production )
148	34067	Wire Assy., Alternator adapter (4-1/4 ")
148	34069	Wire Assy., Alternator adapter (6-3/4 ")
202	31288	Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	26460	Clamp, Fuel line
	730512	Kit. Pre-cleaner (Incl 290 & 291)
		,
	31667	Spring, Pre-cleaner bag
	31668	Bag, Pre-cleaner
331B	31752	Decal, Air cleaner