


		Qty	
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	34889		Crankshaft (Incl. 12 & 13)
	29783		· · · · · · · · · · · · · · · · · · ·
			Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (3.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
22	34034		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
24	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	33893A		Tube, Oil filler
	34011A		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		"O" Ring
	650489		Screw, 1/4-20 x 5/8"  * Cooket Culinder bood
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
41	20723		Ouver, vaive spring

Def #	Dowt Ni week ou	N. Dagarintian
		Oty Description  Weaker Polleville (Llee on required)
	650690	Washer, Belleville (Use as required)
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650128	Screw, 10-24 x 1/2"
45	27915A	* Gasket, Intake
46	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
	32326A	Lever, Governor (New lever does not need 1 of
52	32320A	51,66,132,164,165,207)
		31,00,132,104,103,207)
55	30205	Bracket, Adjusting
56	30824	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	· · · · · · · · · · · · · · · · · · ·
		Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
72	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
70	252504	. ,
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
02A	730104	
		(Use as required)
83	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
	650521	Screw, 10-32 x 1-1/8"
	30727	Element, Air cleaner
90	31715	Body, Air cleaner
97	31902	Ground Wire
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	31757	Base, Engine mounting
	31845	
		Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
115	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)

Ref #	Part Number	Qty	Description
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 127 128 129 130 131 133 149 193 205 209 246 247 266 270 271 274 287 331A 332 333	35355 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30747 610118 650561 30939A 32125 590417 26460 31461 33876 610973 27275 34246 34346 30547A 30548B 631021		Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
	631454		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	611038		Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)



Ref #	Part Number	Otv	Description
	650489	Qty	Screw, 1/4-20 x 5/8"
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
	29716		Screw, 1/4-28 x 7/16"
	30824		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610118		Cover, Spark plug (Use as required)
	33110A		Control Bracket (Incl. 224 & 274)
	30826		Spring, Extension
	30820		Baffle, Heat
	28942		Screw, 10-32 x 3/8"
	650764		Nut, "U" Type (Use as required)
	32203		Air cleaner, Starter
	32203		Bracket, Starter air cleaner
	610973		Terminal Ass'y. (As req. on late prod uction)
	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
330	330420		breakdown)
			bleakdowily
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for
			identifica
0.40	000444		
342	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point
			ignition) (Ring gear flywheel required on engines using
			110-120 volt starter kits listed above)
3/12	611085		Flywheel (Minimum ring gear flywheel required on engines
J <del>4</del> 2	011000		using 110-120 volt starter kits listed above) (Use with Solid
			State ignition)
			Ciclo ignition)

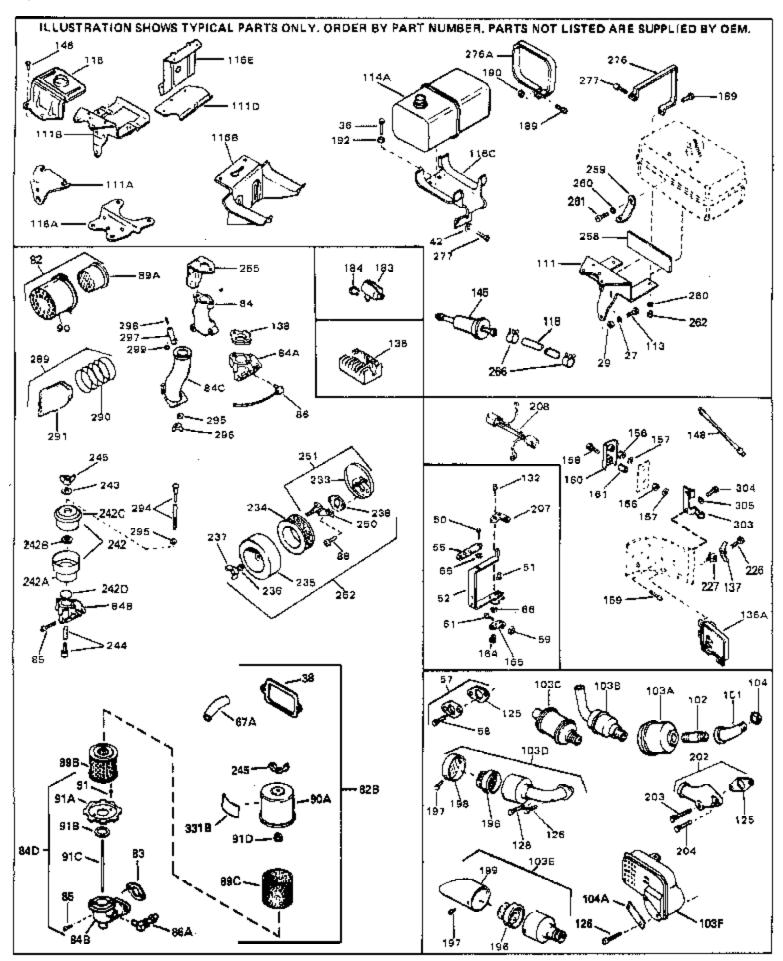

Ref #	Part Number Q	ty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
	32326A	Lever, Governor (New lever does not need 1 of
32	02023, 1	51,66,132,164,165,207)
55	30205	Bracket, Adjusting
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
84A	31431	Elbow, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
		in 730561 assembly only)
	650521	Screw, 10-32 x 1-1/8"
	31715	Body, Air cleaner
	29574	Muffler Elbow
	30244	Muffler Nipple
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	29633	Muffler
104	32862	Conduit Nut
	30063	Screw, 1/4-20 x 1/2"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
132	650548	Screw, 8-32 x 5/16" (Early production )
138	30936	Flange, Air cleaner
148	34067	Wire Assy., Alternator adapter (4-1/4 ")
148	34069	Wire Assy., Alternator adapter (6-3/4 ")
202	31288	Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as requi red)
	26460	Clamp, Fuel line
	730512	Kit. Pre-cleaner (Incl 290 & 291)
	31667	Spring, Pre-cleaner bag
	31668	Bag, Pre-cleaner
		<del>-</del>