

H70-130194C Engine Parts List #1

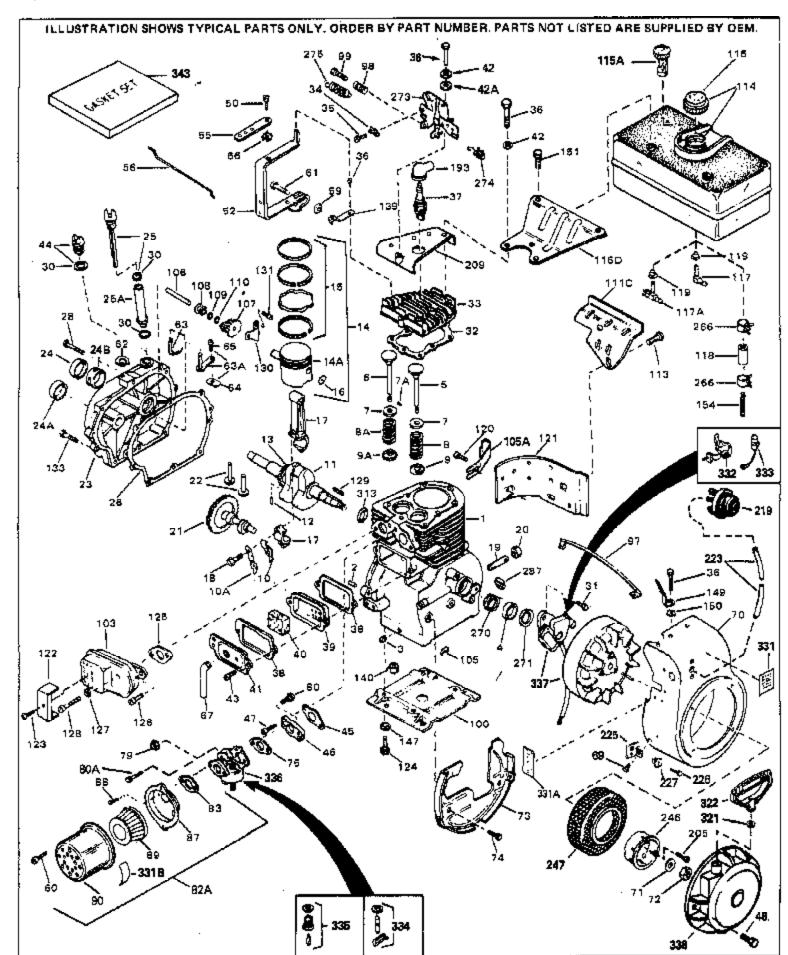


	Part Number	Qty	Description
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
7A	20810		Pin, Valve spring retainer (Use as re quired)
8A	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	32880		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
	27884		
15	27004		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
15	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
			•
	31451A		Cylinder Cover (Incl.24, 106, 309, 31 0 & 311)
	28460		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
25	34011A		Dipstick, Oil (Incl. 30)
	33893A		Tube, Oil filler
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		"O" Ring
			•
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		
			Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	07000		* Coolist Dreather an ion
38	27896A		* Gasket, Breather cover
38	27896A 28423		Body, Breather
38 39			

		Aty Description
42A	650690	Washer, Belleville (Use as required)
42	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650128	Screw, 10-24 x 1/2"
		•
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
47	30196	Screw, 5/16-18 x 3/4"
48	29716	Screw, 1/4-28 x 7/16"
50	650548	Screw, 8-32 x 5/16"
	32326A	Lever, Governor (New lever does not need 1 of
02		51,66,132,164,165,207)
55	30205	· · · · · <b>,</b>
		Bracket, Adjusting
	32327	Link, Throttle
	29216	Nut, Lock, 10-32
60	650152	Screw, 8-32 x 3/8"
61	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
65	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	
		Screw, 5/16-24 x 21/32"
	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
72	8116	Nut, Hex
73	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
10		as required) (Point Ignition)
7/	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
		(Use as required)
83	27272A	* Gasket, Air cleaner
	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
07	01001	early production only.
88	28820	Screw, 10-32 x 1/2"
89	30727	Element, Air cleaner
	31715	Body, Air cleaner
	29538	Base, Engine mounting
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
109	30590A	Washer, Flat
	29193	Ring, Retaining
	34158	Bracket, Fuel tank
	650561	Screw, 1/4-20 x 5/8"
113		

Ref #	Part Number	Qty Description
	34186A	Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355 or 35650.
	410144B 33032	Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
116D 117A 118 118 118 120 121 124 127 128 129 130 131 133 149 150 151 193 205 209 246 247 266 270 271 274 287 287 331 331A 331B 332 333 334	35355 34159 32961 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30747 650890 650665 610118 650561 30939A 32125 590417 26460 31461 33876 610973 27275 34246 550223 34346 31752 30547A 30548B 631021	Fuel Cap (Use as required) Plate, Fuel tank mounting Valve, Shut-off Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Lockwasher Screw, 1/4-15 x 7/8" Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Name Decal, Instruction Decal, Air cleaner Condenser Inlet Needle, Seat & Clip Assy.
	631453 610689A	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown) Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference
		purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)

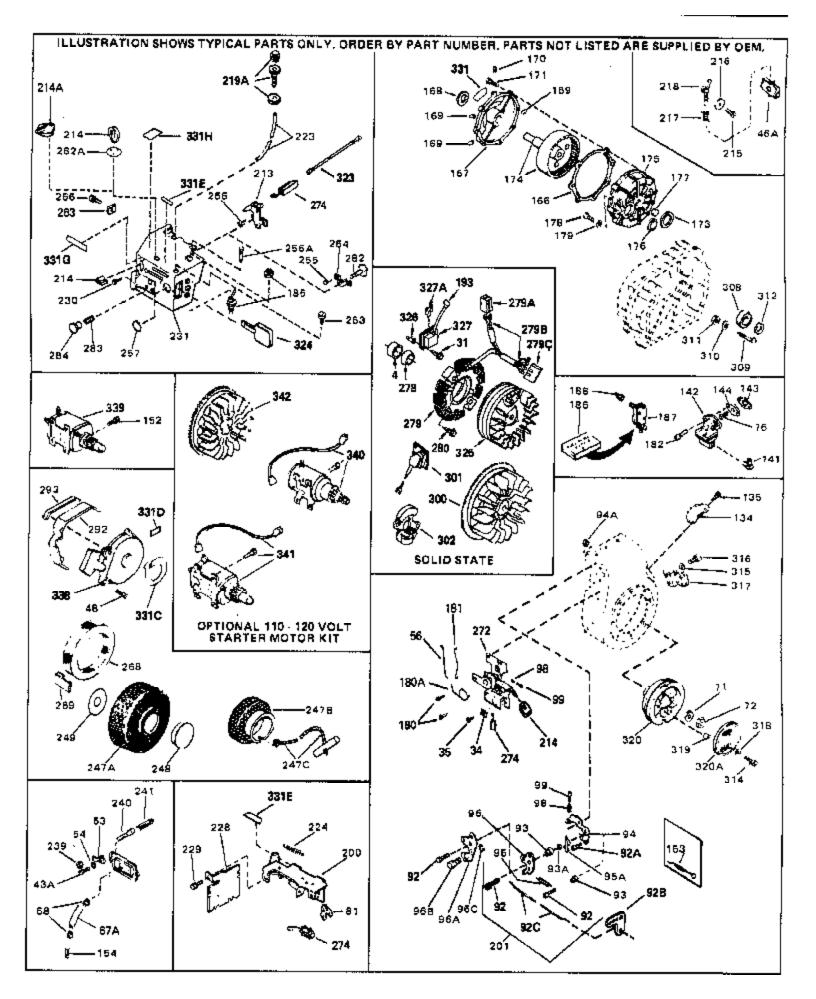

		/ Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	32327	Link, Throttle
71	650815	Washer, Belleville
	8116	Nut, Hex
76	9556	Plug, Pipe, 1/8-27
	610118	Cover, Spark plug (Use as required)
	33450	Nut, Lock
240	30845A	Bolt, Governor adjusting
	30886A	Spring, Governor bolt
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	31793	Bearing, Ball
	31855	Retainer, Bearing
	650778	Washer, Lock
311	650580	Nut, Lock
	31792	Washer, Thrust
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel (see#342). Refer to service
		number stamped on end cap of motor, or on decal, for
		identifica
<b></b>	000///	
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
0.40	211212	,
342	611042	Flywheel (Used on Type letters H and above) (Std. Point
		ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
		,
342	611085	Flywheel (Minimum ring gear flywheel required on engines
		using 110-120 volt starter kits listed above) (Use withSolid
		State ignition)
		State ignition)

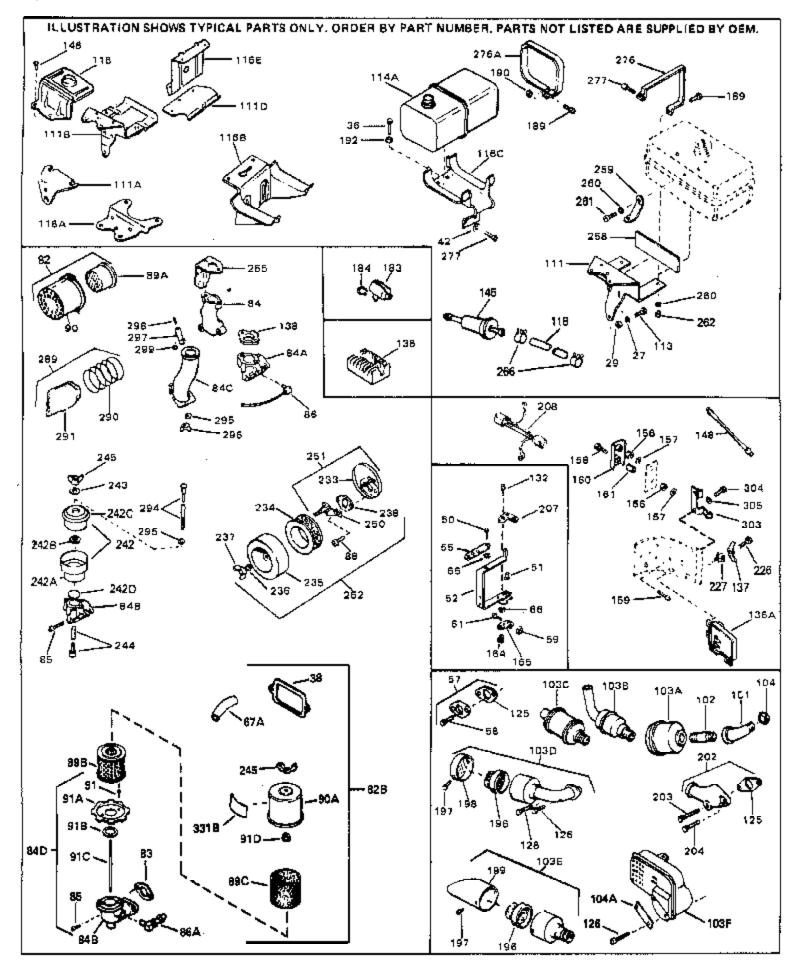

Ref #	Part Number	Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
	32326A	Lever, Governor (New lever does not need 1 of
52	32320A	51,66,132,164,165,207)
		51,00,152,104,105,207)
55	30205	Bracket, Adjusting
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 9
020		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines w
		an externally vented fully adjustable carburetor)
		, , , , , , , , , , , , , , , , , , ,
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
83	27272A	* Gasket, Air cleaner
	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (U
040	54619	in 730561 assembly only)
		III 7 5050 T assembly Only
88	28820	Screw, 10-32 x 1/2"
90	31715	Body, Air cleaner
101	30209	Elbow, Exhaust (45 degree)
102	30244	Muffler Nipple
103E	391026	Opt. Spark Arrest Muffler (Incl. 196, 1 97, 199)
	29633	Muffler
	32862	Conduit Nut
	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
100	000000+/1	
	6505/18	
132	650548 24067	Screw, 8-32 x 5/16" (Early production)
132 148	34067	Wire Assy., Alternator adapter (4-1/4 ")
132 148 148	34067 34069	Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ")
132 148 148 202	34067 34069 31288	Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
132 148 148 202 203	34067 34069 31288 650697A	Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as required)
132 148 148 202 203 204	34067 34069 31288 650697A 6021A	Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as requi red) Screw, 5/16-18 x 1-1/2" (Use as requi red)
132 148 148 202 203 204	34067 34069 31288 650697A	Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as required)