
H70-130196B Engine Parts List #1

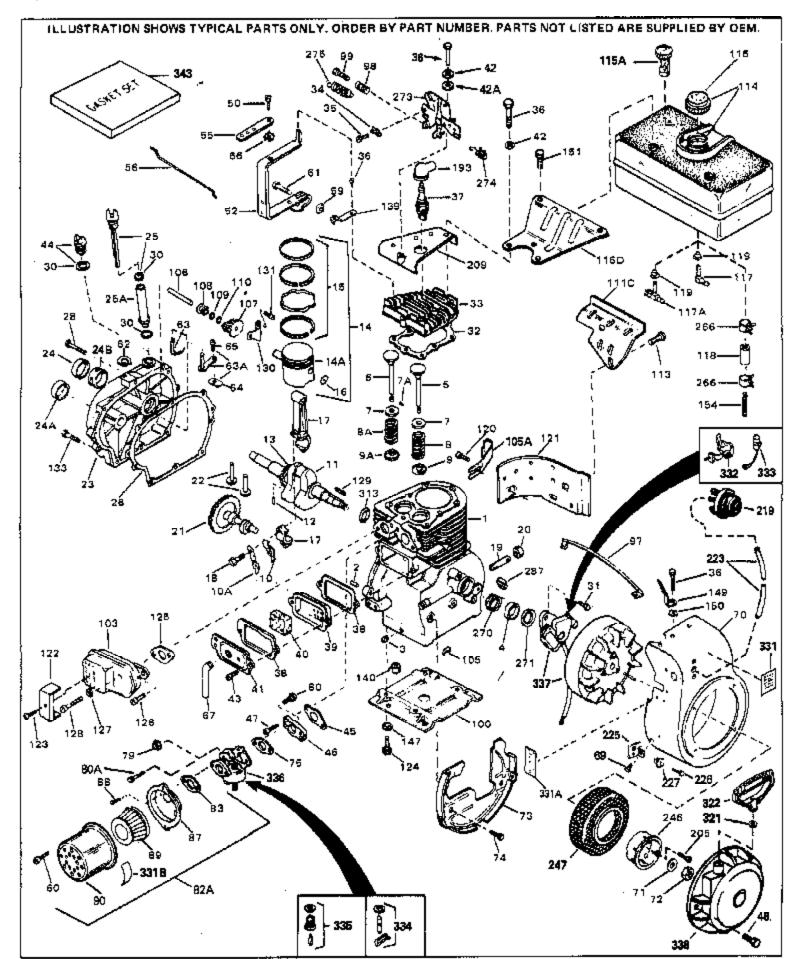


Ref #	Part Number	Qtv	Description
1			Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
-	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810		Pin, Valve spring retainer (Use as re quired)
7	27882		Cap, Upper valve spring
8A	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
	32350		
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
15	2:001		servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518		Piston, Pin & Ring Set (.010" OS)
14	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		
			Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	34011A		Dipstick, Oil (Incl. 30)
	33893A		Tube, Oil filler
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		"O" Ring
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
41	28425		Cover, Valve spring

		Qty Des	
	26073		sher (Use as required)
42	650691	Was	sher, Flat (Use as required)
42A	650690	Was	sher, Belleville (Use as required)
43	650128		ew, 10-24 x 1/2"
	27915A		asket, Intake
	30195A		nge, Carburetor (Incl. 79 & 80)
	30196		ew, 5/16-18 x 3/4"
	650548		ew, 8-32 x 5/16"
52	32326A		er, Governor (New lever does not need 1 of 66,132,164,165,207)
55	30205	Brad	cket, Adjusting
56	30206	Link	<, Throttle
59	29216	Nut,	, Lock, 10-32
60	650152		ew, 8-32 x 3/8"
	29826		ew, 10-32 x 3/4"
	29642		g, Retaining
	30699B		vernor Rod Ass'y. (This one-piece governor rodis no longer
03	20033D		
		use	d. It is replaced by 30699C ass'y.,Ref. no. 63A)
	30699C		d Assy., Governor (Incl. 64 & 65)
64	30700	Yok	te, Governor
65	650494	Scre	ew, 6-40 x 5/16"
66	29918		kwasher, #8 E.T.
	35350		be, Breather
	29747B		ew, 5/16-24 x 21/32"
	31754A		using, Blower
			•
	650815		sher, Belleville
	8116		, Hex
73	29536		wer Housing Baffle (without electric starter knock-out) e as required)
73	35256A		wer Housing Baffle (with electric starter knock-out) (Use required) (Point Ignition)
74	650561	Scre	ew, 1/4-20 x 5/8"
	31688A		asket, Carburetor
	29752		& Lockwasher Assy., 1/4-28
	650572		ew, 1/4-28 x 1-1/8"
82A	730164		Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) e as required)
83	27272A	* Ga	asket, Air cleaner
	31691		cket, Air cleaner NOTE: 130010 thru 10C & 11 used in
			ly production only.
	28820	Scre	ew, 10-32 x 1/2"
88	650521	Scre	ew, 10-32 x 1-1/8"
89	30727		ment, Air cleaner
	31715		dy, Air cleaner
	31902		und Wire
	32924		ing, Compression
	650688		ew, 10-32 x 1"
	31757		
			se, Engine mounting
	31845		aft, Mechanical governor
	30591		ar Assy., Governor (Incl. 109)
	30588A		ool, Governor
109	30590A	Was	sher, Flat
110	29193	Ring	g, Retaining
113	30063		ew, 1/4-20 x 1/2"
	410144B		el Cap (White Plastic)(Std)(As required)

		Qty Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 127 128 129 130 131 133 139 149 193 205 209 266 270 274 287 287 331B 331A 332		Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Bracket, Choke control Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Clamp, Fuel line Bushing, Crankshaft (Use as required) Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Air cleaner Decal, Instruction Contact Assy., Breaker Condenser
	631021 631453	Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)



	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
56	30206	Link, Throttle
71	650815	Washer, Belleville
72	8116	Nut, Hex
92A	650399	Screw, 10-32 x 5/8" (Supplied by OEM)
92	30312	Screw, 10-32 x 1/2"
	31879	Link, Governor lever-to-bellcrank
	30712	Lever, Bellcrank
	29530	Bushing, Bellcrank
	28562	Bushing, RPM adjusting lever
	33450	Nut, Lock
	30199A	Bracket, Speed control (Incl. 98 & 99)
	30202	Spring, Extension
	30201A	Lever, Speed control
	32924	Spring, Compression
	650688	Screw, 10-32 x 1"
	610118	
		Cover, Spark plug (Use as required)
201	730152	Control Bracket (Incl. 92, 92A, 92B,93, 93A,94, 95, 95A &
		96)
263	650764	Nut, "U" Type (Use as required)
274	610973	Terminal Ass'y. (As req. on late prod uction)
	650597	Screw, 10-24 x 5/8"
	27261	Washer
	28942	Screw, 10-32 x 3/8"
	31755	Bracket, Guard
	650583	Washer, Flat
	31880	Spacer, Screen
	31756	Screen, Air
	31753	Pulley, Rope starter
	32187	
		Decal, "Super Start" Storter Mater Kit (110, 120, Volt) This 110, 120, volt storter
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter
		motor kit may have been added to this engine. It can be
		added only if cylinder hasdrilled and tapped starter mounting
		bosses and a ring gear flywheel (see#342). Refer to service
		number stamped on end cap of motor, or on decal, for
		identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using
012	00011/1	110-120 volt starter kits listed above)
		,
342	611042	Flywheel (Used on Type letters H and above) (Std. Point
		ignition) (Ring gear flywheel required on engines using
		110-120 volt starter kits listed above)
0.40	C1400F	,
342	611085	Flywheel (Minimum ring gear flywheel required on engines
		using 110-120 volt starter kits listed above) (Use withSolid
		State ignition)

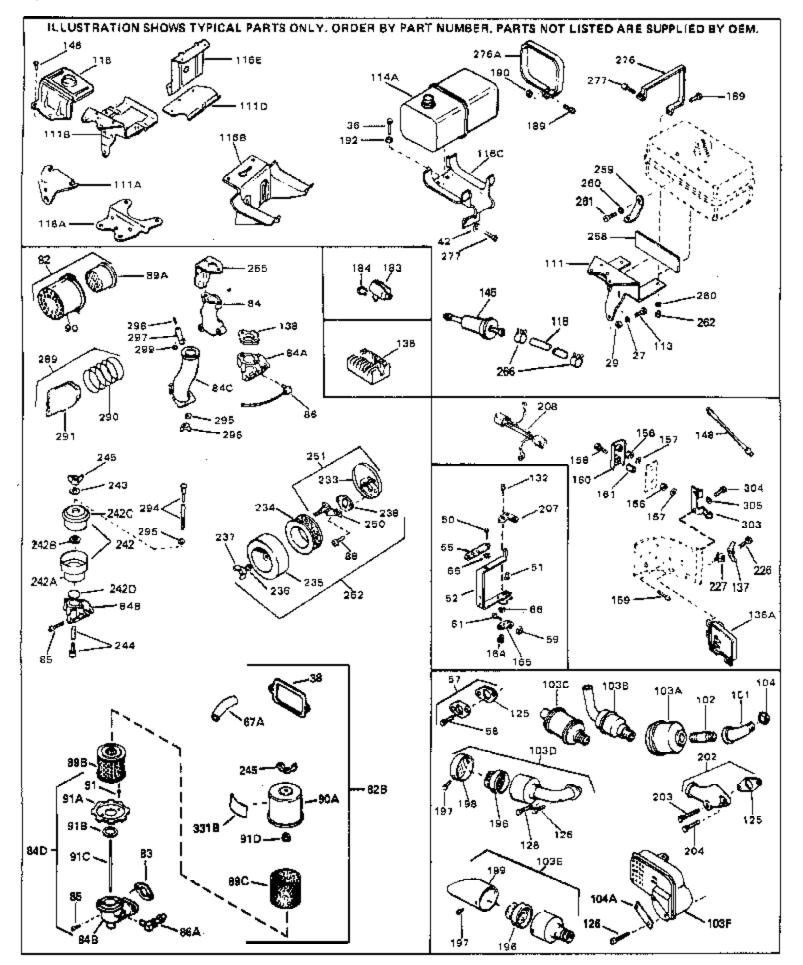

Part Number 27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	QtyDescriptionLockwasher, 1/4" (Use as required)Screw, 5/16-18 x 2-1/2" (Use as required)Screw, 5/16-18 x 2-1/4" (Use as required)Screw, 5/16-18 x 2" (Use as required)* Gasket, Breather coverWasher (Use as required)Washer, Flat (Use as required)Screw, 8-32 x 5/16"Rivet, Split (Use in early production)Lever, Governor (New lever does not need 1 of51,66,132,164,165,207)
30205 730130 30196 29216 29826 29918 730127	Bracket, Adjusting Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
27272A 34819	* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
31988 28820 650521 31715 29574 30244 29633 391026 32862 30063 29774 30705 30962 650694A 650548 34067 34069 31288 650697A 6021A 26460 730512 31667 31668 31752	Elbow, Air cleaner Screw, 10-32 x 1/2" Screw, 10-32 x 1-1/8" Body, Air cleaner Muffler Elbow Muffler Nipple Muffler Opt. Spark Arrest Muffler (Incl.196,1 97,199) Conduit Nut Screw, 1/4-20 x 1/2" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production) Wire Assy., Alternator adapter (4-1/4 ") Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) (As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required)
	650697A 650695A 650694A 27896A 26073 650591 650548 30319 32326A 30205 730130 30196 29216 29826 29918 730127 730561 27272A 34819 31988 28820 650521 31715 29574 30244 29633 391026 32862 30063 29774 30705 30962 650694A 650548 34067 34069 31288 650697A 6021A 26460 730512 31667