



		Qty	Description
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		
			Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
9	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dipper, Oil
	34889		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
10	27001		servicable onlywhen it is pinned to the crankshaft.
1/	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		
			Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
15	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	34011A		Dipstick, Oil (Incl. 30)
	33893A		Tube, Oil filler
			•
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		"O" Ring
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		·
41	20120		Cover, Valve spring

Def #	Dart Normalian	Description
		y Description Washer (Use as required)
	26073	
	650691 650600	Washer, Flat (Use as required)
	650690 650438	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	34712	Flange Carburetor
	30196	Screw, 5/16-18 x 3/4"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	31710	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
		·
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	Screw, 5/16-24 x 21/32"
	31754A	Housing, Blower
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter knock-out)
13	29330	(Use as required)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	650517	Screw, 1/4-20 x 27/32"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
02/1	750104	(Use as required)
		(Use as required)
83	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
88	28820	Screw, 10-32 x 1/2"
	650521	Screw, 10-32 x 1/2 Screw, 10-32 x 1-1/8"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	31902	Ground Wire
	32924	
		Spring, Compression
	650688	Screw, 10-32 x 1"
	31757	Base, Engine mounting
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
115	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)

Ref #	Part Number	Qtv	Description
	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
118 118 118 120 121 124 127 128 129 130 131 133 139 149 193 205 209 247 266 270 274 287 287 331A 332 333	35355 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30972 30747 610118 650561 30939A 35009 26460 31461 610973 27275 34246 34346 30547A 30548B 631021 631453		Fuel Cap (Use as required) Fuel Line (Braided 8-1/4" 21 cm) (Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Bracket, Choke control Clip, Shorting Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Tover, Cylinder head Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Instruction Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
337	611038		for breakdown) Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 39 for
343	33239A		breakdown) Gasket Set (Incl. items marked*)

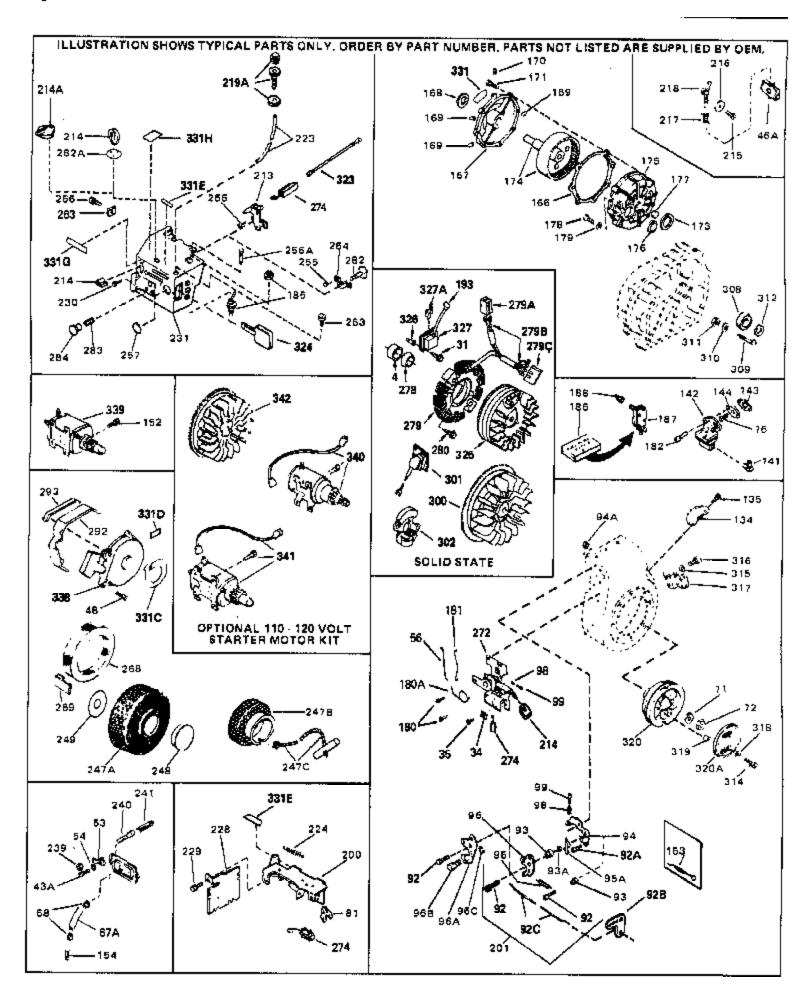

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
56	31710		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	30712		Lever, Bellcrank
	650399		Screw, 10-32 x 5/8" (Supplied by OEM)
	30312		Screw, 10-32 x 1/2"
	31879		Link, Governor lever-to-bellcrank
	29530		Bushing, Bellcrank
	28562		Bushing, RPM adjusting lever
	30199A		Bracket, Speed control (Incl. 98 & 99)
	33450		Nut, Lock
	33374		Spring, Extension
	30201A		Lever, Speed control
	32924		Spring, Compression
	650688		Screw, 10-32 x 1"
	610118		Cover, Spark plug (Use as required)
	730152		Control Bracket (Incl. 92, 92A, 92B,93, 93A,94, 95, 95A &
201	700102		96)
263	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	650597		Screw, 10-24 x 5/8"
	27261		Washer
	28942		Screw, 10-32 x 3/8"
	31755		Bracket, Guard
	650583		Washer, Flat
	31880		Spacer, Screen
	31753		Pulley, Rope starter
	31756		Screen, Air
	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter
J -1 0	33320D		motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for
			identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter kits listed above)
2/12	611042		Flywheel (Used on Type letters H and above) (Std. Point
J-12	0110-12		ignition) (Ring gear flywheel required on engines using
			110-120 volt starter kits listed above)
			•
342	611085		Flywheel (Minimum ring gear flywheel required on engines
			using 110-120 volt starter kits listed above) (Use with Solid
			State ignition)

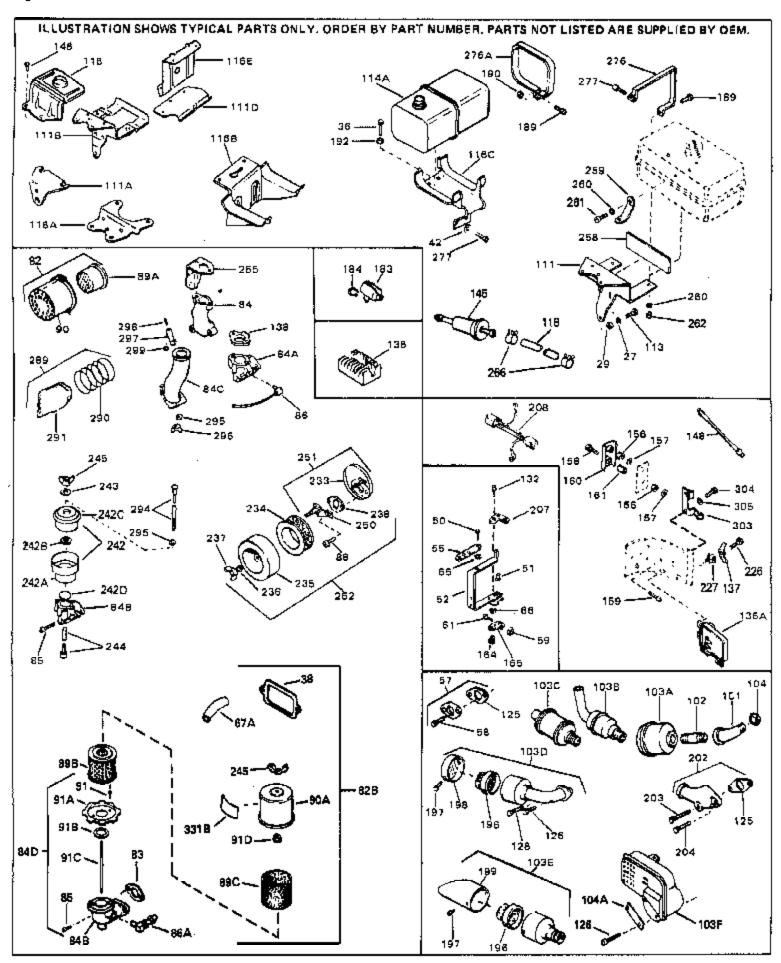

Ref #	Part Number Qt	y Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
	32326A	Lever, Governor (New lever does not need 1 of
JZ	32320A	51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730127	
02	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
_		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
040	34019	in 730561 assembly only)
		in 730001 assembly only)
	31988	Elbow, Air cleaner
88	28820	Screw, 10-32 x 1/2"
88	650521	Screw, 10-32 x 1-1/8"
90	31715	Body, Air cleaner
101	29574	Muffler Elbow
102	30244	Muffler Nipple
103E	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
103A	29633	Muffler
	32862	Conduit Nut
	30063	Screw, 1/4-20 x 1/2"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	26460	Clamp, Fuel line
	730512	Kit. Pre-cleaner (Incl 290 & 291)
	31667	Spring, Pre-cleaner bag
291	31668	Bag, Pre-cleaner