
H70-130198B Engine Parts List #1

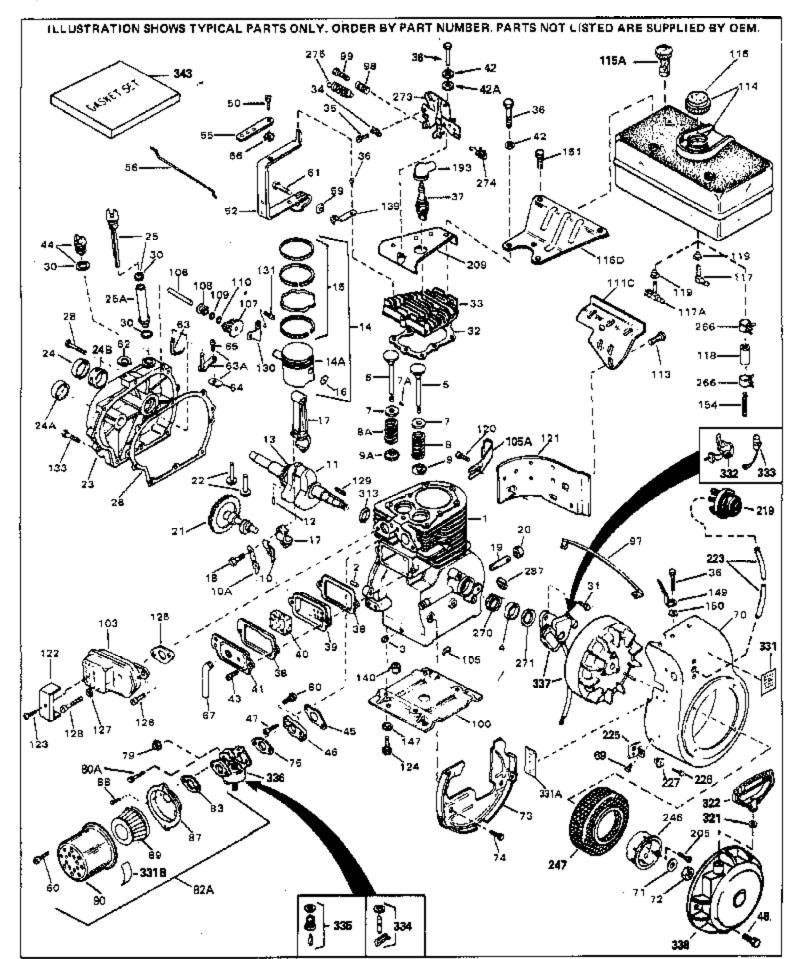


		Qty	Description
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
8A	27881		Spring, Valve
8	27881		Spring, Valve
9A	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
10/1	02000		34242 oil dipper but 650662C screw must be used.)
			54242 OII dipper but 0500020 Screw must be used.)
10	34242		Dipper, Oil
11	32587		Crankshaft (Incl. 12 & 13)
12	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
10	21001		servicable onlywhen it is pinned to the crankshaft.
			servicable onlywhen it is pinned to the crankshalt.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		•
			Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
32	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
38	27896A		* Gasket, Breather cover
39	28423		Body, Breather
			•
40	28424		Element, Breather
	28425		Element, Breather Cover, Valve spring

		/ Description
	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
43	650128	Screw, 10-24 x 1/2"
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	32327	Link, Throttle
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
04	00700	Vala Os ana
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
67	35350	Tube, Breather
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
71	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter knock-out)
10	20000	(Use as required)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	050504	
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
80	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
		(Use as required)
~~	07070 4	
	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
QQ	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	35232	Wire, Ground
	29538	Base, Engine mounting
106	31845	Shaft, Mechanical governor
107	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	650561	Screw, 1/4-20 x 5/8"
	33350 4101 44P	Fuel Tank (Incl. 115 & 117A)
115	410144B	Fuel Cap (White Plastic)(Std)(As required)

Ref #	Part Number C	Qty Description
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use a required)
115	35355	Fuel Cap (Use as required)
	33395	Fitting, Fuel strainer & elbow (Incl. 119)
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	33679	Bushing, Fuel fitting
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	650542	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	610118	Cover, Spark plug (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30939A	Cover, Cylinder head
	32125	Cup, Starter
	590417	Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331	550223	Decal, Name
331A	34346	Decal, Instruction
331B	31752	Decal, Air cleaner
332	30547A	Contact Assy., Breaker
333	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631453	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 10
		for breakdown)
337	610689A	Magneto NOTE: The complete magneto is not available as
		an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
2/2	33239A	Gasket Set (Incl. items marked*)
343		Jashel Jel (III. Ilettis IIIdikeu)



		ty Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	32327	Link, Throttle
	650815	Washer, Belleville
	8116	Nut, Hex
	610118	Cover, Spark plug (Use as required)
	33450	Nut, Lock
	30845A	Bolt, Governor adjusting
	30886A	Spring, Governor bolt
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	550223	Decal, Name
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

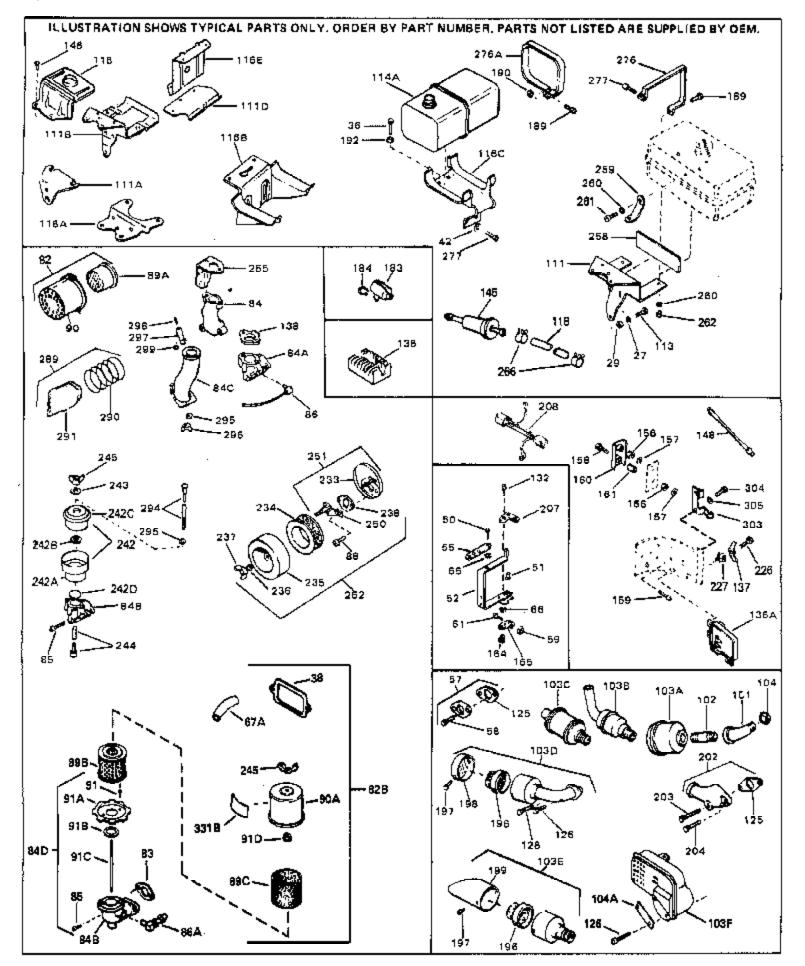

Ref #	Part Number Qt	y Description
	27513	Lockwasher, 1/4" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early production)
52	32326A	Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
-		331B) (Use as required)
83	27272A	* Gasket, Air cleaner
	31988	Elbow, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
85	650163	Screw, 10-32 x 7/8"
88	28820	Screw, 10-32 x 1/2"
90	31715	Body, Air cleaner
101	29574	Muffler Elbow
	30244	Muffler Nipple
	29633	Muffler
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862	Conduit Nut
	33353	Bracket, Lower fuel tank
	650561	Screw, 1/4-20 x 5/8"
	33352A	Plate, Upper fuel tank mounting
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	792020 34067	Screw, $1/4-20 \ge 2-1/4$ "
	34067 34069	Wire Assy., Alternator adapter (4-1/4 ")
	31288	Wire Assy., Alternator adapter (6-3/4 ") Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, $5/16-18 \times 2-1/2$ (Use as required) Screw, $5/16-18 \times 1-1/2$ " (Use as required)
	26460	Clamp, Fuel line
	31752	Decal, Air cleaner
5510		