


		Qty	
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	34242		Dippor Oil
			Dipper, Oil
	32670		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14A	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		
			Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	34011A		Dipstick, Oil (Incl. 30)
	33893A		Tube, Oil filler
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		"O" Ring
	650516		Screw, 1/4-20 x 1-1/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
41	20720		Oover, valve spiling

Ref #	Part Number	Qty	Description
	650690		Washer, Belleville (Use as required)
	26073		Washer (Use as required)
			, ,
42	650691		Washer, Flat (Use as required)
43	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	30195A		Flange, Carburetor (Incl. 79 & 80)
47	30196		Screw, 5/16-18 x 3/4"
48	29716		Screw, 1/4-28 x 7/16"
	650548		
			Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
			- ,, - ,, - ,
55	30205		Bracket, Adjusting
56	32327		Link, Throttle
	29216		Nut, Lock, 10-32
60	650152		Screw, 8-32 x 3/8"
61	29826		Screw, 10-32 x 3/4"
	29642		
			Ring, Retaining
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
			used. It is replaced by 300990 assy., Net. 110. 03A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
66	29918		Lockwasher, #8 E.T.
67	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
70	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
71	650815		Washer, Belleville
	8116		Nut, Hex
			·
/3	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
			as required) (Point Ignition)
			as required) (i official interpretation)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
79	29752		Nut & Lockwasher Assy., 1/4-28
80	650572		Screw, 1/4-28 x 1-1/8"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
OZA	730104		·
			(Use as required)
00	070704		* O - al at A's also as a
	27272A		* Gasket, Air cleaner
87	31691		Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
			early production only.
			daily production only.
88	28820		Screw, 10-32 x 1/2"
	30727		Element, Air cleaner
	31715		Body, Air cleaner
97	31582		Ground Wire
	29538		Base, Engine mounting
	29443		Clip, Wire
106	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
			· · · · · · · · · · · · · · · · · · ·
	30588A		Spool, Governor
109	30590A		Washer, Flat
	29193		Ring, Retaining
	650561		Screw, 1/4-20 x 5/8"
114	31301		Fuel Tank (Incl. 115)
115	410144B		Fuel Cap (White Plastic)(Std)(As requ ired)
. 10	- · · · -		

Ref #	Part Number	Qty	Description
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
117	28584		Fitting, Fuel strainer & elbow
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
127	26073		Washer (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	32125		Cup, Starter
	590417		Screen, Starter cup
	26460		Clamp, Fuel line
	31461 33876		Bushing, Crankshaft (Use as required)
	610973		Gasket, Stator
	27275		Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	34346		Decal, Instruction
	31752		Decal, Air cleaner
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100
			for breakdown)
337	610953		Magneto (w/ring gear) (12 Volt) (3 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 33 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)



Ref #	Part Number	Qty	Description
31	650516		Screw, 1/4-20 x 1-1/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
	29716		Screw, 1/4-28 x 7/16"
56	32327		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
134	33013		Cover, Bubble
135	650736		Screw, 10-16 x 3/8"
	610118		Cover, Spark plug (Use as required)
	33450		Nut, Lock
	30845A		Bolt, Governor adjusting
	30886A		Spring, Governor bolt
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

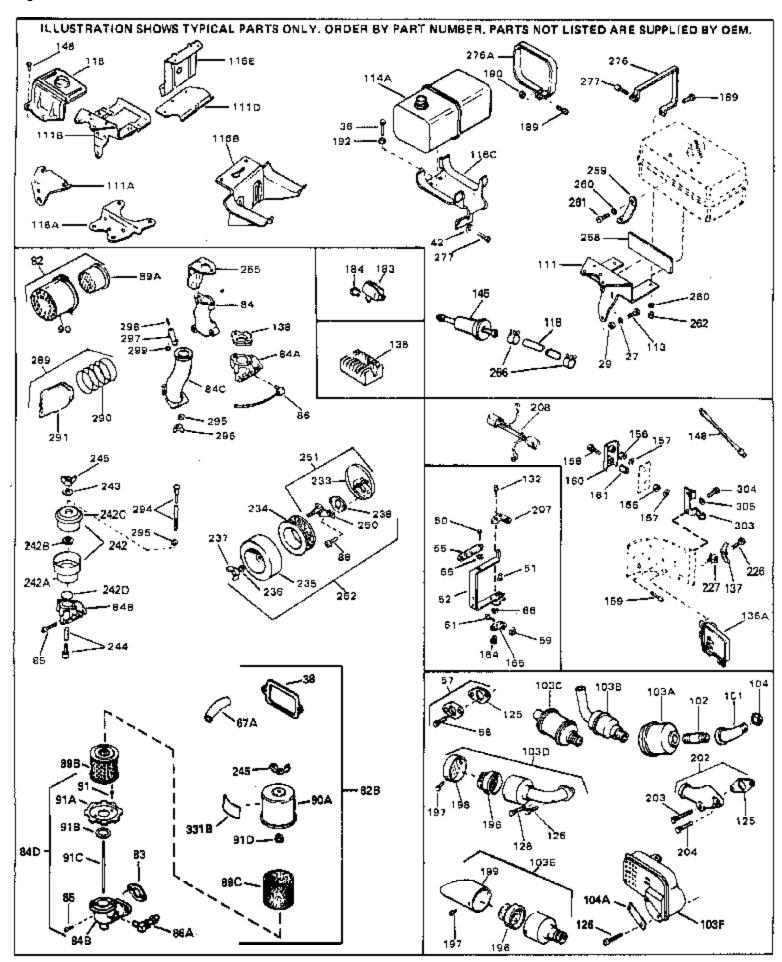

Ref #	Part Number	Qty	Description
36	27513 650697A		Lockwasher, 1/4" (Use as required) Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A 26073		* Gasket, Breather cover Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32 Serow 10-32 x 3/4"
	29826 29918		Screw, 10-32 x 3/4" Lockwasher, #8 E.T.
	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
<u>02</u>	700127		331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
	28820		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	29574		Muffler Elbow
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862 31694		Conduit Nut Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A		Screw, 5/16-18 x 2" (Use as required)
132	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34068		Wire Assy., Alternator adapter (6-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	6201		Screw, 1/4-28 x 7/8"
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A 29752		Screw, 5/16-18 x 1-1/2" (Use as requi red) Nut, Lock
	29752 26460		Clamp, Fuel line
	31697		Strap, Fuel tank
	29212		Screw, Hex hd. Sems, 1/4-28 x 7/16
	31752		Decal, Air cleaner
			•