



Ref #	Part Number	Qtv	Description
	32586C	,	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
8	27881		Spring, Valve
A8	27881		Spring, Valve
9A	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
10/1	02000		34242 oil dipper but 650662C screw must be used.)
			,
	34242		Dipper, Oil
11	32670		Crankshaft (Incl. 12 & 13)
12	29783		Crankshaft Gear Pin (Early production )
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
144	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"  * Coolean Culinder bood
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
42	20010		vidorior (Obe do required)

Ref #	Part Number	Qty Description
42A 43 45 46 47 48 50	650691 650690 650128 27915A 30195A 30196 29716 650548 32326A	Washer, Flat (Use as required) Washer, Belleville (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62 63A	30205 32327 29216 650152 29826 29642 30699C 30699B	Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Rod Assy., Governor (Incl. 64 & 65) Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
65 66 67 69 70 71 72	30700 650494 29918 35350 29747B 32158E 650815 8116 29536	Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 79 80	650561 31688A 29752 650572 730164	Screw, 1/4-20 x 5/8"  * Gasket, Carburetor Nut & Lockwasher Assy., 1/4-28 Screw, 1/4-28 x 1-1/8" Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31691	* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 97 100 106 107 108 109 110	28820 30727 31715 35349 29538 31845 30591 30588A 30590A 29193 34158 650561	Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Ground Wire Base, Engine mounting Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Bracket, Fuel tank Screw, 1/4-20 x 5/8"

Ref #	Part Number	ty Description	
114	34186A	with differe I.D. openin	(Incl. 115 & 266) NOTE: These tanks were built ent size fuel inlet openings. Tanks with the 1-3/16" g use fuel cap 33032 or 34210. Tanks with the opening use fuel cap 35355 or 35650.
	410144B 33032		White Plastic)(Std)(As requ ired) Charcoal Plastic) (Spurt resistant, Low profile) quired)
115	34210	Fuel Cap ( required)	Red Plastic) (Spurt resistant, High profile) (Use as
115	35355	Fuel Cap (	Use as required)
	34159		tank mounting
	29774		Braided 8-1/4" 21 cm)(Use as req.)
	30705		Braided 16") (41 cm) (Use as req.)
	30962		Braided 32") (81 cm) (Use as req.)
	650128		24 x 1/2" (Use as required)
	30622A		Blower housing
	650542	Screw, 5/1	
	26073		lse as required)
	650694A	,	6-18 x 2" (Use as required)
	32589	Key, Flywh	
	31843A	• • •	overnor gear
	650836	Screw, 10-	•
	650493		-20 x 1-3/4"
	30747	Clip, Short	
	650890	Lockwashe	
	650665	Screw, 1/4	
	610118	•	ark plug (Use as required)
	27276	Cover, Spa	
205	650561		-20 x 5/8" (Use as required )
209	30939A	Cover, Cyli	,
226	650760	Screw, 8-3	2 x 3/8"
227	28545	Grommet	
	32125	Cup, Starte	
	590417	Screen, St	arter cup
	26460	Clamp, Fu	
	31461		Crankshaft (Use as required)
	33876	Gasket, St	
	610973		ass'y. (As req. on late prod uction)
	27275		nsion wire (Use as require d)
	34246	• •	nd wire (Use as required)
	34346	Decal, Inst	
	31752	Decal, Air	
	30547A		ssy., Breaker
	30548B	Condenser	
	631021		le, Seat & Clip Assy.
330	631453	for breakdo	(Incl. 75) (Refer to Division 5, Section A, page 100 pwn)
337	610689A	an assemb purposes o	IOTE: The complete magneto is not available as oly. The magneto number is shown for reference only. Order component parts individually, as show a (Refer to Division 5, Section B, page 24 for b)
338	590420	Rewind State	arter (Refer to Division 5, Section C, page 25 for )
343	33239A	Gasket Se	et (Incl. items marked*)

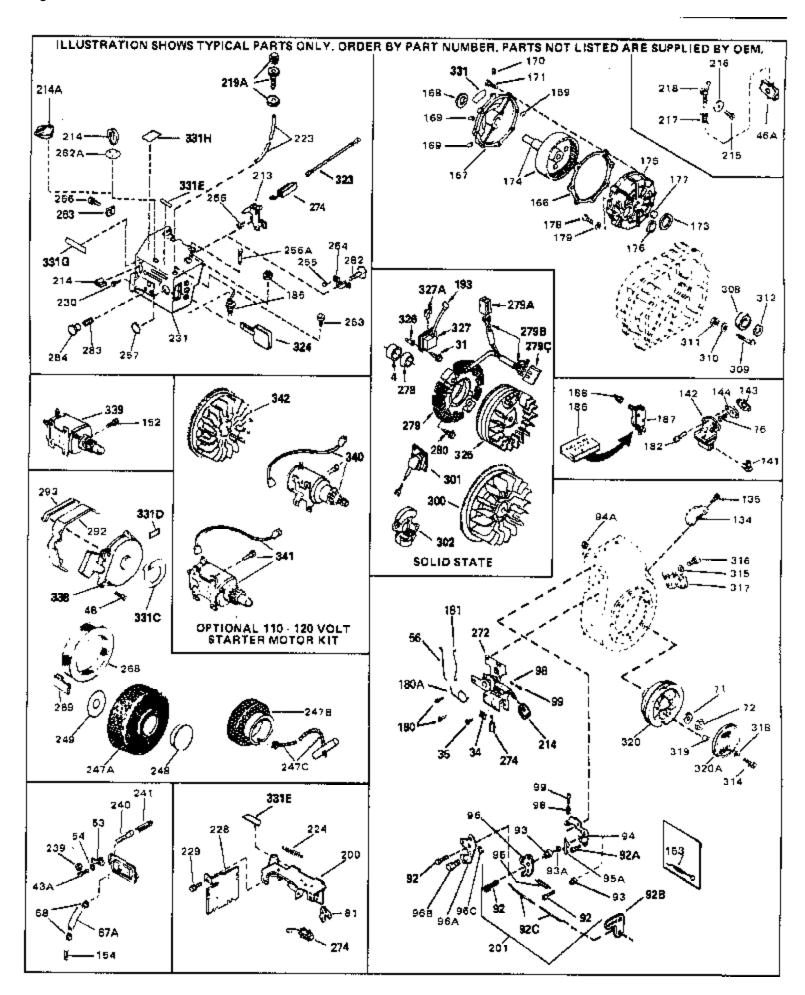

Ref #	Part Number	Qty	Description
31	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
	32327		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	33450		Nut, Lock
	30845A		Bolt, Governor adjusting
	30886A		Spring, Governor bolt
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

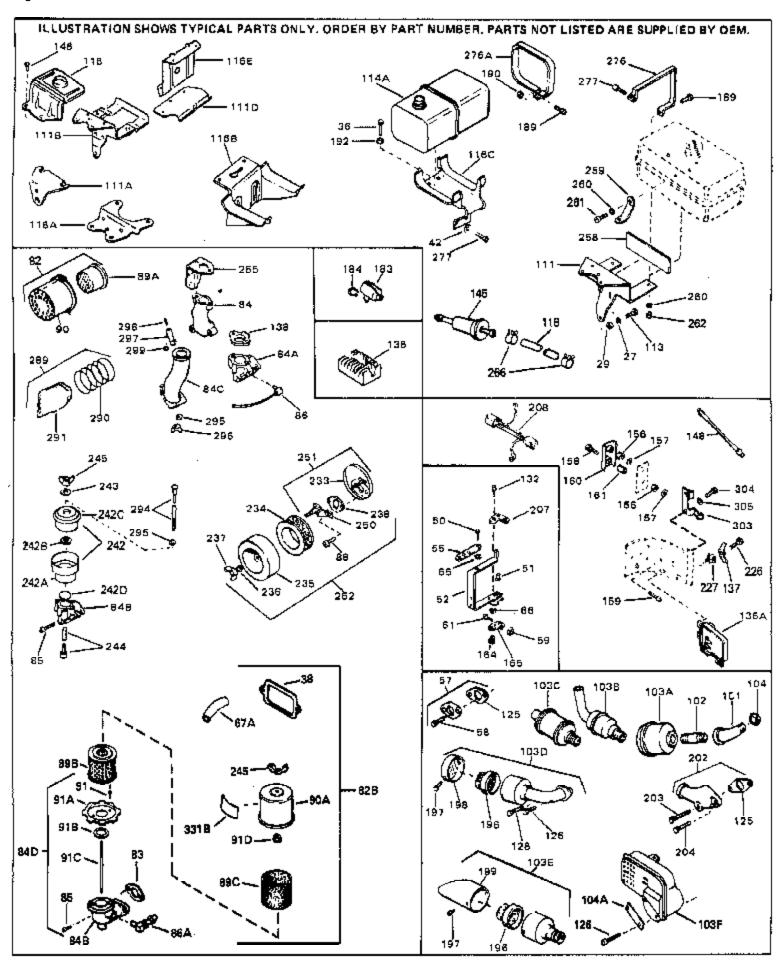

Ref #	Part Number	Qty	Description
27 36 36 36 38 42 42 50 51 52	Part Number 27513 650697A 650695A 650694A 27896A 26073 650691 650548 30319 32326A	Qty	Description  Lockwasher, 1/4" (Use as required)  Screw, 5/16-18 x 2-1/2" (Use as requi red)  Screw, 5/16-18 x 2-1/4" (Use as requi red)  Screw, 5/16-18 x 2" (Use as required)  * Gasket, Breather cover  Washer (Use as required)  Washer, Flat (Use as required)  Screw, 8-32 x 5/16"  Rivet, Split (Used in early productio n)  Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)  Bracket, Adjusting
58 59 61 66	730130 30196 29216 29826 29918 730561		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.) Screw, 5/16-18 x 3/4" (Use as require d) Nut, Lock, 10-32 Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91, 91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
	27272A 34819		* Gasket, Air cleaner Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use in 730561 assembly only)
90 101 103E 104 113 118 118 118 128 132 137 148 148 202 203 204 226 227 266	28820 31715 29574 391026 32862 650561 29774 30705 30962 650694A 650548 33356 34067 34069 31288 650697A 6021A 650760 28545 26460 31752		Screw, 10-32 x 1/2" Body, Air cleaner Muffler Elbow Opt. Spark Arrest Muffler (Incl.196,1 97,199) Conduit Nut Screw, 1/4-20 x 5/8" Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 5/16-18 x 2" (Use as required) Screw, 8-32 x 5/16" (Early production ) Terminal Wire Assy., Alternator adapter (4-1/4") Wire Assy., Alternator adapter (6-3/4") Exh. Adaptor Kit (Incl.125,203,204) ( As req.) Screw, 5/16-18 x 2-1/2" (Use as required) Screw, 5/16-18 x 1-1/2" (Use as required) Screw, 8-32 x 3/8" Grommet Clamp, Fuel line Decal, Air cleaner