
H70-130215D Engine Parts List #1

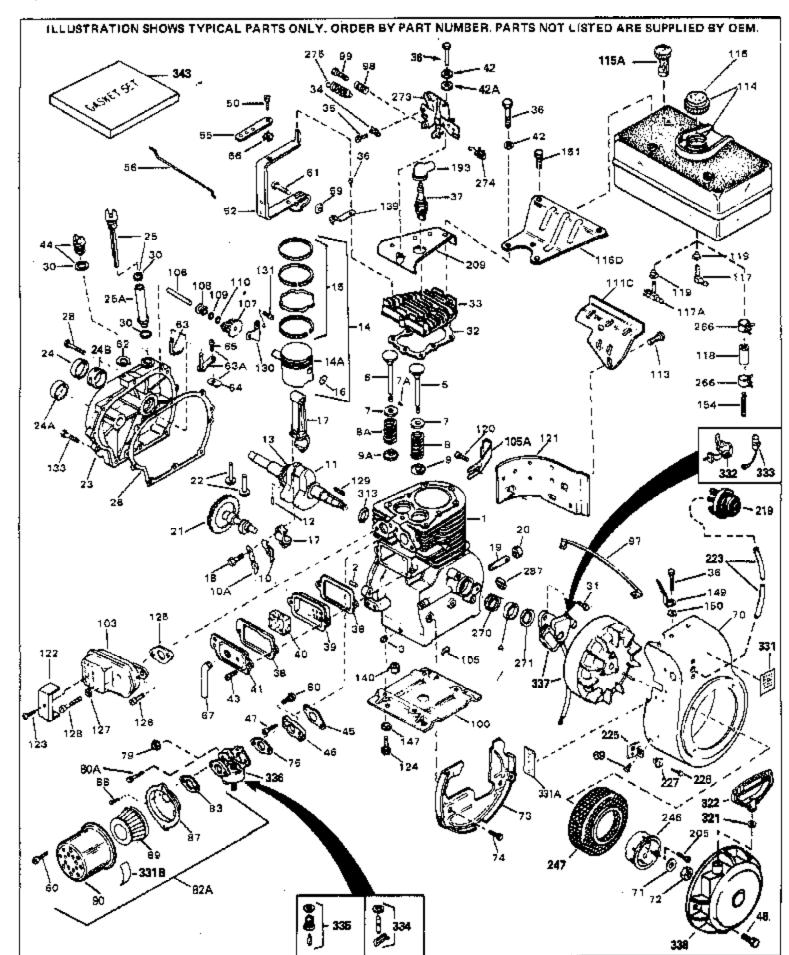


		Description
1	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652	Pin, Dowel
	27642	Plug, Oil drain
		•
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
5	32784	Intake Valve (1/32" OS) (Incl. 9)
6	27878A	Exhaust Valve (Std.) (Incl. 9)
	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
	27882	
		Cap, Upper valve spring
	20810	Pin, Valve spring retainer (Use as re quired)
8A	27881	Spring, Valve
8	27881	Spring, Valve
9	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
	32590	
IUA	32390	Plate, Lock & Oil dipper (This plate may be replaced by
		34242 oil dipper but 650662C screw must be used.)
10	34242	Dipper Oil
		Dipper, Oil
	32680A	Crankshaft (Incl. 12 & 13)
12	29783	Crankshaft Gear Pin (Early production)
13	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
14A	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518	Piston, Pin & Ring Set (.010" OS)
14	34519	Piston, Pin & Ring Set (.020" OS)
15	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
18	650662C	Screw, Connecting rod (2 each)
19	30968	Nipple, Oil drain
20	30969	Cap, Oil drain
	32115	Camshaft (MCR)
	34034	Lifter, Valve
	31303B	Cover, Cylinder (Incl. 24, 106 & 279)
24B	31546	Bushing, Crankshaft (Use as required)
24	28427	Seal, Oil
	31297	Dipstick, Oil (Incl. 30)
	30684	* Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
	29673	* Gasket, Oil filler
31	650489	Screw, 1/4-20 x 5/8"
32	32631A	* Gasket, Cylinder head
	30938A	Head, Cylinder
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
39	28423	Body, Breather
	28424	Element, Breather
10		

Ref #	Part Number (Otv	Description
	28425	wiy	Cover, Valve spring
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
43	650128		Screw, 10-24 x 1/2"
45	27915A		* Gasket, Intake
46	30195A		Flange, Carburetor (Incl. 79 & 80)
	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	30824		
			Link, Throttle
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
63	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700		Yoke, Governor
65	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	32158E		Blower Housing (For elec.star.)(Incl. 134,135)
	650815		Washer, Belleville
72	8116		Nut, Hex
73	29536		Blower Housing Baffle (without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use
75	33230A		as required) (Point Ignition)
			. , . • ,
74	650561		Screw, 1/4-20 x 5/8"
75	31688A		* Gasket, Carburetor
	29752		Nut & Lockwasher Assy., 1/4-28
	650572		Screw, 1/4-28 x 1-1/8"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
024	730104		
			(Use as required)
97	34240		Ground Wire
	29538		Base, Engine mounting
	32401		Muffler
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
110	29193		Ring, Retaining
	30063		Screw, 1/4-20 x 1/2"
	410144B		Fuel Cap (White Plastic)(Std)(As required)
	33032		
CLI	0002		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
			(Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
	-		required)
115	35355		Fuel Cap (Use as required)
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)

		y Description
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128	Screw, 10-24 x 1/2" (Use as required)
121	30622A	Extension, Blower housing
122	34174	Deflector, Exhaust
123	650665	Screw, 1/4-15 x 7/8"
124	650542	Screw, 5/16-18 x 3/4"
125	27930A	Gasket, Exhaust
126	30196	Screw, 5/16-18 x 3/4"
127	26073	Washer (Use as required)
128	650694A	Screw, 5/16-18 x 2" (Use as required)
129	32589	Key, Flywheel
130	31843A	Bracket, Governor gear
131	650836	Screw, 10-24 x 1/2"
133	650493	Screw, 1/4-20 x 1-3/4"
149	30747	Clip, Shorting
193	610118	Cover, Spark plug (Use as required)
205	650561	Screw, 1/4-20 x 5/8" (Use as required)
209	30939A	Cover, Cylinder head
225	34126	Bracket, Grommet mounting
226	650760	Screw, 8-32 x 3/8"
227	28545	Grommet
	32125	Cup, Starter
	590417	Screen, Starter cup
266	26460	Clamp, Fuel line
270	31461	Bushing, Crankshaft (Use as required)
271	33876	Gasket, Stator
274	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331A	34346	Decal, Instruction
332	30547A	Contact Assy., Breaker
	30548B	Condenser
	631021	Inlet Needle, Seat & Clip Assy.
	631912	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 138
		for breakdown)
007	0400044	
337	610694A	Magneto (w/ring gear for 110 volt starter) NOTE: The
		complete magneto is not available as an assembly. The
		magneto number is shown for reference purposes only.
		Order component parts individually, as show in parts list.
		(Refer to Division 5, Section B, page 24 for breakdown)
338	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for
		breakdown)
0.40	22220.4	,
343	33239A	Gasket Set (Incl. items marked*)



Ref #	Part Number	Qty	Description
	650489		Screw, 1/4-20 x 5/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
43A	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
56	30824		Link, Throttle
71	650815		Washer, Belleville
72	8116		Nut, Hex
134	33013		Cover, Bubble
135	650736		Screw, 10-16 x 3/8"
193	610118		Cover, Spark plug (Use as required)
200	33108A		Control Bracket (Incl. 224 & 274)
214	32410		Knob, Speed control
224	30826		Spring, Extension
	650257		Screw, 8-32 x 5/16"
231	34217		Cover, Carburetor
254	32398		Bracket, Choke
	28820		Screw, 10-32 x 1/2"
	650760		Screw, 8-32 x 3/8"
	650765		Screw, 10-32 x 1/2"
	31291		Plug, Cover
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
282A	34132		Plate, Choke indicator
292	31680		Guard, Starter
293	32576		Seal, Snow guard
	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
			breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter
0-10	000200		motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for
			identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using
			110-120 volt starter kits listed above)
340	611042		Flywheel (Used on Type letters H and above) (Std. Point
J 4 2	011042		ignition) (Ring gear flywheel required on engines using
			110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines
			using 110-120 volt starter kits listed above) (Use withSolid
			State ignition)

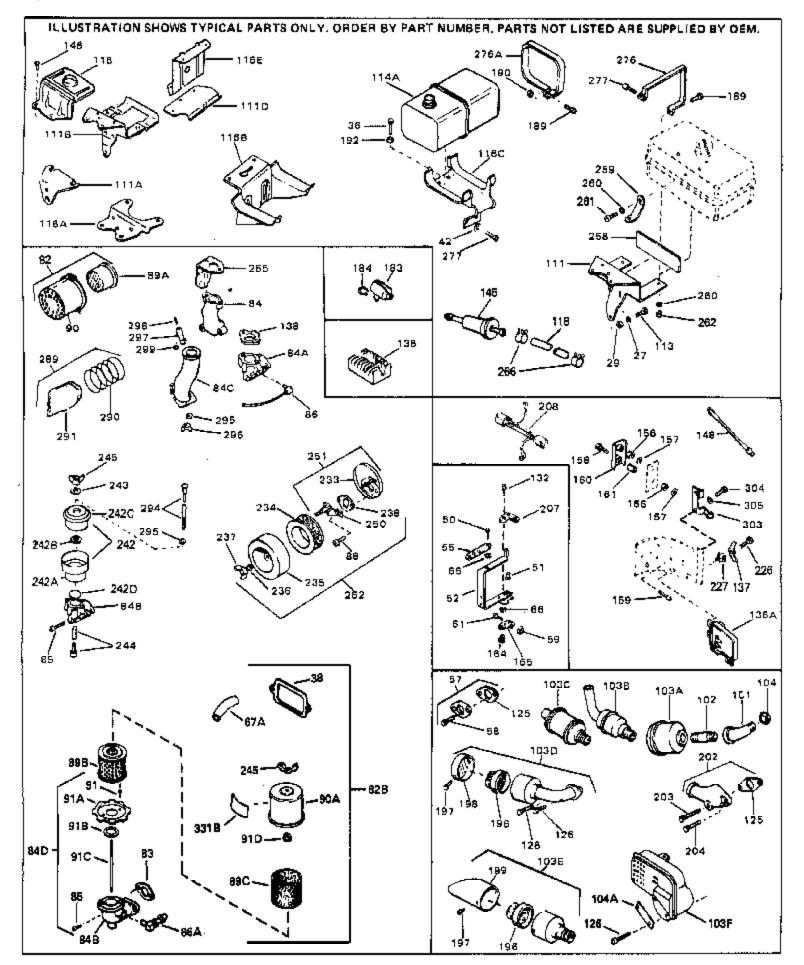

Ref #	Part Number	Qty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
	32326A	Lever, Governor (New lever does not need 1 of
52		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 9
OLD		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines w
		an externally vented fully adjustable carburetor)
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (U
		in 730561 assembly only) NOTE: 130010 thru 10C & 11
		used in early production only.
103E	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
113	30063	Screw, 1/4-20 x 1/2"
118	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, $8-32 \times 5/16"$ (Early production)
	33356	Terminal
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650760	Screw, 8-32 x 3/8"
-227	28545	Grommet
	26460	Clamp, Fuel line