



1 2	Part Number 32586C 27652 27642	Qty	Description Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore) Pin, Dowel Plug, Oil drain
	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		
			Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
9A	32581		Cap, Lower valve spring
10	34242		Dipper, Oil
	32590		Plate, Lock & Oil dipper (This plate may be replaced by
	<u></u>		34242 oil dipper but 650662C screw must be used.)
11	32680A		Crankshaft (Incl. 12 & 13)
12	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518		Piston, Pin & Ring Set (.010" OS)
14	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		
			Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
19	30968		Nipple, Oil drain
	30969		Cap, Oil drain
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	31297		Dipstick, Oil (Incl. 30)
26	30684		* Gasket, Cylinder cover
28	650488		Screw, 1/4-20 x 1-1/4"
30	29673		* Gasket, Oil filler
31	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
			·
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
40	LUTET		LIOTTOTIL, DICALIO

Ref #	Part Number Qty	Description
	28425	Cover, Valve spring
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650690	Washer, Belleville (Use as required)
	650128	Screw, 10-24 x 1/2"
	27915A	·
		* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	30824	Link, Throttle
	29216	Nut, Lock, 10-32
	29826	
		Screw, 10-32 x 3/4"
	29642	Ring, Retaining
	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
	35350	Tube, Breather
	29747B	·
	32158E	Screw, 5/16-24 x 21/32" Player Housing (For class star)/(not. 124.135)
		Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
/3	29536	Blower Housing Baffle (without electric starter knock-out)
		(Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
7/	650561	Coron, 1/4 20 v F/0"
	650561	Screw, 1/4-20 x 5/8"
	31688A	* Gasket, Carburetor
	29752	Nut & Lockwasher Assy., 1/4-28
	650572	Screw, 1/4-28 x 1-1/8"
82A	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
		(Use as required)
97	34240	Ground Wire
	29538	Base, Engine mounting
	32401	Muffler
	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
	29193	Ring, Retaining
	30063	Screw, 1/4-20 x 1/2"
114	34186A	Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built
		with different size fuel inlet openings. Tanks with the 1-3/16"
		I.D. opening use fuel cap 33032 or 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355 or 35650.
11E	410144P	·
	410144B	Fuel Cap (White Plastic)(Std)(As required)
115	33032	Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile)
		(Use as required)

Ref #	Part Number Qty	Description
	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
115	35355	Fuel Cap (Use as required)
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650128	Screw, 10-24 x 1/2" (Use as required)
	30622A	Extension, Blower housing
	34174	Deflector, Exhaust
	650665	Screw, 1/4-15 x 7/8"
	650542	Screw, 5/16-18 x 3/4"
	27930A	Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
	26073	Washer (Use as required)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	30747	Clip, Shorting
	610118	Cover, Spark plug (Use as required)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30939A	Cover, Cylinder head
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
	28545	Grommet
	32125	Cup, Starter
	590417	Screen, Starter cup
	26460	Clamp, Fuel line
	31461	Bushing, Crankshaft (Use as required)
271	33876	Gasket, Stator
274	610973	Terminal Ass'y. (As req. on late prod uction)
287	27275	Clip, Hi-tension wire (Use as require d)
287	34246	Clip, Ground wire (Use as required)
331	550223	Decal, Name
331A	34346	Decal, Instruction
332	30547A	Contact Assy., Breaker
333	30548B	Condenser
334	631021	Inlet Needle, Seat & Clip Assy.
336	631912	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 138
		for breakdown)
337	610694A	Magneto (w/ring gear for 110 volt sta rter) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)

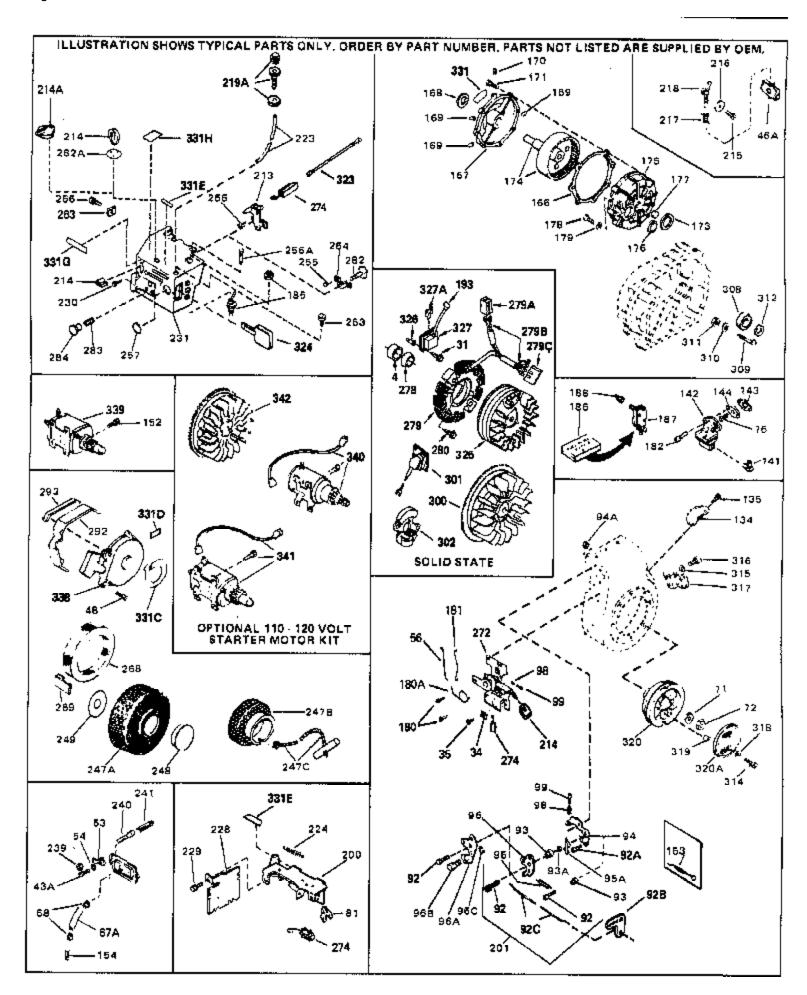

Ref #	Part Number Qty	Description
31	650489	Screw, 1/4-20 x 5/8"
34	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	30824	Link, Throttle
	650815	Washer, Belleville
		Nut, Hex
	8116	•
	33013	Cover, Bubble
	650736	Screw, 10-16 x 3/8"
	610118	Cover, Spark plug (Use as required)
	33108A	Control Bracket (Incl. 224 & 274)
	32410	Knob, Speed control
	30826	Spring, Extension
230	650257	Screw, 8-32 x 5/16"
231	34217	Cover, Carburetor
254	32398	Bracket, Choke
255	28820	Screw, 10-32 x 1/2"
256	650760	Screw, 8-32 x 3/8"
	650765	Screw, 10-32 x 1/2"
	31291	Plug, Cover
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
	34132	Plate, Choke indicator
	31680	
		Guard, Starter
	32576	Seal, Snow guard
	550223	Decal, Name
	34416	Decal, Choke
	34414	Decal, Warning
338	590473	Rewind Starter (Refer to Division 5, Section C, page 29 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

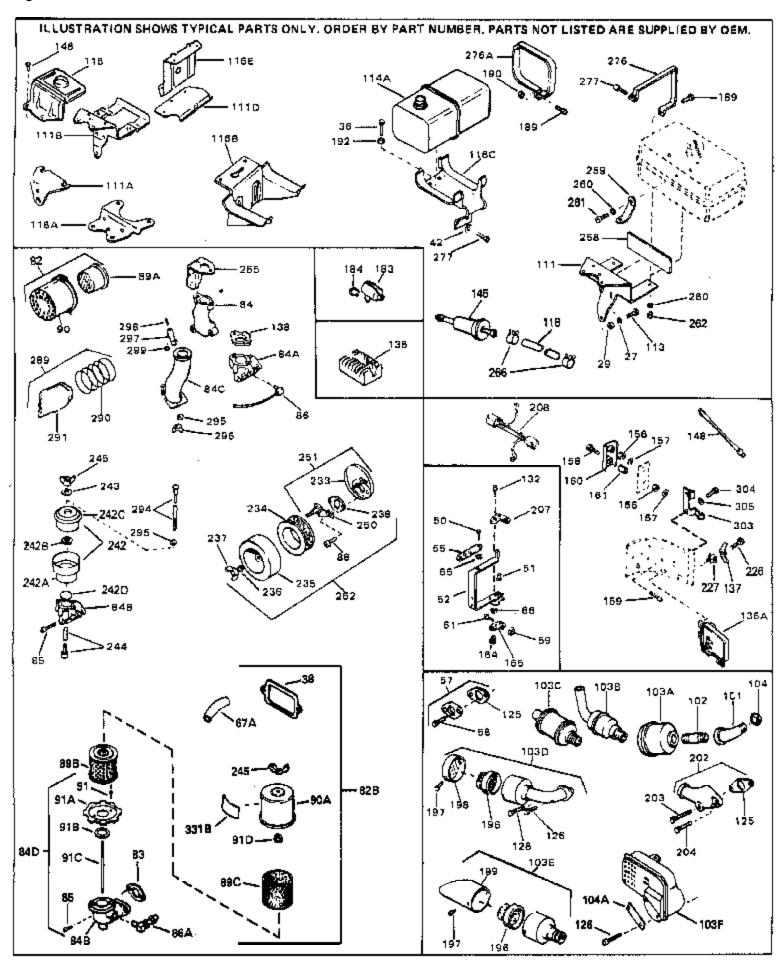

Ref #	Part Number	Qtv	Description
	27513	,	Lockwasher, 1/4" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650548		Screw, 8-32 x 5/16"
	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
~ _	<u></u>		51,66,132,164,165,207)
EE	20205		· · · · · · · · · · · · · · · · · · ·
	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32 Serow 10-33 v 3/4"
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
0.2	0.10.10		in 730561 assembly only) NOTE: 130010 thru 10C & 11
			used in early production only.
1025	204026		,
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	30063		Screw, 1/4-20 x 1/2"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
	30196		Screw, 5/16-18 x 3/4" Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	33356		Terminal
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650760		Screw, 8-32 x 3/8"
	28545		Grommet
266	26460		Clamp, Fuel line