

		Qty	
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
10	24242		Dippor Oil
	34242		Dipper, Oil Cropkobet (Incl. 13.8.13)
	32670		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
13	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
16	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
21	32115		Camshaft (MCR)
22	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		
			Screw, 1/4-20 x 5/8" * Gasket, Cylinder head
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
37	33636		Resistor Spark Plug (RJ-8C)
37	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
42	00001		vidorior, i lat (Ose as required)

Ref #	Part Number (Qty Description
43 44 45 46 47 48 50	650690 650128 27625 27915A 30195A 30196 29716 650548 32326A	Washer, Belleville (Use as required) Screw, 10-24 x 1/2" Plug, Oil filler (Incl. 30) * Gasket, Intake Flange, Carburetor (Incl. 79 & 80) Screw, 5/16-18 x 3/4" Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62	30205 32327 29216 650152 29826 29642 30699B	Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64 65 66 67 69 70 71 72	30699C 30700 650494 29918 35350 29747B 32158E 650815 8116 29536	Rod Assy., Governor (Incl. 64 & 65) Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 79 80	650561 31688A 29752 650572 730164	Screw, 1/4-20 x 5/8" * Gasket, Carburetor Nut & Lockwasher Assy., 1/4-28 Screw, 1/4-28 x 1-1/8" Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31691	* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 97 100 106 107 108 109 110	28820 30727 31715 35349 29538 31845 30591 30588A 30590A 29193 34158 650561	Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Ground Wire Base, Engine mounting Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Bracket, Fuel tank Screw, 1/4-20 x 5/8"


343 33239A

	Part Number 34156A	Qty	Description Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355 or 35650.
	410144B 33032		Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
116D 118 118 118 120 121 124 127 128 129 130 131 133 149 150 151 193 205 209 226 227 246 247 266 270 271 274 287 331A 331B 332 333 335 336	35355 34159 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30747 650890 650665 610118 27276 650561 30939A 650760 28545 32125 590417 26460 31461 33876 610973 27275 34246 34346 31752 30547A 30548B 31393 631677		Fuel Cap (Use as required) Plate, Fuel tank mounting Fuel Line (Braided 8-1/4" 21 cm) (Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Lockwasher Screw, 1/4-15 x 7/8" Cover, Spark plug (Use as required) Cover, Spark plug Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Screw, 8-32 x 3/8" Grommet Cup, Starter Cup, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Instruction Decal, Air cleaner Contact Assy., Breaker Condenser Valve, Seat & Gasket Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 120 for breakdown) Magneto NOTE: The complete magneto is not available as
337			an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
0.40	000004		O = 1 = 1 O = 1 (1 = 1 (1 = 2 = 2 = 2 = 1 = 1 + 1)

Gasket Set (Incl. items marked*)



Rof #	Part Number	Otv	Description
	650489	Qty	Screw, 1/4-20 x 5/8"
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
	29716		Screw, 1/4-28 x 7/16"
	32327		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	28566		Fitting, Fuel line
	33010		Repair Kit, Impulse fuel pump
	32959		Fuel pump, Impulse
	33229		Pipe Fitting
	610118		Cover, Spark plug (Use as required)
	27276		Cover, Spark plug
	33450		Nut, Lock
	30845A		Bolt, Governor adjusting
	30886A		Spring, Governor bolt
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
000	000 120		breakdown)
			•
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be
			added only if cylinder hasdrilled and tapped starter mounting
			bosses and a ring gear flywheel (see#342). Refer to service
			number stamped on end cap of motor, or on decal, for
			identifica
242	30811A		Flywheel (Ring gear flywheel requiredon engines using
342	30011A		110-120 volt starter kits listed above)
			,
342	611042		Flywheel (Used on Type letters H and above) (Std. Point
			ignition) (Ring gear flywheel required on engines using
			110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines
J . <u>–</u>	-		using 110-120 volt starter kits listed above) (Use withSolid
			State ignition)
			.

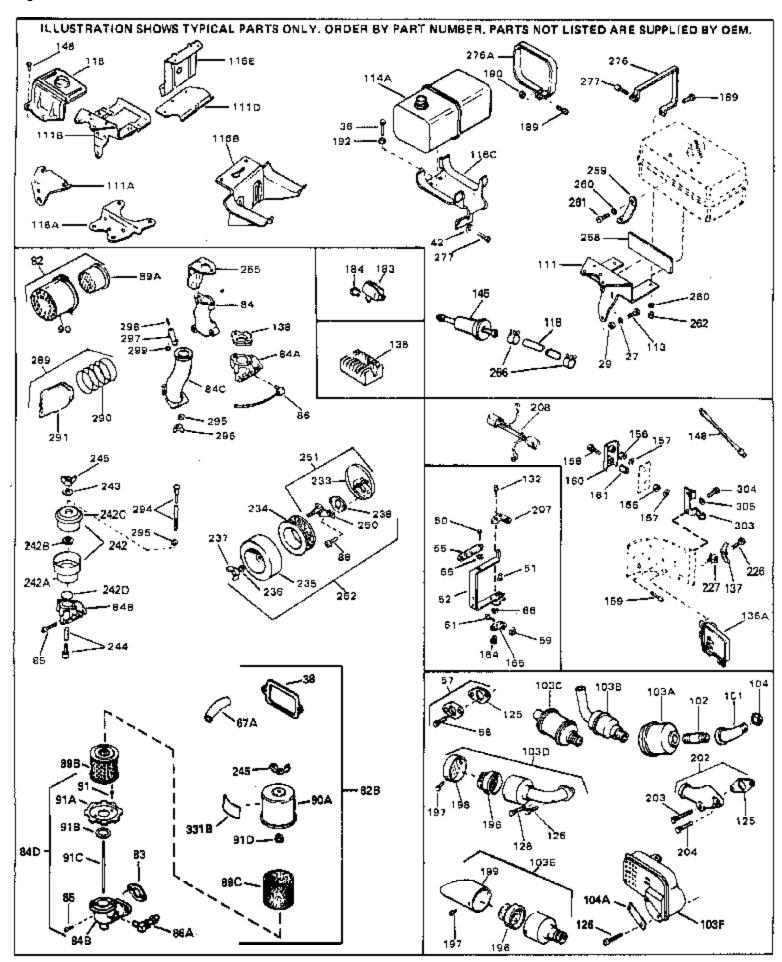

Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
50	650548		Screw, 8-32 x 5/16"
51	30319		Rivet, Split (Used in early productio n)
	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
66	29918		Lockwasher, #8 E.T.
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
02	700121		331B) (Use as required)
00	070704		, ,
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
88	28820		Screw, 10-32 x 1/2"
90	31715		Body, Air cleaner
101	29574		Muffler Elbow
103E	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
104	32862		Conduit Nut
113	650561		Screw, 1/4-20 x 5/8"
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	33356		Terminal
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	650760		Screw, 8-32 x 3/8"
	28545		Grommet
	26460		Clamp, Fuel line
331B	31752		Decal, Air cleaner