


Ref #	Part Number	Qty	Description
	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652		Pin, Dowel
	27642		Plug, Oil drain
4	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		
			Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
8	27881		Spring, Valve
9A	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
			•
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
	0.40.40		,
	34242		Dipper, Oil
11	32587		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production )
	27884		Gear, Crankshaft (Used in early production) This gear is
13	21004		
			servicable onlywhen it is pinned to the crankshaft.
110	32592B		Dioton 9 Din Apply (Ctd.)/2 2/4"\/In al.46\
			Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		
			Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
15	32595		Ring Set (Std.) (2-3/4" Bore)
15	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
17	32591C		Rod Assy., Connecting (Incl. 10 & 18)
18	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
23	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
24B	31546		Bushing, Crankshaft (Use as required)
	28427		Seal, Oil
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
28	650488		Screw, 1/4-20 x 1-1/4"
30	29673		* Gasket, Oil filler
	650516		Screw, 1/4-20 x 1-1/8"
	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
			·
	27896A		* Gasket, Breather cover
39	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
			. •
42A	650690		Washer, Belleville (Use as required)

Ref #	Part Number	Qty	Description
42 43 45 46 47 50 52 56 59 60 61 62 63	26073 650691 650128 27915A 34712 30196 650548 33454 34662 29216 650152 29826 29642 30699B		Washer (Use as required) Washer, Flat (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange Carburetor Screw, 5/16-18 x 3/4" Screw, 8-32 x 5/16" Lever Assy., Governor Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64 65 66 67 69 70 71 72 73	30699C 30700 650494 29918 35350 29747B 32158E 650815 8116 29536		Rod Assy., Governor (Incl. 64 & 65) Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
74 75 80A	35256A 650561 31688A 650517 730164		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)  Screw, 1/4-20 x 5/8"  * Gasket, Carburetor  Screw, 1/4-20 x 27/32"  Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)  (Use as required)
	27272A 31914		* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 98 99 99 100 103 106 107 108 109 110 113	28820 30727 31715 31342 29500 650549 29538 391014 31845 30591 30588A 30590A 29193 30063 410144B 33032		Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Spring, Compression Screw, 8-32 x 3/4" Screw, 5-40 x 7/16" Base, Engine mounting Muffler Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Screw, 1/4-20 x 1/2" Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)

	Part Number	Qty	Description
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
118	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
118	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
118	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
122			Deflector, Exhaust (Supplied by OEM)
124	650542		Screw, 5/16-18 x 3/4"
125	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
129	32589		Key, Flywheel
130	31843A		Bracket, Governor gear
131	650836		Screw, 10-24 x 1/2"
133	650493		Screw, 1/4-20 x 1-3/4"
149	30747		Clip, Shorting
193	610118		Cover, Spark plug (Use as required)
205	650561		Screw, 1/4-20 x 5/8" (Use as required )
209	30939A		Cover, Cylinder head
247	35009		Screen, Starter cup
266	26460		Clamp, Fuel line
270	31461		Bushing, Crankshaft (Use as required)
	33876		Gasket, Stator
	610973		Terminal Ass'y. (As req. on late prod uction)
	34043		Spring, Control lever
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	34346		Decal, Instruction
	550223		Decal, Name
	30547A		Contact Assy., Breaker
	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
336	631453		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown)
337	610976		Magneto (w/ring gear) (12 Volt) (7 Am p) NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 36 for breakdown)
343	33239A		Gasket Set (Incl. items marked*)



D://"	Dout Neverland	Ο.	Description
	Part Number	Qty	Description 2 4 4 / 2   1 4 / 2   2   2   4 / 2   2   2   2   2   2   2   2   2   2
	650516		Screw, 1/4-20 x 1-1/8"
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
	34662		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	31342		Spring, Compression
	29500		Screw, 8-32 x 3/4"
	650549		Screw, 5-40 x 7/16"
152	30063		Screw, 1/4-20 x 1/2"
180	650821		Screw, 10-32 x 1/2"
180A	34663		Spring, Speed control
181	34661		Link, Governor
193	610118		Cover, Spark plug (Use as required)
247A	33819		Screen & Cup Assy.
248	33817		Plug, Screen
249	650793		Washer, Flat
263	650764		Nut, "U" Type (Use as required)
272	34664		Control Bracket (Incl. 98, 99, 180A & 274)
274	610973		Terminal Ass'y. (As req. on late prod uction)
331	550223		Decal, Name
	35765A		Electric Starter Motor (12 Volt) NOTE: The 29965, 32468, 32468B, 33606, 35765 and 35765A startermotors are used interchangeably on these models. Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown.
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use with Solid State ignition)

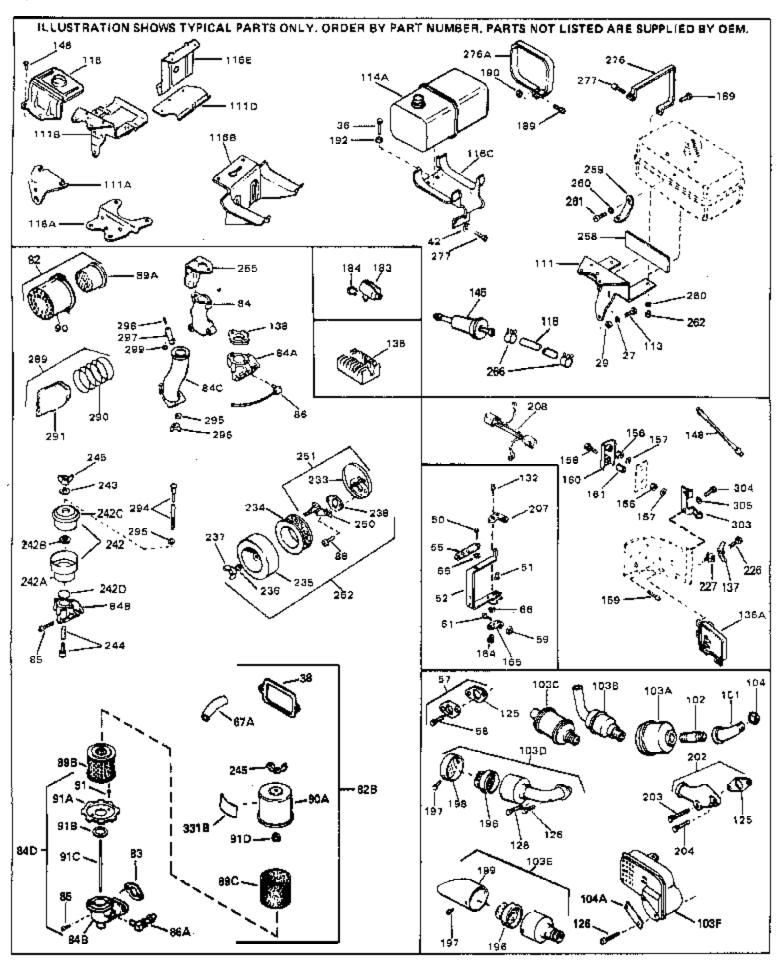

Ref #	Part Number	Qty Description
	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
42	26073	Washer (Use as required)
42	650691	Washer, Flat (Use as required)
50	650548	Screw, 8-32 x 5/16"
51	30319	Rivet, Split (Used in early productio n)
52	33454	Lever Assy., Governor
57	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
66	29918	Lockwasher, #8 E.T.
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
83	27272A	* Gasket, Air cleaner
	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
0.2		in 730561 assembly only)
00	00000	• • • • • • • • • • • • • • • • • • • •
	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	30063	Screw, 1/4-20 x 1/2"  First Line (Braided 8 1/4" 21 cm)/( lee ee reg.)
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A 30196	Gasket, Exhaust Screw, 5/16-18 x 3/4"
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production )
	610938	Regulator, Rectifier (7Amp)
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (4-1/4-) Wire Assy., Alternator adapter (6-3/4 ")
	34070	Wire Assy., Alternator adapter (0-3/4 ) Wire Assy., Alternator adapter (24-1/ 4")
	31288	Exh. Adaptor Kit (Incl.125,203,204) ( As req.)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	26460	Clamp, Fuel line
	32765	Clamp, Blower housing extension
	28820	Screw, 10-32 x 1/2"
30 1		