
H70-130224E Engine Parts List #1

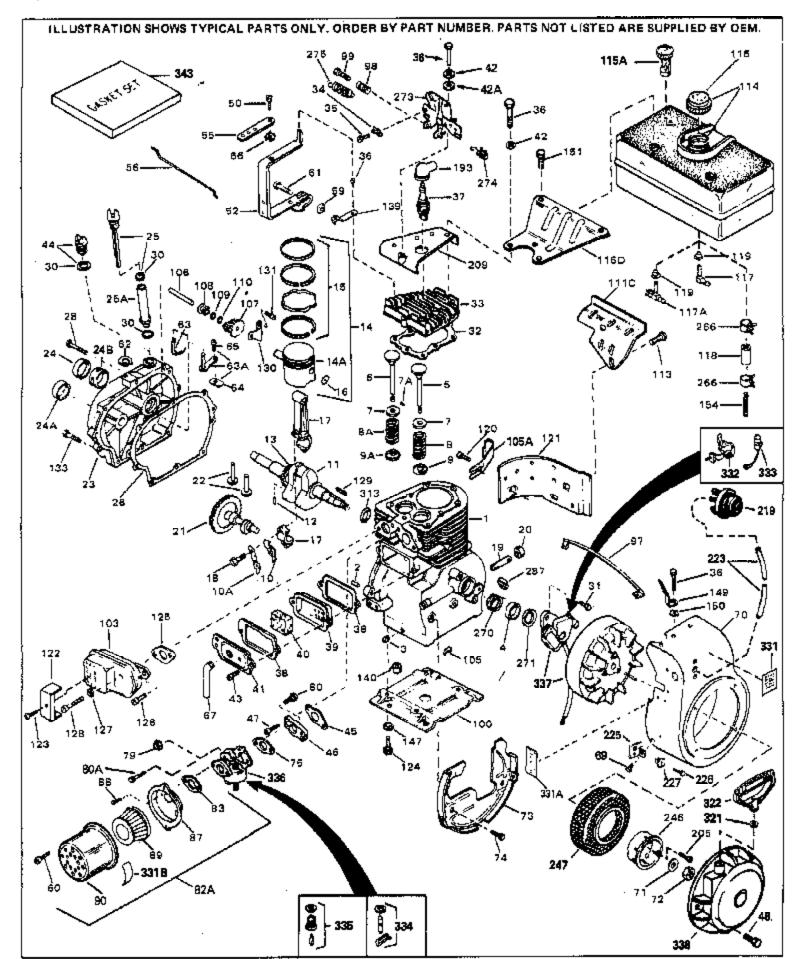


Ref #	Part Number	Qty	Description
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	27882		Cap, Upper valve spring
	20810		Pin, Valve spring retainer (Use as re quired)
	27881		Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
	32590		••
IUA	32330		Plate, Lock & Oil dipper (This plate may be replaced by 34242 oil dipper but 650662C screw must be used.)
11	34893		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518		Piston, Pin & Ring Set (.010" OS)
14	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
14A	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
15	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	29673		* Gasket, Oil filler
	650489		Screw, 1/4-20 x 5/8"
	32631A		* Gasket, Cylinder head
	30938A		Head, Cylinder
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		
			* Gasket, Breather cover
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	650690		Washer, Belleville (Use as required)
42	26073		Washer (Use as required)

Ref #	Part Number Qt	y Description
42	650691	Washer, Flat (Use as required)
43	650128	Screw, 10-24 x 1/2"
	27625	Plug, Oil filler (Incl. 30)
	27915A	* Gasket, Intake
	30195A	Flange, Carburetor (Incl. 79 & 80)
	30196	Screw, 5/16-18 x 3/4"
	29716	Screw, 1/4-28 x 7/16"
	650548	Screw, 8-32 x 5/16"
52	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
55	30205	Bracket, Adjusting
	29216	Nut, Lock, 10-32
	650152	Screw, 8-32 x 3/8"
	29826	Screw, 10-32 x 3/4"
	29642	Ring, Retaining
63A	30699C	Rod Assy., Governor (Incl. 64 & 65)
63	30699B	Governor Rod Ass'y. (This one-piece governor rodis no longer
		used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700	Yoke, Governor
		,
	650494	Screw, 6-40 x 5/16"
	29918	Lockwasher, #8 E.T.
67	35350	Tube, Breather
69	29747B	Screw, 5/16-24 x 21/32"
70	32158E	Blower Housing (For elec.star.)(Incl. 134,135)
	650815	Washer, Belleville
	8116	Nut, Hex
	29536	Blower Housing Baffle (without electric starter knock-out)
75	23000	(Use as required)
70	050504	
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use
		as required) (Point Ignition)
74	650561	Screw, 1/4-20 x 5/8"
75	31688A	* Gasket, Carburetor
79	29752	Nut & Lockwasher Assy., 1/4-28
80	650572	Screw, 1/4-28 x 1-1/8"
	730164	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
02/1	700104	(Use as required)
<u>-</u>	070704	
	27272A	* Gasket, Air cleaner
87	31691	Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in
		early production only.
22	28820	Screw, 10-32 x 1/2"
	30727	Element, Air cleaner
	31715	Body, Air cleaner
	35349	Ground Wire
	29538	Base, Engine mounting
106	31845	Shaft, Mechanical governor
	30591	Gear Assy., Governor (Incl. 109)
	30588A	Spool, Governor
	30590A	Washer, Flat
11()	29193	Ring, Retaining
	0.44 = 0	
111C	34158 650561	Bracket, Fuel tank Screw, 1/4-20 x 5/8"

Ref #	Part Number 0	Qty Description
	34156A	Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355 or 35650.
	410144B 33032	Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
116D 118 118 118 120 121 124 127 128 129 130 131 133 149 150 151 193 205 209 226 227 246 227 246 227 246 227 246 227 246 227 246 227 246 227 246 227 246 227 246 227 246 227 246 247 266 270 271 274 275 287 287 287 331A 332 333	35355 34159 29774 30705 30962 650128 30622A 650542 26073 650694A 32589 31843A 650836 650493 30747 650890 650665 610118 27276 650561 30939A 650760 28545 32125 35009 26460 31461 33876 610973 34043 27275 34246 30547A 30548B	Fuel Cap (Use as required) Plate, Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 16") (41 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Lockwasher Screw, 1/4-15 x 7/8" Cover, Spark plug (Use as required) Cover, Spark plug Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Screw, 8-32 x 3/8" Grommet Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Assy. (As req. on late prod uction) Spring, Control lever Clip, Ground wire (Use as required) Cotact Assy., Breaker Condenser
	31393 631677	Valve, Seat & Gasket Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 120 for breakdown)
337	611038	Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 39 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for breakdown)
343	33239A	Gasket Set (Incl. items marked*)



		Description
	650489	Screw, 1/4-20 x 5/8"
	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650128	Screw, 10-24 x 1/2"
	29716	Screw, 1/4-28 x 7/16"
	650815	Washer, Belleville
72	8116	Nut, Hex
	28566	Fitting, Fuel line
	33010	Repair Kit, Impulse fuel pump
187	32959	Fuel pump, Impulse
	33229	Pipe Fitting
	610118	Cover, Spark plug (Use as required)
	27276	Cover, Spark plug
	33450	Nut, Lock
	30845A	Bolt, Governor adjusting
	30886A	Spring, Governor bolt
	650764	Nut, "U" Type (Use as required)
	610973	Terminal Ass'y. (As req. on late prod uction)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for
		breakdown)
340	33328D	Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042	Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085	Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

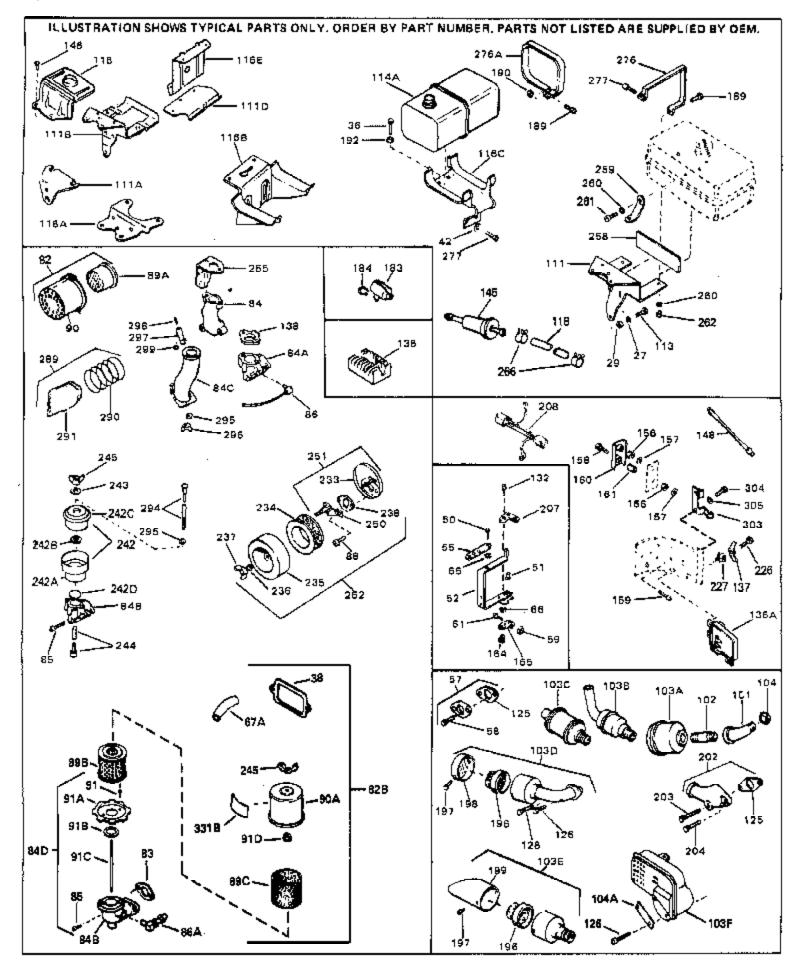

Ref #	Part Number Qt	ty Description
27	27513	Lockwasher, 1/4" (Use as required)
36	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A	Screw, 5/16-18 x 2" (Use as required)
38	27896A	* Gasket, Breather cover
	26073	Washer (Use as required)
	650691	Washer, Flat (Use as required)
	650548	Screw, 8-32 x 5/16"
	30319	Rivet, Split (Used in early productio n)
	32326A	Lever, Governor (New lever does not need 1 of
		51,66,132,164,165,207)
		· · · · · · · · · · · · · · · · · · ·
	30205	Bracket, Adjusting
	730130	Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196	Screw, 5/16-18 x 3/4" (Use as require d)
59	29216	Nut, Lock, 10-32
61	29826	Screw, 10-32 x 3/4"
66	29918	Lockwasher, #8 E.T.
82B	730561	Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 9
		91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
		an externally vented fully adjustable carburetor)
00	700407	
82	730127	Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
		331B) (Use as required)
83	27272A	* Gasket, Air cleaner
84D	34819	Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (U
		in 730561 assembly only)
88	28820	Screw, 10-32 x 1/2"
	31715	Body, Air cleaner
		Muffler Elbow
	29574	
	391026	Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	32862	
	650561	Screw, 1/4-20 x 5/8"
	29774	Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705	Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962	Fuel Line (Braided 32") (81 cm) (Use as req.)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650548	Screw, 8-32 x 5/16" (Early production)
	33356	Terminal
	34067	Wire Assy., Alternator adapter (4-1/4 ")
	34069	Wire Assy., Alternator adapter (6-3/4 ")
202	31288	Exh. Adaptor Kit (Incl.125,203,204) (As req.)
203	650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required)
	650760	Screw, 8-32 x 3/8"
	28545	Grommet
	26460	Clamp, Fuel line
266	20400	Ciamp, Fuelline