

		Qty	Description
1	32586C		Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
2	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
	32783		Intake Valve (Std.) (Incl. 9)
	32784		Intake Valve (1/32" OS) (Incl. 9)
	27878A		Exhaust Valve (Std.) (Incl. 9)
	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
	20810		Pin, Valve spring retainer (Use as re quired)
	27882		Cap, Upper valve spring
	27881		1. 1.
			Spring, Valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	32581		Cap, Lower valve spring
	34242		Dipper, Oil
10A	32590		Plate, Lock & Oil dipper (This plate may be replaced by
			34242 oil dipper but 650662C screw must be used.)
11	32680A		Crankshaft (Incl. 12 & 13)
	29783		Crankshaft Gear Pin (Early production)
	27884		
13	2/004		Gear, Crankshaft (Used in early production) This gear is
			servicable onlywhen it is pinned to the crankshaft.
14	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518		Piston, Pin & Ring Set (.010" OS)
14	34519		Piston, Pin & Ring Set (.020" OS)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010." OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
			· · · · · · · · · · · · · · · · · · ·
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Screw, Connecting rod (2 each)
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24, 106 & 279)
	28427		Seal, Oil
	31546		Bushing, Crankshaft (Use as required)
	31297		Dipstick, Oil (Incl. 30)
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
30	29673		* Gasket, Oil filler
31	650489		Screw, 1/4-20 x 5/8"
32	32631A		* Gasket, Cylinder head
33	30938A		Head, Cylinder
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug
	27896A		* Gasket, Breather cover
			·
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
42	26073		Washer (Use as required)

Page 2 of 9

Ref #	Part Number	Qty Description
42A 43 45 46 47 48 50	650691 650690 650128 27915A 34712 30196 29716 650548 32326A	Washer, Flat (Use as required) Washer, Belleville (Use as required) Screw, 10-24 x 1/2" * Gasket, Intake Flange Carburetor Screw, 5/16-18 x 3/4" Screw, 1/4-28 x 7/16" Screw, 8-32 x 5/16" Lever, Governor (New lever does not need 1 of 51,66,132,164,165,207)
56 59 60 61 62	30205 32327 29216 650152 29826 29642 30699B	Bracket, Adjusting Link, Throttle Nut, Lock, 10-32 Screw, 8-32 x 3/8" Screw, 10-32 x 3/4" Ring, Retaining Governor Rod Ass'y. (This one-piece governor rodis no longer used. It is replaced by 30699C ass'y., Ref. no. 63A)
64 65 66 67 69 70 71 72	30699C 30700 650494 29918 35350 29747B 32158E 650815 8116 29536	Rod Assy., Governor (Incl. 64 & 65) Yoke, Governor Screw, 6-40 x 5/16" Lockwasher, #8 E.T. Tube, Breather Screw, 5/16-24 x 21/32" Blower Housing (For elec.star.)(Incl. 134,135) Washer, Belleville Nut, Hex Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A	Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
75 80A	650561 31688A 650517 730164	Screw, 1/4-20 x 5/8" * Gasket, Carburetor Screw, 1/4-20 x 27/32" Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B) (Use as required)
	27272A 31691	* Gasket, Air cleaner Bracket, Air cleaner NOTE: 130010 thru 10C & 11 used in early production only.
89 90 97 100 103 106 107 108 109 110	28820 30727 31715 30831 29538 32401 31845 30591 30588A 30590A 29193 34158 650561	Screw, 10-32 x 1/2" Element, Air cleaner Body, Air cleaner Ground Wire (Incl. 137) Base, Engine mounting Muffler Shaft, Mechanical governor Gear Assy., Governor (Incl. 109) Spool, Governor Washer, Flat Ring, Retaining Bracket, Fuel tank Screw, 1/4-20 x 5/8"


Ref #	Part Number	Qty Description
	34186A	Fuel Tank (Incl. 115 & 266) NOTE: These tanks were built with different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 33032 or 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355 or 35650.
	410144B 33032	Fuel Cap (White Plastic)(Std)(As requ ired) Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
116D 117A 118 118 118 120 121 122 123 124 125 126 127 128 129 130 131 133 149 151 193 205 209 246 247 266 270 271 274 287 331A 331 332 333	35355 34159 32961 29774 30705 30962 650128 30622A 34174 650665 650542 27930A 30196 26073 650694A 32589 31843A 650836 650493 30747 650665 610118 650561 30939A 32125 590417 26460 31461 33876 610973 27275 34246 34346 550223 30547A 30548B 631021	Fuel Cap (Use as required) Plate, Fuel tank mounting Valve, Shut-off Fuel Line (Braided 8-1/4" 21 cm)(Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 10-24 x 1/2" (Use as required) Extension, Blower housing Deflector, Exhaust Screw, 1/4-15 x 7/8" Screw, 5/16-18 x 3/4" Gasket, Exhaust Screw, 5/16-18 x 3/4" Washer (Use as required) Screw, 5/16-18 x 2" (Use as required) Key, Flywheel Bracket, Governor gear Screw, 10-24 x 1/2" Screw, 1/4-20 x 1-3/4" Clip, Shorting Screw, 1/4-20 x 5/8" (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Spark plug (Use as required) Screw, 1/4-20 x 5/8" (Use as required) Cover, Cylinder head Cup, Starter Screen, Starter cup Clamp, Fuel line Bushing, Crankshaft (Use as required) Gasket, Stator Terminal Ass'y. (As req. on late prod uction) Clip, Hi-tension wire (Use as required) Decal, Instruction Decal, Name Contact Assy., Breaker Condenser Inlet Needle, Seat & Clip Assy.
	631453 610689A	Carburetor (Incl. 75) (Refer to Division 5, Section A, page 100 for breakdown) Magneto NOTE: The complete magneto is not available as an assembly. The magneto number is shown for reference purposes only. Order component parts individually, as show in parts list. (Refer to Division 5, Section B, page 24 for breakdown)
338	590420	Rewind Starter (Refer to Division 5, Section C, page 25 for

breakdown)

Pof # Port Number	ty Description
Ref # Part Number Q	ty Description
0.40, 00000.4	
343 33239A	Gasket Set (Incl. items marked*)
0.0 00=00.	



Pof #	Part Number	Otv.	Description
	650489	Qty	Screw, 1/4-20 x 5/8"
	27793		Clip, Conduit (Use as required)
	28942		Screw, 10-32 x 3/8" (Use as required)
	650597		Screw, 10-02 x 5/8" (Ose as required)
	29716		Screw, 1/4-28 x 7/16"
	32328		Bracket, Speed adjusting (Incl. 239)
	8269		Washer, Lock (Can be purchased locall y)
	32327		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	610118		Cover, Spark plug (Use as required)
	33450		Nut, Lock
	30845A		Bolt, Governor adjusting
	30886A		Spring, Governor bolt
	650764		Nut, "U" Type (Use as required)
	610973		Terminal Ass'y. (As req. on late prod uction)
	550223		Decal, Name
	590420		Rewind Starter (Refer to Division 5, Section C, page 25 for
330	J30420		breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)

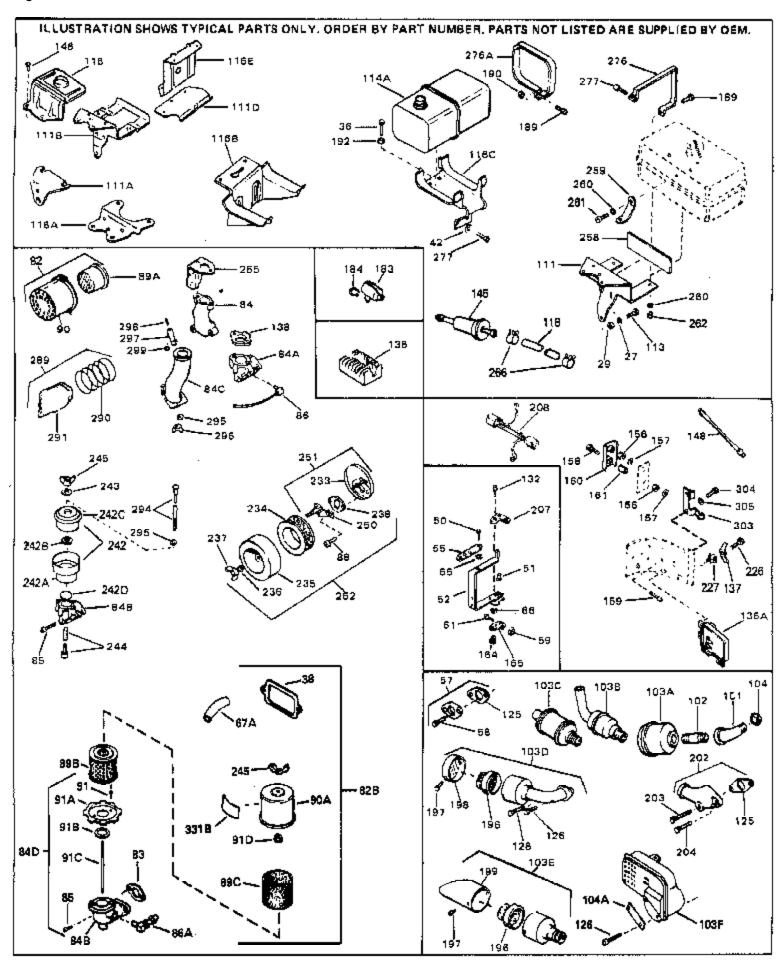

Ref #	Part Number	Qty	Description
	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
50	650548		Screw, 8-32 x 5/16"
51	30319		Rivet, Split (Used in early productio n)
52	32326A		Lever, Governor (New lever does not need 1 of
			51,66,132,164,165,207)
55	30205		Bracket, Adjusting
	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
	29216		Nut, Lock, 10-32
	29826		Screw, 10-32 x 3/4"
	29918		Lockwasher, #8 E.T.
	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
02	720127		,
02	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 & 331B) (Use as required)
			, ,
	27272A		* Gasket, Air cleaner
84D	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
			in 730561 assembly only)
88	28820		Screw, 10-32 x 1/2"
	31715		Body, Air cleaner
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
113	650561		Screw, 1/4-20 x 5/8"
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
	27930A		Gasket, Exhaust
126	30196		Screw, 5/16-18 x 3/4"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (6-3/4 ")
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as requi red)
	26460		Clamp, Fuel line
			•