


	5 (1)	
		Oty Description
	32586C	Cylinder (Incl. 2, 3, 4 & 76) (2-3/4" Bore)
	27652	Pin, Dowel
	27642	Plug, Oil drain
	32630	Seal, Oil
	32783	Intake Valve (Std.) (Incl. 9)
	32784	Intake Valve (1/32" OS) (Incl. 9)
6	27878A	Exhaust Valve (Std.) (Incl. 9)
6	27880A	Exhaust Valve (1/32" OS) (Incl. 9)
7A	20810	Pin, Valve spring retainer (Use as re quired)
7	27882	Cap, Upper valve spring
8A	27881	Spring, Valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	32581	Cap, Lower valve spring
	34242	Dipper, Oil
	32590	Plate, Lock & Oil dipper (This plate may be replaced by
10/1	32000	34242 oil dipper but 650662C screw must be used.)
11	34894	Crankshaft (Incl. 12 & 13)
	29783	Crankshaft Gear Pin (Early production)
	27884	Gear, Crankshaft (Used in early production) This gear is
		servicable onlywhen it is pinned to the crankshaft.
14	34517	Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
14	34518	Piston, Pin & Ring Set (.010" OS)
	34519	Piston, Pin & Ring Set (.020" OS)
	32592B	Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32595	Ring Set (Std.) (2-3/4" Bore)
	32596	Ring Set (0.010" OS)
	32597	Ring Set (.020" OS)
	27888	Ring, Piston pin retaining
	32591C	Rod Assy., Connecting (Incl. 10 & 18)
		,
	650662C	Screw, Connecting rod (2 each)
	30968	Nipple, Oil drain
	30969	Cap, Oil drain
	33931	Camshaft (MCR) (Extended)
	34034	Lifter, Valve
	31720A	Cover, Cylinder (Incl. 24, 24A, 106 & 279)
	31546	Bushing, Crankshaft (Use as required)
	28926	Seal, Oil
	28427	Seal, Oil
	34011A	Dipstick, Oil (Incl. 30)
	33893A	Tube, Oil filler
	30684	* Gasket, Cylinder cover
	650488	Screw, 1/4-20 x 1-1/4"
30	33590	"O" Ring
31	650516	Screw, 1/4-20 x 1-1/8"
32	32631A	* Gasket, Cylinder head
33	30938A	Head, Cylinder
34	27793	Clip, Conduit (Use as required)
	28942	Screw, 10-32 x 3/8" (Use as required)
	650697A	Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650694A	Screw, 5/16-18 x 2" (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug
	27896A	* Gasket, Breather cover
30	Z1 000/1	Odonot, Dieduloi Ovei

Ref #	Part Number	Qty	Description
39	28423		Body, Breather
40	28424		Element, Breather
41	28425		Cover, Valve spring
	26073		Washer (Use as required)
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	34712		Flange Carburetor
	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
	650548		Screw, 8-32 x 5/16"
	33454		Lever Assy., Governor
	34662		Link, Throttle
59	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
62	29642		Ring, Retaining
63A	30699C		Rod Assy., Governor (Incl. 64 & 65)
	30699B		Governor Rod Ass'y. (This one-piece governor rodis no longer
			used. It is replaced by 30699C ass'y.,Ref. no. 63A)
64	30700		Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Lockwasher, #8 E.T.
	35350		Tube, Breather
	29747B		Screw, 5/16-24 x 21/32"
	35260		·
	650815		Blower Housing (For electric starter)
			Washer, Belleville
	8116		Nut, Hex
/3	29536		Blower Housing Baffle (without electric starter knock-out) (Use as required)
73	35256A		Blower Housing Baffle (with electric starter knock-out) (Use as required) (Point Ignition)
74	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
	650517		Screw, 1/4-20 x 27/32"
	730164		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89, 90A & 331B)
0ZA	750104		(Use as required)
			(Ose as required)
97	34240		Ground Wire
98	31342		Spring, Compression
99	650549		Screw, 5-40 x 7/16"
100	29538		Base, Engine mounting
	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor (Incl. 109)
	30588A		Spool, Governor
	30590A		Washer, Flat
	29193		Ring, Retaining
	34158		Bracket, Fuel tank
	650561		Screw, 1/4-20 x 5/8" Fuel Cop (Milita Plantia)(Std)(As required)
	410144B		Fuel Cap (White Plastic)(Std)(As required)
115	33032		Fuel Cap (Charcoal Plastic) (Spurt resistant, Low profile) (Use as required)
115	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as required)
115	35355		Fuel Cap (Use as required)
	34159		Plate, Fuel tank mounting

	D (N)		B 1.0
	Part Number	Qty	Description
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962		Fuel Line (Braided 32") (81 cm) (Use as req.)
120	650128		Screw, 10-24 x 1/2" (Use as required)
121	30622A		Extension, Blower housing
124	650542		Screw, 5/16-18 x 3/4"
126	650729		Screw, 5/16-18 x 3-3/16"
127	26073		Washer (Use as required)
128	650694A		Screw, 5/16-18 x 2" (Use as required)
129	32589		Key, Flywheel
	31843A		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	650493		Screw, 1/4-20 x 1-3/4"
	30747		Clip, Shorting
	650665		Screw, 1/4-15 x 7/8"
	610118		Cover, Spark plug (Use as required)
	650561		Screw, 1/4-20 x 5/8" (Use as required)
	30939A		Cover, Cylinder head
	34814		Primer Assy.
	32180C		
			Line, Primer
	34126 650760		Bracket, Grommet mounting
			Screw, 8-32 x 3/8"
	28545		Grommet
	32125		Cup, Starter
	35009		Screen, Starter cup
	26460		Clamp, Fuel line
	31461		Bushing, Crankshaft (Use as required)
	33876		Gasket, Stator
	610973		Terminal Ass'y. (As req. on late prod uction)
	27275		Clip, Hi-tension wire (Use as require d)
	34246		Clip, Ground wire (Use as required)
	34346		Decal, Instruction
332	30547A		Contact Assy., Breaker
333	30548B		Condenser
	631021		Inlet Needle, Seat & Clip Assy.
336	631920		Carburetor (Incl. 75) (Refer to Division 5, Section A, page 138
			for breakdown)
227	611051		Magneta (12 Valt) (2 Amp) NOTE: The complete magneta is
331	011001		Magneto (12 Volt) (3 Amp) NOTE: The complete magneto is
			not available as an assembly. The magneto number is
			shown for reference purposes only. Order component parts
			individually, as show in parts list. (Refer to Division 5,
			Section B, page 36 for breakdown)
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
3-2-			breakdown)
2.5	000004		,
343	33239A		* Gasket Set (Incl. items marked*)

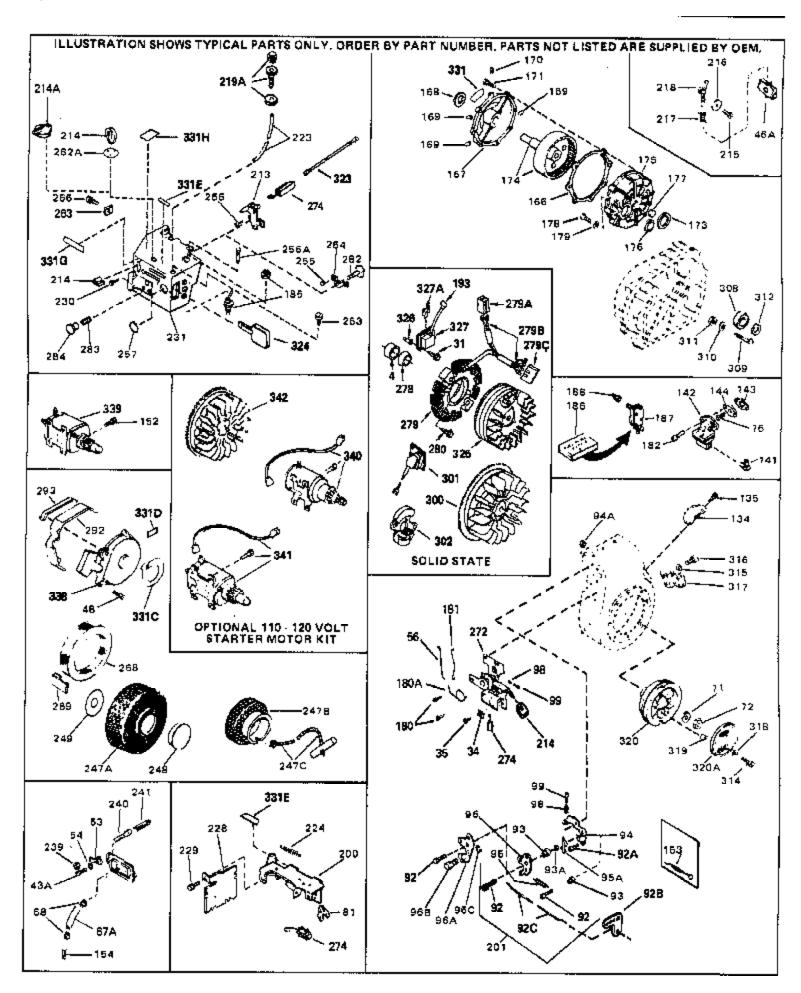

Ref #	Part Number	Qty	Description
31	650516		Screw, 1/4-20 x 1-1/8"
34	27793		Clip, Conduit (Use as required)
35	28942		Screw, 10-32 x 3/8" (Use as required)
	650128		Screw, 10-24 x 1/2"
48	29716		Screw, 1/4-28 x 7/16"
	34662		Link, Throttle
	650815		Washer, Belleville
	8116		Nut, Hex
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	33013		Cover, Bubble
	650760		Screw, 8-32 x 3/8"
	34663		Spring, Speed control
	650821		Screw, 10-32 x 1/2"
	34661		Link, Governor
	610118		Cover, Spark plug (Use as required)
	35438		
			Knob, Control
	32180C		Line, Primer
	650257		Screw, 8-32 x 5/16"
	35060		Cover, Carburetor
	32398		Bracket, Choke
	28820		Screw, 10-32 x 1/2"
	650760		Screw, 8-32 x 3/8"
	650764		Nut, "U" Type (Use as required)
	34664		Control Bracket (Incl. 98, 99, 180A & 274)
	610973		Terminal Ass'y. (As req. on late prod uction)
	34127		Guard Starter
	32576		Seal, Snow guard
	34414		Decal, Warning
	34144		Decal, Primer
338	590473		Rewind Starter (Refer to Division 5, Section C, page 29 for
			breakdown)
340	33328D		Starter Motor Kit (110-120 Volt) This 110-120 volt starter motor kit may have been added to this engine. It can be added only if cylinder hasdrilled and tapped starter mounting bosses and a ring gear flywheel (see#342). Refer to service number stamped on end cap of motor, or on decal, for identifica
342	30811A		Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above)
342	611042		Flywheel (Used on Type letters H and above) (Std. Point ignition) (Ring gear flywheel required on engines using 110-120 volt starter kits listed above)
342	611085		Flywheel (Minimum ring gear flywheel required on engines using 110-120 volt starter kits listed above) (Use withSolid State ignition)



Ref #	Part Number	Qty	Description
27	27513		Lockwasher, 1/4" (Use as required)
36	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
36	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
36	650694A		Screw, 5/16-18 x 2" (Use as required)
38	27896A		* Gasket, Breather cover
42	26073		Washer (Use as required)
42	650691		Washer, Flat (Use as required)
50	650548		Screw, 8-32 x 5/16"
51	30319		Rivet, Split (Used in early productio n)
52	33454		Lever Assy., Governor
57	730130		Exh.Adap.Kit (Incl. 58 & 125) (Use as req.)
58	30196		Screw, 5/16-18 x 3/4" (Use as require d)
59	29216		Nut, Lock, 10-32
61	29826		Screw, 10-32 x 3/4"
66	29918		Lockwasher, #8 E.T.
82	730127		Air Cleaner Ass'y. (Incl. 60, 83, 87, 88, 89A, 90, 238 &
			331B) (Use as required)
82B	730561		Air cleaner kit (Incl. 38, 67A, 83, 84B, 85,89B, 89C, 90A, 91,
			91A, 91B, 91C, 91D, 245 & 331B) (Use only on engines with
			an externally vented fully adjustable carburetor)
840	34819		Air Cleaner Elbow (Incl. 84B, 86A, 91, 91A, 91B & 91C) (Use
שרט	0-1010		in 730561 assembly only) NOTE: 130010 thru 10C & 11
			used in early production only.
4005	204200		,
	391026		Opt. Spark Arrest Muffler (Incl.196,1 97,199)
	34185A		Muffler (w/spark arrest features)
	31588		Plate, Muffler locking
	650561		Screw, 1/4-20 x 5/8" Fuel Line (Projded 8 1/4" 21 cm)(Line co. reg.)
	29774		Fuel Line (Braided 8-1/4" 21 cm)(Use as req.)
	30705		Fuel Line (Braided 16") (41 cm) (Use as req.)
	30962 650729		Fuel Line (Braided 32") (81 cm) (Use as req.) Screw, 5/16-18 x 3-3/16"
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650548		Screw, 8-32 x 5/16" (Early production)
	34067		Wire Assy., Alternator adapter (4-1/4 ")
	34069		Wire Assy., Alternator adapter (4-1/4-) Wire Assy., Alternator adapter (6-3/4 ")
	30322		Nut & Lockwasher (Early Prod. Only)
	29916		Clamp, Governor lever (Early Prod. On ly)
	31288		Exh. Adaptor Kit (Incl.125,203,204) (As req.)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	6021A		Screw, 5/16-18 x 1-1/2" (Use as required)
	650760		Screw, 8-32 x 3/8"
	28545		Grommet
	26460		Clamp, Fuel line
200	20100		Siarry, i doi iii lo