

	Part Number	Qty	Description
	32586C		Cylinder (Incl. 2, 3 & 4) (2-3/4" Bor e)
	27652		Pin, Dowel
3	27642		Plug, Oil drain
4	32630		Seal, Oil
5	32783		Intake Valve (Std.) (Incl. 9)
5	32784		Intake Valve (1/32" OS) (Incl. 9)
6	27878A		Exhaust Valve (Std.) (Incl. 9)
6	27880A		Exhaust Valve (1/32" OS) (Incl. 9)
7	27882		Cap, Upper valve spring
8	27881		Spring, Valve
9	32581		Cap, Lower valve spring
10	34242		Dipper, Oil
11	35205		Crankshaft
	29783		Crankshaft Gear Pin (Used on early pr od.)
	27884		Gear, Crankshaft (Used on early production)
	32592B		Piston & Pin Ass'y. (Std.)(2-3/4")(In cl.16)
	32593B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32594B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	34517		Piston, Pin & Ring Set (Std.) (2-3/4" Bore)
	34518		Piston, Pin & Ring Set (.010" OS)
	34519		Piston, Pin & Ring Set (.020" OS)
	32595		Ring Set (Std.) (2-3/4" Bore)
	32596		Ring Set (.010" OS)
	32597		Ring Set (.020" OS)
	27888		Ring, Piston pin retaining
	32591C		Rod Assy., Connecting (Incl. 10 & 18)
	650662C		Bolt, Connecting rod (2 each)
	30969		Cap, Oil drain
	32115		Camshaft (MCR)
	34034		Lifter, Valve
	31303B		Cover, Cylinder (Incl. 24 & 106)
	28427		Seal, Oil
	34011A		Dipstick (Incl. 30)
	33893A		Tube, Oil filler
	30684		* Gasket, Cylinder cover
	650488		Screw, 1/4-20 x 1-1/4"
	33590		"O" Ring
	650814		
	32631A		Screw, Torx T-15, 10-24 x 1" * Gasket, Cylinder head
	30938A		
	27793		Head, Cylinder Clip, Conduit (Use as required)
	28942		
			Screw, 10-32 x $3/8$ " (Use as required)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as required)
	650694A		Screw, 5/16-18 x 2" (Use as required)
	35395		Spark Plug, Resistor (RJ19LM) * Casket, Broother
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Valve spring
	650690		Washer, Belleville (Use as required)
	650691		Washer, Flat (Use as required)
	650128		Screw, 10-24 x 1/2"
	27915A		* Gasket, Intake
	34712		Flange, Carburetor
	30196		Screw, 5/16-18 x 3/4"
	29716		Screw, 1/4-28 x 7/16"
50	650548		Screw, 8-32 x 5/16"

Ref #	Part Number	Otv	Description
	33454	QUY	Lever Assy., Governor
	34662		Link, Throttle
	730130		Exhaust Adaptor Kit (Incl.58,125) (As req.)
	30196		Screw, 5/16-18 x 3/4" (Use as require d)
59	29216		Locknut, 10-32
61	29826		Screw, 10-32 x 3/4"
	29642		Ring, Retaining
	30699C		Rod, Governor (Incl. 64 & 65)
	30700		
			Yoke, Governor
	650494		Screw, 6-40 x 5/16"
	29918		Washer, Lock #8 E.T.
	35350		Tube, Breather
69	29747B		Screw, 5/16-24 x 21/32"
70	35260		Blower Housing (For elec.strt.)(Incl. 134,135)
	650815		Washer, Belleville
	650871		Nut, Hex
13	29536		Blower Housing Baffle (Without electric starter knock-out)
			(Use as required)
73	35256A		Blower Housing Baffle (With electric starter knock-out) (Use
			as required)
- 7 A	CE0EC1		· ,
	650561		Screw, 1/4-20 x 5/8"
	31688A		* Gasket, Carburetor
76	34443A		Solid State Assy. (Incl. 146)
77	650872		Stud, Solid state mounting
	611085		Flywheel (w/ring gear)
	650517		Screw, 1/4-20 x 27/32"
82	730561		Air Cleaner Kit (Incl. 38, 67A, 68, 83, 84A,85, 87, 88, 89,
			156 & 190A) (Use only on engines with an externally vented
			fully adjustable carburetor)
84A	34819		Elbow Assy., Air cleaner (Incl. 84, 90, 91, 92 & 92A)(Use in
01/1			730561 assy. only)
	650168		Washer, Flat
96	590574		Handle, Mitten grip
97	35253		Wire Assy., Ground
	31342		Spring, Compression
	650549 20528		Screw, 5-40 x 7/16"
	29538		Base, Engine mounting
	650542		Screw, 5/16-18 x 3/4"
103	32401		Muffler
	391026		Muffler (Incl. 183, 184 & 185) (Thisspark arrester muffler can
100/1			be used on any model)
	34246		Clip, Ground wire (Use as required)
105A	29443		Clip, Fuel line
106	31845		Shaft, Mechanical governor
	30591		Gear Assy., Governor
	30588A		Spool, Governor
	35479		Washer, Flat
	29193		Ring, Retaining
111	34158		Bracket, Fuel tank mounting
	34159		Plate, Fuel tank mounting
	650561		Screw, 1/4-20 x 5/8"
114	34186A		Fuel Tank (Incl. 115 & 168) NOTE: These tanks were built
			with different size fuel inlet openings. Tanks with the 1-3/16"
			I.D. opening use fuel cap 33032 or 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.

		Qty Description
115	410144B	Fuel Cap (White Plastic) (Std)(Use as req.)
115	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use
		as required)
445	0.404.0	
115	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required)
115	35355	Fuel Cap (Red Plastic) (Use as requir ed)
	29774	Fuel Line (Braided 8-1/4")(21 cm)(As req.)
	30962	Fuel Line (Braided 32")(81 cm)(Use as req.)
	650128	Screw, 10-24 x 1/2"
	650764	Nut, "U" Type
	30622A	Extension, Blower housing
	27930A	* Gasket, Exhaust
	30196	Screw, 5/16-18 x 3/4"
127	26073	Washer, Flat
128	650694A	Screw, 5/16-18 x 2"
128	30196	Screw, 5/16-18 x 3/4"
129	32589	Key, Flywheel
	31843A	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	650493	Screw, 1/4-20 x 1-3/4"
	33013	Cover, Starter bubble
	650760	
		Screw, 8-32 x 3/8"
	650665	Screw, 1/4-15 x 7/8"
	30322	Locknut, 8-32
	29916	Clamp, Governor lever
	650821	Screw, 10-32 x 1/2"
	34663	Spring, Speed control
	34661	Link, Governor
	610118	Cover, Spark plug (Use as required)
147	30939A	Cover Assy., Cylinder
148	35439	Knob, Control
149	34814	Primer Assy.
150	32180C	Line, Primer
151	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650257	Screw, 8-32 x 5/16"
	35060	Cover, Carburetor
	32125	Cup, Starter
	35009	Screen, Starter
	35161	,
		Plug, Starter
	32398	Bracket, Choke
	28820	Screw, 10-32 x 1/2"
	650760	Screw, 8-32 x 3/8"
	650765	Screw, 10-32 x 1/2"
	26460	Clamp, Fuel line (Use as required)
	34664	Control Bracket (Incl. 98, 99, 144 & 172)
172	610973	Terminal Assy. (Use as required)
174	31546	Bushing, Crankshaft
	34127	Guard, Starter
	32576	Seal, Snow guard
	33323	Screen, Muffler (Use as required)
	650578	Screw, 8-18 x 3/8" (Use as required)
	33700	Cover & Tube, Muffler (Use as required)
COL		Decal, Instruction Can be used on H70 with stamped steel
188C	3/870	Libral Instruction (an boulead on U/1) with stamped stool

Ref #	Part Number Qt	/ Description
188B	32204	Bracket, Starter air cleaner Can be used on H70 with stamped steel starter
188A	32203	Air Cleaner, Starter Can be used on H70 with stamped steel starter
188	730571	Starter Muff Kit (Incl.188A,188B & 18 8C) Can be used on H70 with stamped steel starter
190 191	34418 34144 631021 632371	Decal, Choke Decal, Primer Inlet Needle, Seat & Clip Assy. Carburetor (Incl. 75) (Refer to Division 5, Section A, page 198 for breakdown)
197	590604	Rewind Starter (Refer to Division 5, Section C, page 29 for breakdown)
199	611042	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above) (For use with Std. point ignition)
199	611085	Flywheel (Ring gear flywheel requiredon engines using 110-120 volt starter kits listed above) (For use with solid state ignition)
200	33239A	Gasket Set (Incl. items marked*)