## ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.




Pof #	Part Number	Otv	Description
		Qty	
	33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
	27652		Pin, Dowel
	31950		Seal, Oil
5	31940		Intake Valve (Std.)
5	31941		Intake Valve (1/32" OS) (Incl. 9)
6	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
			. •
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	31945		Cap, Lower valve spring (Std.)
9A	31946		Cap, Lower valve spring (1/32" OS)
10	20810		Pin, Valve spring retainer
11	32059B		Crankshaft (Incl. 12, 13, 17, 78 & 79)
	29783		Pin, Crankshaft gear
	31931		Gear, Crankshaft
	32001C		
			Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
14	34509		Piston, Pin & Ring Set (.010" OS)
14	34510		Piston, Pin & Ring Set (.020" OS)
	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32004		Ring Set (Std.) (3-5/16" Bore)
	32005		Ring Set (.010" OS)
15	32006		Ring Set (.020" OS)
15	32623		Ring Set (.030" OS)
15	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(0.010" US)(Incl.1 8,19,20)
	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
	32077		Bolt, Connecting rod
	26073		Washer, Connecting rod
20	28264		Nut Assy., Lock
21	32150		Camshaft (MCR)
22	31939		Lifter, Valve
	31956A		* Gasket, Cylinder cover
	32685		Cylinder Cover (Incl.4,25,26A,28,30,3 4 & 43)
	29673		* Gasket, Oil fill
	35499		"O" Ring
	33069		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
29	650588		Screw, 1/4-20 x 2"
30	31927		Oil Drain Plug
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
			• '
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
	650518		Lockwasher
37	650544		Screw, 10-24 x 7/8"


Ref#	Part Number	Qty	Description
	7975		Nut, 10-24
39	31965		Plate, Governor spring
40	30312		Screw, 10-32 x 1/2"
41	31967		Spring, Governor
42	30590A		Washer, Flat
43	32425		Rod Assy., Governor
44	31948		Spool, Governor
45	29193		Ring, Retaining
	31947		Gear Assy., Governor
47	31930		Shaft, Mechanical Governor
	32000A		* Gasket, Cylinder head
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as required)
	650692		Screw, 5/16-18 x 1-3/4" (Use as required)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
	34251		Resistor Spark Plug (RJ-17LM)
	33035		Cover, Cylinder head
	28537		Washer, Plain
	650691		Washer, Flat (Use as required)
	650690		Washer, Belleville (Use as required)
	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
	31976		Extension, Blower housing
	31978		Bracket, Fuel tank
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
00	0.12.10		required)
64	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		
	650517		Nut, Flange whiz-lock, 1/4-20 Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561		Screw, 1/4-20 x 5/8" (Use as required )
	30063		Screw, 1/4-20 x 1/2" (Use as required )
	792028		Screw, 5/16-18 x 7/8" (Use as required )
	8345		Washer, Flat
	8303		Lockwasher
	29683		Strainer & Shut-off, Fuel
	26460		•
	29774		Clamp, Fuel line (Use as required)
			Fuel Line (Braided) (8.25") (Use as required)
	30705		Fuel Line (Braided) (16") (Use as req uired) Fuel Line (Braided) (32") (Use as req uired)
	30962		
	30965		Fuel Line (Braided) (48") (Use as req uired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		Bearing, Tapered roller
79	31928		Cup, Bearing

	Spacer, Steel (.010" thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim
	gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required
	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
2	"O" Ring * Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
79 66 94 4A 95 24 8 7 0 28 8 66 4A 97 91 9 2 3B 8 2 2 87 2 99 7 6 6 8	Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Muffler Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Cover, Air cleaner Cover, Air cleaner Nut, Wing
92 7 27694 9 2870286499923828297689	8 9 6 4 A 5 4 6 6 6 7 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1


Ref #	Part Number	Qty	Description
128	650713		Screw, 5/16-18 x 5/8" (Use as require d)
128	650429		Screw, 5/16-18 x 3/4" (Use as require d)
128	792028		Screw, 5/16-18 x 7/8" (Use as require d)
141A	8274		Lockwasher, Split (Use as required)
141	26073		Washer, Flat (Use as required)
145	31960		* Gasket, Carburetor
147	31959		Baffle, Air
	33356		Terminal, Ground
	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	31992		Spacer, Screen
177	8345		Washer, 1/4 plain (Use as required)
	27070		Washer, Lock 1/4 E.T. (Use as require d)
	650675		Washer, Flat 1/4 (Use as required)
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	650713		Screw, 5/16-18 x 5/8"
	26073		Washer, Flat
	33776		Screen, Starter pulley
	31980		Pulley, Starter
	650680		Screw, 1/4-20 x 1-1/2"
	32046		Rope Assy., Starter (Use as required)
	650661		Screw, 1/4-20 x 3/4"
	610408		Nut, Hex
	610750		Grommet, Lead wire
	610748		Solid State Magneto (Incl.151,173,265 ,266)
	610746		Solid State Flywheel
	34346		Decal, Instruction
	550223		Decal, Name
	32676		Decal, Solid State
	31752		Decal, Air cleaner
	32255A		Valve, Seat, Spring & Gasket Assy.
301	631564		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

## This illustration may not depict actual equipment and is for reference only! VIEW 2 of 3 267A

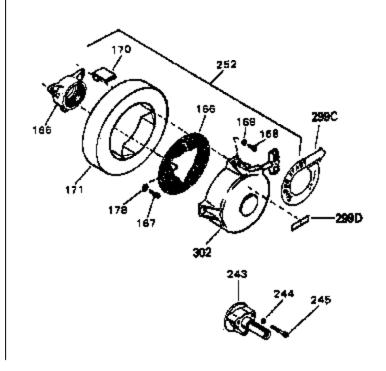

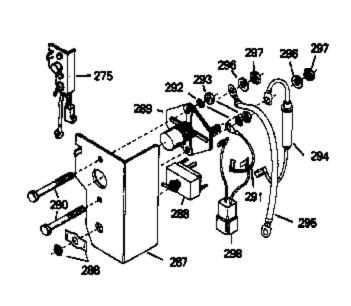

Ref #	Part Number	Qty	Description
	27070	-	Washer, Lock 1/4 E.T. (Use as require d)
	650675		Washer, Flat 1/4 (Use as required)
	650701		Screw, 8-18 x 7/16" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
	610761		Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 &
201	0.0701		257A)
255	650416		Screw, 10-32 x 1"
256	610922		Terminal, Female
257B	610824		Flat Connector (Female terminals) (As req.)
257A	610819		Connector, Pyramid (For female termin als)
266	610750		Grommet, Lead wire
	610749		Solid State Regulator (10 Amp)
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835
			starter motors are used interchangeably on the se models.
			Refer to service numberstamped on end cap of motor, or on
			decal for identification. Refer to Division 5, Section D for
			breakdown.

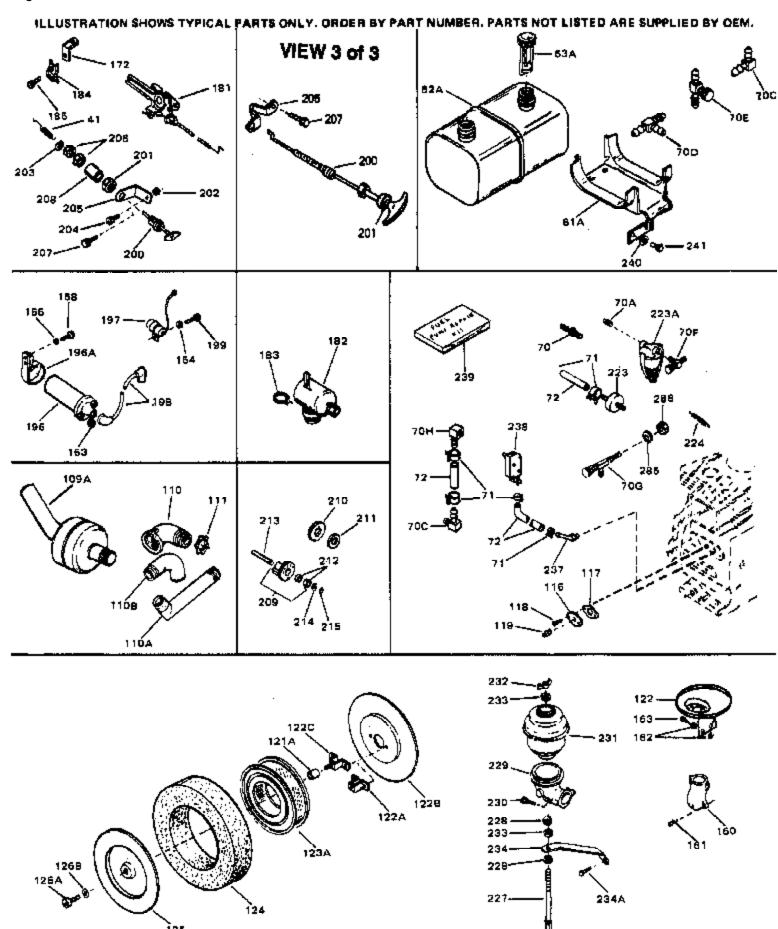

Ref #	Part Number Q	ty Description
41	31967	Spring, Governor
62A	31977	Fuel Tank (Incl. 63)
70	29634	Fitting, Fuel line
71	26460	Clamp, Fuel line (Use as required)
72	29774	Fuel Line (Braided) (8.25") (Use as r equired)
72	30705	Fuel Line (Braided) (16") (Use as req uired)
72	30962	Fuel Line (Braided) (32") (Use as req uired)
72	30965	Fuel Line (Braided) (48") (Use as req uired)
119	28534	Pipe Plug, 1/8-27 (Use as required)
119	9556	Plug, Pipe, 1/8-27 (Use as required)
123A	32008	Element, Air cleaner
172	31990	Bracket, Choke control
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"