
## ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

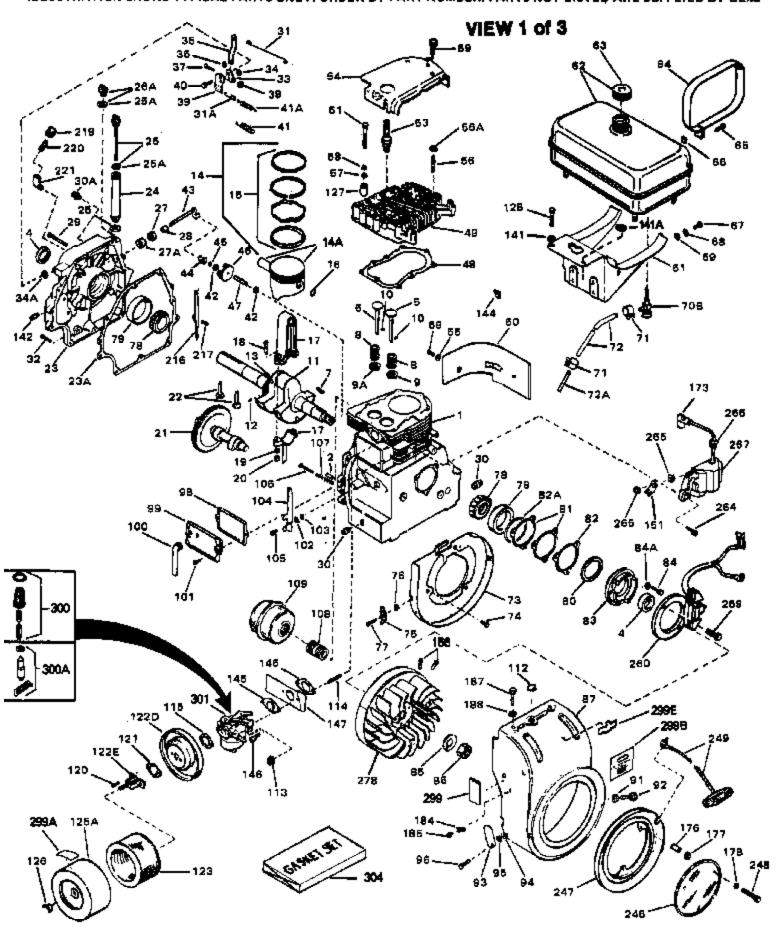


Ref # Part Number	Otv	Description
1 33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
2 27652		Pin, Dowel
4 31950		Seal, Oil
5 31940		Intake Valve (Std.)
5 31941		Intake Valve (1/32" OS) (Incl. 9)
6 31942		Exhaust Valve (Std.)
6 31943		Exhaust Valve (1/32" OS) (Incl. 9)
7 650592		Key, Flywheel
8 31944		Spring, Valve
9 31946		Cap, Lower valve spring (1/32" OS)
9 31945		Cap, Lower valve spring (Std.)
9A 31945		Cap, Lower valve spring (Std.)
9A 31946		Cap, Lower valve spring (1/32" OS)
10 20810		Pin, Valve spring retainer
11 32007C		Crankshaft (Incl. 12, 13, 17, 78 & 79)
12 29783		Pin, Crankshaft gear
13 31931		Gear, Crankshaft
14 34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
14 34509		Piston, Pin & Ring Set (0.010" OS)
14 34510		Piston, Pin & Ring Set (.010 CS)
		• • • • • • • • • • • • • • • • • • • •
14 34850		Piston, Pin & Ring Set (.030" OS)
14 34523		Piston, Pin & Ring Set (.040" OS)
14 32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
14A 32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
14A 32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A 32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
15 32004		Ring Set (Std.) (3-5/16" Bore)
15 32005		Ring Set (.010" OS)
15 32006		Ring Set (.020" OS)
15 32623		Ring Set (.030" OS)
15 32624		Ring Set (.040" OS)
15 32321		Re-Ringing Set, Piston
16 31919		Ring, Piston pin retaining
17 33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17 34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17 34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 32077		Bolt, Connecting rod
19 26073		Washer, Connecting rod
20 28264		Nut Assy., Lock
21 32150		Camshaft (MCR)
22 31939		Lifter, Valve
23A 31956A		* Gasket, Cylinder cover
23 32580A		Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
24 31985		Oil Fill Tube
25 29673		* Gasket, Oil fill tube
25A 29673		* Gasket, Oil fill
25A 35499		"O" Ring
26 33070		Dipstick (Incl. 25A)
28 32426		Spacer, Governor rod
29 650588		Screw, 1/4-20 x 2"
31 31968		Link, Governor
		·
32 650451 33 34064		Screw, 1/4-20 x 1"
33 31964		Clamp, Governor lever
34 29193		Ring, Retaining
35 31963		Lever, Governor adjusting
36 650518		Lockwasher
37 650544		Screw, 10-24 x 7/8"


Ref # Part Number	Qty Description
38 7975	Nut, 10-24
39 31965	Plate, Governor spring
40 30312	Screw, 10-32 x 1/2"
41 31967	Spring, Governor
42 30590A	Washer, Flat
43 32425	Rod Assy., Governor
44 31948	Spool, Governor
45 29193	Ring, Retaining
46 31947	Gear Assy., Governor
47 31930	Shaft, Mechanical Governor
48 32000A	* Gasket, Cylinder head
49 33034	Head, Cylinder
51 650694A	Screw, 5/16-18 x 2" (Use as required)
51 650711	Screw, 5/16-18 x 1-5/8" (Use as requi red)
51 650628A	Screw, 5/16-18 x 2-3/8" (Use as required)
51 650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
51 650714	Screw, 5/16-18 x 1-5/8" (Use as required)
51 650697A	Screw, 5/16-18 x 2-1/2" (Use as required)
51 650692	Screw, 5/16-18 x 1-3/4" (Use as required)
51 650603	Screw, 5/16-18 x 5/8" (Use as require d)
53 33636	Resistor Spark Plug (RJ-8C)
53 34251	Resistor Spark Plug (RJ-17LM)
54 33035	Cover, Cylinder head
55 28537	Washer, Plain
57 650691	Washer, Flat (Use as required)
58 650690	Washer, Belleville (Use as required)
58 8274	Washer, Lock (Use as required)
59 650128	Screw, 10-24 x 1/2"
60 31976	Extension, Blower housing
63 410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63 34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
00 01210	required)
67 650517	Screw, 1/4-20 x 27/32" (Use as requir ed)
67 650561	Screw, 1/4-20 x 5/8" (Use as required )
67 30063	Screw, 1/4-20 x 1/2" (Use as required )
67 792028	Screw, 5/16-18 x 7/8" (Use as require d)
70B 29683	Strainer & Shut-off, Fuel
71 26460	Clamp, Fuel line (Use as required)
72 29774	Fuel Line (Braided) (8.25") (Use as r equired)
72 30705	Fuel Line (Braided) (16") (Use as req uired)
72 30962	Fuel Line (Braided) (32") (Use as req uired)
72 30965	Fuel Line (Braided) (48") (Use as req uired)
73 32579	Baffle, Blower housing
74 650561	Screw, 1/4-20 x 5/8"
78 31932	Bearing, Tapered roller
79 31928	Cup, Bearing
80 32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
	between the cover and the machined surface on the cylinder
	which can be from .001"up to .007" in which case no shim
	gaskets will be required. Use of gasket must be limited to a
	combined total of .010" thick. Steel spacersmust be used
	as required

which can be from .001*up to .007*in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Steel spacersmust be used as req  83 32577 Cover, Cylinder NOTE: Determine the gap between the cove and the machined surface on the cylinder which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010* thick. Steel spacersmust be used as required to eliminat  84A 650679 Lockwasher, 5/16* (Use as required)  84 792028 Screw, 5/16-18 x 7/8*  85 650666 Washer, Lock  86 650594 Nut, Flywheel, 3/4-16  87 33044A Blower Hsg. (Incl.73) (For electric s tarter)  8274 Washer, Lock  92 650695 Screw, 5/16-24 x 3/8*  93 31957 Screw, 5/16-24 x 9/16*  9 31958 ** Gasket, Breather  9 31957 Breather Assy.  100 35360 Tube, Breather  101 650128 Screw, 10-24 x 1/2*  102 25558 Washer, Wave  103 31966 Bushing, Control lever  106 650591 Screw, 10-24 x 2*  107 33099 Spring  108 32042 Nipple, Exhaust pipe  119 Muffler  110 250399 Screw, 10-24 x 5/8*  111 29752 ** Gasket, Air cleaner  112 33036 Cover, 5/16 cleaner  112 33075 Bracket, Air cleaner  122 3377 Bracket, Air cleaner  125 A 31926 Cover, Air cleaner		Part Number 31971	Qty	Description  * Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
and the machined surface on the cylinder which can be from .001" up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat  84A 650679				* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used
84 792028 85 650666 86 650594 81 Nut, Flywheel, 3/4-16 87 33044A 81 Blower Hsg. (Incl.73) (For electric s tarter) 82 650595 82 74 92 650595 82 74 93 31958 93 31958 93 31957 100 35350 101 650128 102 28558 103 31966 8 Bushing, Control lever 105 650597 106 650597 107 33099 108 32042 109 34238 112 33038 112 33038 112 3038 113 29752 114 660587 115 277272 120 650399 121 30767 122 87 36 12 8 12 8 12 8 12 8 12 8 12 12 13 30767 122 87 31926 125 A 31926  Screw, 5/16-24 x 3/8" Washer, Lock Nasher, Lock Nasher, Lock Nasher, Saket, Breather Screw, 10-24 x 9/16" Screw, 10-24 x 1/2" Washer, Wave Washer, Wave Nasher, Vave Na	83	32577		required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to
126 650713	84 85 86 87 91 92 95 96 98 99 100 101 102 103 105 106 107 108 109 112 113 114 115 120 121 122E 123 125A 126 128 128 141 141A 145	792028 650666 650594 33044A 8274 650595 8274 650624 31958 31957 35350 650128 28558 31966 650597 650591 33099 32042 34238 33038 29752 650587 27272 650399 30767 32377 31925 31926 650513 650713 650713 650429 792028 26073 8274 31960		Screw, 5/16-18 x 7/8" Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 9/16" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Muffler Plug, Button (Use as required) Nut & Lockwasher Assy. Stud, Carburetor * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Washer, Flat (Use as required) Lockwasher, Split (Use as required) * Gasket, Carburetor


	Part Number	Qty	Description
151	33356		Terminal, Ground
156	730201		Trigger Pin Kit (Use as required)
173	610118		Cover, Spark plug (Use as required)
176	31992		Spacer, Screen
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
219	32154		Cap, Pipe
220	32673		Nipple, Pipe
	33776		Screen, Starter pulley
247	31980		Pulley, Starter
	650680		Screw, 1/4-20 x 1-1/2"
249	32046		Rope Assy., Starter (Use as required)
	650661		Screw, 1/4-20 x 3/4"
265	610408		Nut, Hex
266	610750		Grommet, Lead wire
	610748		Solid State Magneto (Incl.151,173,265 ,266)
	610746		Solid State Flywheel
	34346		Decal, Instruction
	31752		Decal, Air cleaner
	550223		Decal, Name
	32676		Decal, Solid State
	32411A		Valve, Seat, Spring & Gasket Assy.
301	631304A		Carburetor (Incl. 145) (Refer to Division 5, Section A, page 94 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

## This illustration may not depict actual equipment and is for reference only! VIEW 2 of 3 267A

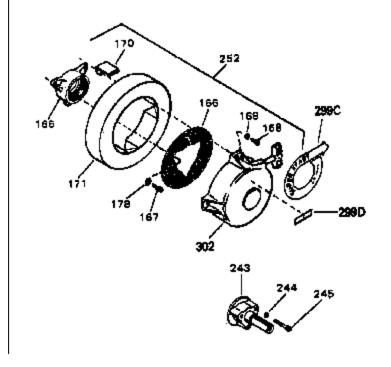

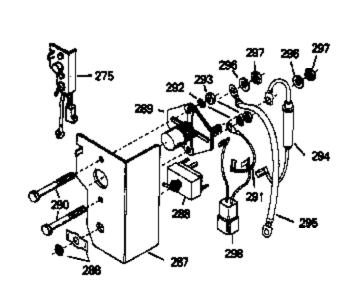

Ref #	Part Number	Qty	Description
	27070	-	Washer, Lock 1/4 E.T. (Use as require d)
	650675		Washer, Flat 1/4 (Use as required)
	650701		Screw, 8-18 x 7/16" (Use as required)
	792028		Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781		Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276		Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736		Screw, 10-16 x 3/8" (Use as required)
252	730134		Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
253	33018		Harness Assy., Adapter (Use as requir ed)
	610761		Alternator Coil (Solid State) (10 Amp) (Incl. Nos. 253, 256 &
201	0.0701		257A)
255	650416		Screw, 10-32 x 1"
256	610922		Terminal, Female
257B	610824		Flat Connector (Female terminals) (As req.)
257A	610819		Connector, Pyramid (For female termin als)
266	610750		Grommet, Lead wire
	610749		Solid State Regulator (10 Amp)
	730198		Starter Switch Kit(Incl. 287-298) (As req.)
303	33835		Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835
			starter motors are used interchangeably on the se models.
			Refer to service numberstamped on end cap of motor, or on
			decal for identification. Refer to Division 5, Section D for
			breakdown.

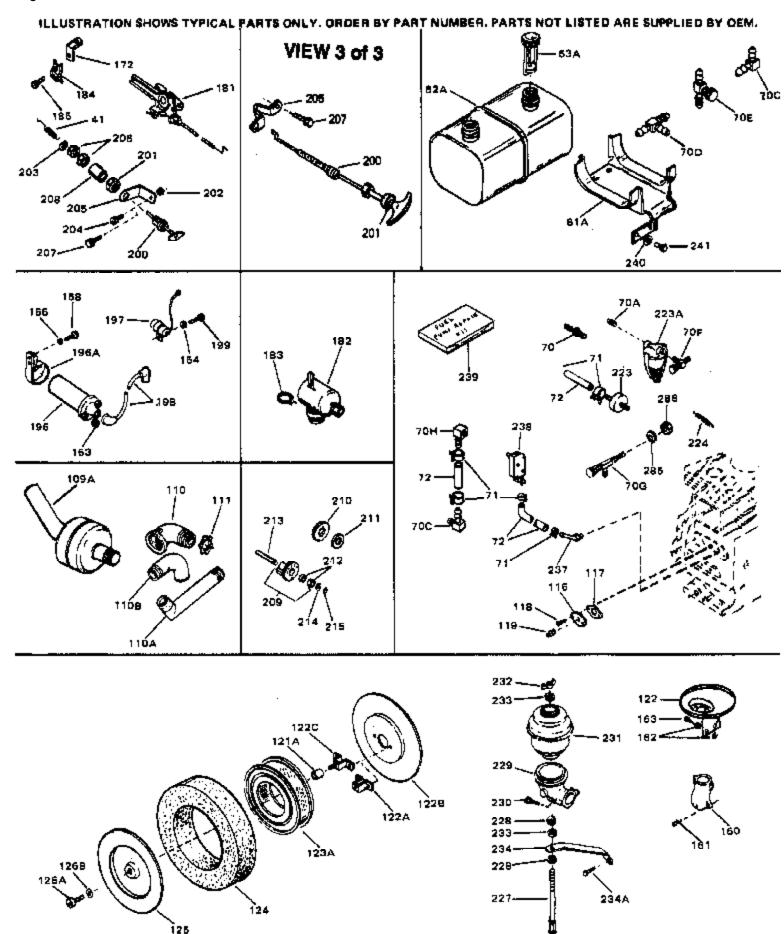

Ref #	Part Number	Qty	Description
41	31967	_	Spring, Governor
63A	32437A		Gauge, Visual fuel
71	26460		Clamp, Fuel line (Use as required)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
111	650590		Nut, Conduit
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122	32919		Bracket, Air cleaner
160	32920		Elbow, Air cleaner
161	650416		Screw, 10-32 x 1" (two required)
162	650583		Washer, Plain
163	28788		Screw, 8-32 x 1/2"
172	31990		Bracket, Choke control
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
237	32958		Fitting, Fuel
238	32959		Fuel Pump, Impulse
239	33010		Repair Kit, Impulse fuel pump