## ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.





Ref # Part Number	Qty Description
1 33039	Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
2 27652	Pin, Dowel
4 31950	Seal, Oil
5 31940	Intake Valve (Std.)
5 31941	Intake Valve (1/32" OS) (Incl. 9)
6 31942	Exhaust Valve (Std.)
6 31943	Exhaust Valve (1/32" OS) (Incl. 9)
7 650592	Key, Flywheel
8 31944	Spring, Valve
9A 31945	Cap, Lower valve spring (Std.)
9A 31946	Cap, Lower valve spring (1/32" OS)
9 31946	Cap, Lower valve spring (1/32" OS)
9 31945	Cap, Lower valve spring (Std.)
10 20810	Pin, Valve spring retainer
11 34278B	Crankshaft (Incl. 12, 13, 78 & 79)
12 29783	Pin, Crankshaft gear
13 31931	Gear, Crankshaft
14A 32001C	Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
14A 32002B	Piston & Pin Ass'y. (.010" OS) (Incl. 16)
14A 32003B	Piston & Pin Ass'y. (.020" OS) (Incl. 16)
14A 32619B	Piston & Pin Ass'y. (.030" OS) (Incl. 16)
14 34508	Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
14 34509	Piston, Pin & Ring Set (300.) (3-3/10 Bole)
14 34510	÷ · · · · · · · · · · · · · · · · · · ·
	Piston, Pin & Ring Set (.020" OS)
14 34850	Piston, Pin & Ring Set (.030" OS)
14 34523	Piston, Pin & Ring Set (.040" OS)
14 32620B	Piston & Pin Ass'y. (.040" OS) (Incl. 16)
15 32004	Ring Set (Std.) (3-5/16" Bore)
15 32005	Ring Set (.010" OS)
15 32006	Ring Set (.020" OS)
15 32623	Ring Set (.030" OS)
15 32624	Ring Set (.040" OS)
15 32321	Re-Ringing Set, Piston
16 31919	Ring, Piston pin retaining
17 33093A	Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
17 34383	Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17 34384	Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 32077	Bolt, Connecting rod
19 26073	Washer, Connecting rod
20 28264	Nut Assy., Lock
21 32150	Camshaft (MCR)
22 31939	Lifter, Valve
23 32580A	Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
23A 31956A	* Gasket, Cylinder cover
24 33992A	Oil Fill Tube
25A 33590	"O" Ring
26 33993A	Dipstick (Incl. 25A)
28 32426	Spacer, Governor rod
29 650588	Screw, 1/4-20 x 2"
30 31927 31 31968	Oil Drain Plug
31 31968 33 650451	Link, Governor
32 650451	Screw, 1/4-20 x 1"
33 31964	Clamp, Governor lever
34 29193	Ring, Retaining
35 31963	Lever, Governor adjusting
36 650518	Lockwasher
37 650544	Screw, 10-24 x 7/8"
38 7975	Nut, 10-24


Ref #	Part Number	Qtv	Description
	31965	~	Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32000A		* Gasket, Cylinder head
			• •
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
53	34251		Resistor Spark Plug (RJ-17LM)
54	33035		Cover, Cylinder head
55	28537		Washer, Plain
57	650691		Washer, Flat (Use as required)
58	650690		Washer, Belleville (Use as required)
58	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
60	31976		Extension, Blower housing
	31978		Bracket, Fuel tank
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
00	3.2.10		required)
	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
67	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
67	650561		Screw, 1/4-20 x 5/8" (Use as required )
67	30063		Screw, 1/4-20 x 1/2" (Use as required )
67	792028		Screw, 5/16-18 x 7/8" (Use as require d)
70B	29683		Strainer & Shut-off, Fuel
71	26460		Clamp, Fuel line (Use as required)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	32031		Spacer, Steel (.010" thick) NOTE: Determine the gap
00	02001		between the cover and the machined surface on the cylinder
			which can be from .001"up to .007" in which case no shim
			gaskets will be required. Use of gasket must be limited to a
			combined total of .010" thick. Steel spacersmust be used
			as required

Ref #	Part Number	Otv	Description
	31971		* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82	31972		* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 32577		"O" Ring Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84A 85 86 87 91 92 95 96 98 99 100 101 102 103 104 105 106 107 108 112 115 120 121 125A 128 128 128 141A 141 145 146 147	792028 650679 650666 650594 33044A 8274 650595 8274 650595 31958 31957 35350 650128 28558 31966 31984A 650597 650591 33099 32042 33038 27272 650399 30767 32810 650513 650713 650429 792028 8274 26073 33263 650451 34061 610908		Screw, 5/16-18 x 7/8" Lockwasher, 5/16" (Use as required) Washer, Lock Nut, Flywheel, 3/4-16 Blower Hsg. (Incl.73) (For electric s tarter) Washer, Lock Screw, 5/16-24 x 3/8" Washer, Lock Screw, 5/16-24 x 3/8" * Gasket, Breather Breather Assy. Tube, Breather Screw, 10-24 x 1/2" Washer, Wave Bushing, Control lever Lever, Control Screw, 10-24 x 5/8" Screw, 10-24 x 2" Spring Nipple, Exhaust pipe Plug, Button (Use as required) * Gasket, Air cleaner Screw, 10-32 x 5/8" Spacer, Air cleaner Cover, Air cleaner Nut, Wing Screw, 5/16-18 x 5/8" (Use as require d) Screw, 5/16-18 x 3/4" (Use as require d) Screw, 5/16-18 x 7/8" (Use as require d) Lockwasher, Split (Use as required) * Gasket, Carburetor Screw, 1/4-20 x 1" Baffle, Air Terminal, Female
156	610908 730201 610118		Terminal, Female Trigger Pin Kit (Use as required) Cover, Spark plug (Use as required)


Ref #	Part Number	Qty	Description	
176	31992		Spacer, Screen	
177	8345		Washer, 1/4 plain (Use as required)	
178	27070		Washer, Lock 1/4 E.T. (Use as require d)	
178	650675		Washer, Flat 1/4 (Use as required)	
184	27793		Clip, Conduit	
185	28942		Screw, 10-32 x 3/8"	
187	650713		Screw, 5/16-18 x 5/8"	
188	26073		Washer, Flat	
	33776		Screen, Starter pulley	
	31980		Pulley, Starter	
	650680		Screw, 1/4-20 x 1-1/2"	
	32046		Rope Assy., Starter (Use as required)	
	650661		Screw, 1/4-20 x 3/4"	
265	610408		Nut, Hex	
	610750		Grommet, Lead wire	
	610906		Solid State Magneto (Incl.151,173,265,266)(20 Amp)	
	610901		Solid State Flywheel	
	550223		Decal, Name	
	32676		Decal, Solid State	
	34346		Decal, Instruction	
	31752		Decal, Air cleaner	
	631021		Inlet Needle, Seat & Clip Assy.	
301	631975		Carburetor (Incl. 145) (Refer to Division 5, Section A, page	
			150 for breakdown)	
304	33237A		* Gasket Set (Incl. items marked *)	

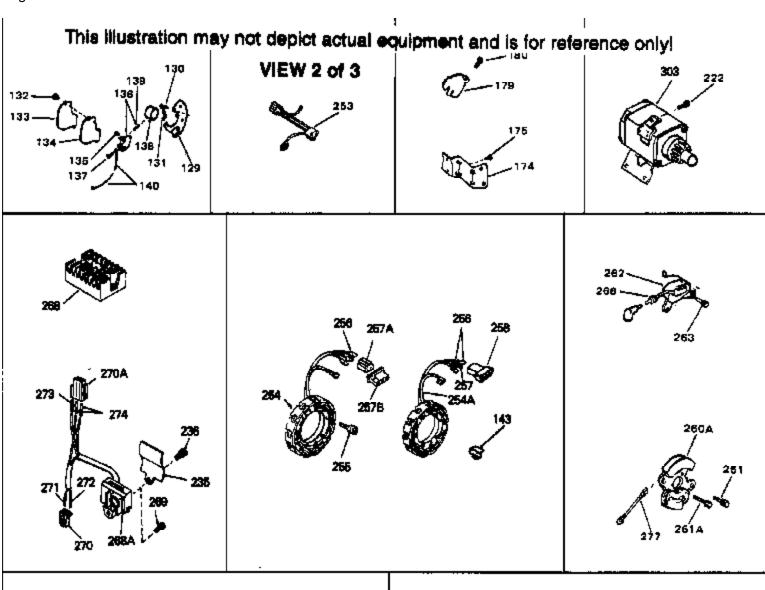

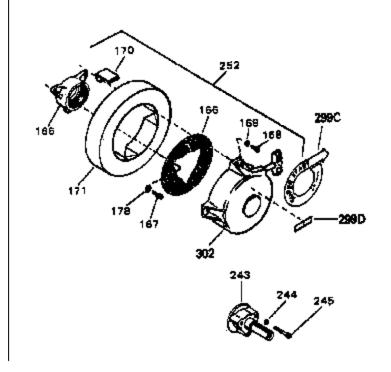

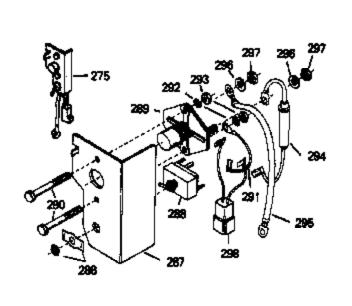

Ref #	Part Number	Qty	Description
178 180 222 222	27070 650675 650701 792028 650781 34276		Washer, Lock 1/4 E.T. (Use as require d) Washer, Flat 1/4 (Use as required) Screw, 8-18 x 7/16" (Use as required) Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
	650736 730134		Screw, 10-16 x 3/8" (Use as required) Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
254A 255 256 257 257B 258 266 268A 269 270 270A 271 272 273 274	33018 610902 650521 610905 610904 610824 610903 610750 610996 30063 610921 610990 610992 610989 610992 610991 730198 33835		Harness Assy., Adapter (Use as requir ed) Alternator Coil (20 Amp)(Incl.256,257,258) Screw, 10-32 x 1-1/8" Terminal Terminal Flat Connector (Female terminals) (As req.) Connector, Flat Grommet, Lead wire Regulator (20 Amp) (Incl. 270 thru 27 4) Screw, 1/4-20 x 1/2" Connector Connector, Male Terminal, Female Terminal, Female Terminal, Female Terminal, Female Starter Switch Kit(Incl. 287-298) (As req.) Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

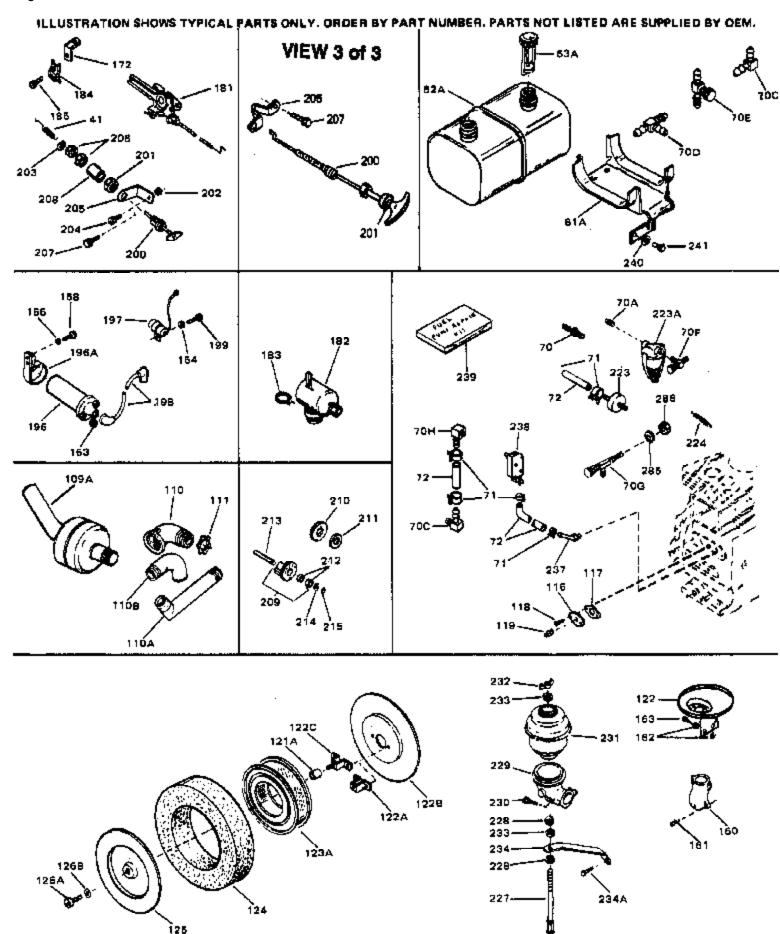

Ref #	Part Number (	Description	
41	31967	Spring, Governor	
62A	31977	Fuel Tank (Incl. 63)	
71	26460	Clamp, Fuel line (Use	as required)
72	30705	Fuel Line (Braided) (10	6") (Use as req uired)
72	30962	Fuel Line (Braided) (3:	2") (Use as req uired)
72	30965	Fuel Line (Braided) (48	8") (Use as req uired)
72	29774	Fuel Line (Braided) (8	.25") (Use as r equired)
111	650590	Nut, Conduit	
119	28534	Pipe Plug, 1/8-27 (Use	e as required)
119	9556	Plug, Pipe, 1/8-27 (Us	e as required)
122B	34065	Bracket, Air cleaner	
122C	32907B	Bracket, Air cleaner	
123A	32008	Element, Air cleaner	
184	27793	Clip, Conduit	
185	28942	Screw, 10-32 x 3/8"	