
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

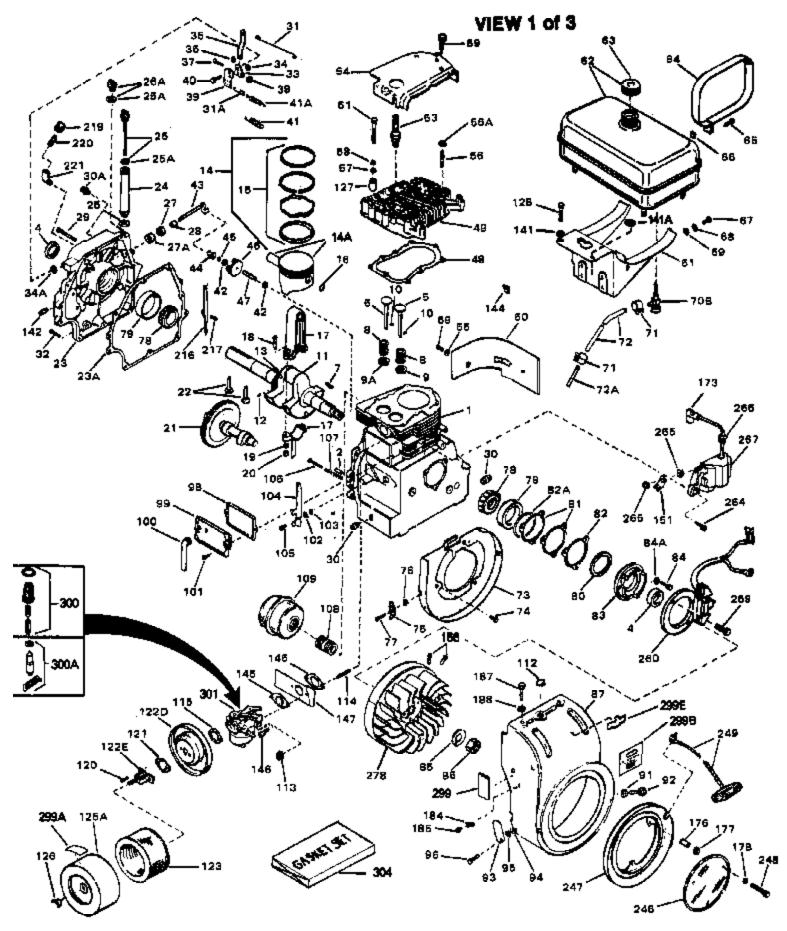


Ref #	Part Number	Qty	Description
	33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
2	27652		Pin, Dowel
4	31950		Seal, Oil
	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	31946		Cap, Lower valve spring (1/32" OS)
	31945		Cap, Lower valve spring (Std.)
	31945		Cap, Lower valve spring (Std.)
	31946		Cap, Lower valve spring (1/32" OS)
	20810		Pin, Valve spring retainer
	33411B		Crankshaft (Incl. 12, 13, 78 & 79)
	29783		Pin, Crankshaft gear
	31931		•
	32001C		Gear, Crankshaft Diston & Dia Asaby (Std.) (Incl. 16) (2, 5/16")
			Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
	34509		Piston, Pin & Ring Set (.010" OS)
	34510		Piston, Pin & Ring Set (.020" OS)
	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32004		Ring Set (Std.) (3-5/16" Bore)
	32005		Ring Set (.010" OS)
	32006		Ring Set (.020" OS)
	32623		Ring Set (.030" OS)
	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
17	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18	32077		Bolt, Connecting rod
19	26073		Washer, Connecting rod
20	28264		Nut Assy., Lock
21	32150		Camshaft (MCR)
22	31939		Lifter, Valve
23	32580A		Cover, Cylinder (Incl. 4, 28, 30, 34, & 43)
23A	31956A		* Gasket, Cylinder cover
24	33992A		Oil Fill Tube
25A	33590		"O" Ring
26	33993A		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650588		Screw, 1/4-20 x 2"
	31927		Oil Drain Plug
	31968		Link, Governor
	650451		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
	650518		Lockwasher
	650544		Screw, 10-24 x 7/8"
	7975		Nut, 10-24
50			

	Part Number Qty	
	31965	Plate, Governor spring
40	30312	Screw, 10-32 x 1/2"
41	31967	Spring, Governor
42	30590A	Washer, Flat
43	32425	Rod Assy., Governor
44	31948	Spool, Governor
45	29193	Ring, Retaining
46	31947	Gear Assy., Governor
	31930	Shaft, Mechanical Governor
	32000A	* Gasket, Cylinder head
	33034	Head, Cylinder
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650711	Screw, 5/16-18 x 1-5/8" (Use as required)
	650628A	Screw, 5/16-18 x 2-3/8" (Use as required)
	650695A	Screw, 5/16-18 x 2-1/4" (Use as required)
	650714	Screw, 5/16-18 x 1-5/8" (Use as required)
	650697A	Screw, $5/16-18 \times 2-1/2$ " (Use as required)
	650692	Screw, $5/16-18 \times 1-3/4$ " (Use as required)
	650603	Screw, $5/16-18 \times 5/8$ " (Use as required)
	33636	Resistor Spark Plug (RJ-8C)
	34251	Resistor Spark Plug (RJ-17LM)
	33035	Cover, Cylinder head
	28537	Washer, Plain
	650691 650690	Washer, Flat (Use as required)
		Washer, Belleville (Use as required)
	8274	Washer, Lock (Use as required)
	650128	Screw, 10-24 x 1/2"
	31976	Extension, Blower housing
	31978	Bracket, Fuel tank
	410144B	Fuel Cap (White Plastic)(Std.)(As req uired)
63	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
64	31979	Strap, Fuel tank
	650451	Screw, 1/4-20 x 1"
	650456	Nut, Flange whiz-lock, 1/4-20
67	650517	Screw, 1/4-20 x 27/32" (Use as requir ed)
	650561	Screw, 1/4-20 x 5/8" (Use as required)
	30063	Screw, 1/4-20 x 1/2" (Use as required)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
	29683	Strainer & Shut-off, Fuel
	26460	Clamp, Fuel line (Use as required)
	30705	Fuel Line (Braided) (16") (Use as req uired)
	30962	Fuel Line (Braided) (32") (Use as req uired)
	30965	Fuel Line (Braided) (48") (Use as req uired)
	29774	Fuel Line (Braided) (8.25") (Use as required)
	32579	Baffle, Blower housing
	650561	Screw, 1/4-20 x 5/8"
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
	32031	Spacer, Steel (.010" thick) NOTE: Determine the gap
80	02001	
		between the cover and the machined surface on the cylinder
		which can be from .001"up to .007" in which case no shim
		gaskets will be required. Use of gasket must be limited to a
		combined total of .010" thick. Steel spacersmust be used
		as required


	Part Number 31971	Qty	Description * Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder
			which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
	32599 31972		"O" Ring * Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
83	32577		Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
	650679		Lockwasher, 5/16" (Use as required)
	792028		Screw, 5/16-18 x 7/8"
	650666 650594		Washer, Lock Nut, Flywheel, 3/4-16
	33044A		Blower Hsg. (Incl.73) (For electric s tarter)
91	8274		Washer, Lock
	650595		Screw, 5/16-24 x 3/8"
	650595		Screw, 5/16-24 x 3/8"
	31958 31957		* Gasket, Breather Breather Assy.
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	28558		Washer, Wave
	31966		Bushing, Control lever
	31984A		Lever, Control
	650597 650591		Screw, 10-24 x 5/8" Screw, 10-24 x 2"
	33099		Spring
	32043B		Muffler
	33038		Plug, Button (Use as required)
	27272		* Gasket, Air cleaner
	650399 30767		Screw, 10-32 x 5/8" Spacer, Air cleaner
	32810		Cover, Air cleaner
	650513		Nut, Wing
	650713		Screw, 5/16-18 x 5/8" (Use as require d)
	650429		Screw, $5/16-18 \times 3/4$ " (Use as require d)
128 141A	792028 8274		Screw, 5/16-18 x 7/8" (Use as require d) Lockwasher, Split (Use as required)
	26073		Washer, Flat (Use as required)
	33263		* Gasket, Carburetor
146	650451		Screw, 1/4-20 x 1"
	34061		Baffle, Air
	610908		Terminal, Female
	730201 610118		Trigger Pin Kit (Use as required) Cover, Spark plug (Use as required)
	31992		Spacer, Screen
			-1 ; -


Ref #	Part Number Qty	Description
177	8345	Washer, 1/4 plain (Use as required)
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
178	650675	Washer, Flat 1/4 (Use as required)
184	27793	Clip, Conduit
185	28942	Screw, 10-32 x 3/8"
187	650713	Screw, 5/16-18 x 5/8"
188	26073	Washer, Flat
246	33776	Screen, Starter pulley
247	31980	Pulley, Starter
248	650680	Screw, 1/4-20 x 1-1/2"
249	32046	Rope Assy., Starter (Use as required)
264	650661	Screw, 1/4-20 x 3/4"
265	610408	Nut, Hex
266	610750	Grommet, Lead wire
267	610906	Solid State Magneto (Incl.151,173,265,266)(20 Amp)
278	610901	Solid State Flywheel
299B	550223	Decal, Name
299	34346	Decal, Instruction
300A	631021	Inlet Needle, Seat & Clip Assy.
301	631975	Carburetor (Incl. 145) (Refer to Division 5, Section A, page
		150 for breakdown)
304	33237A	* Gasket Set (Incl. items marked *)

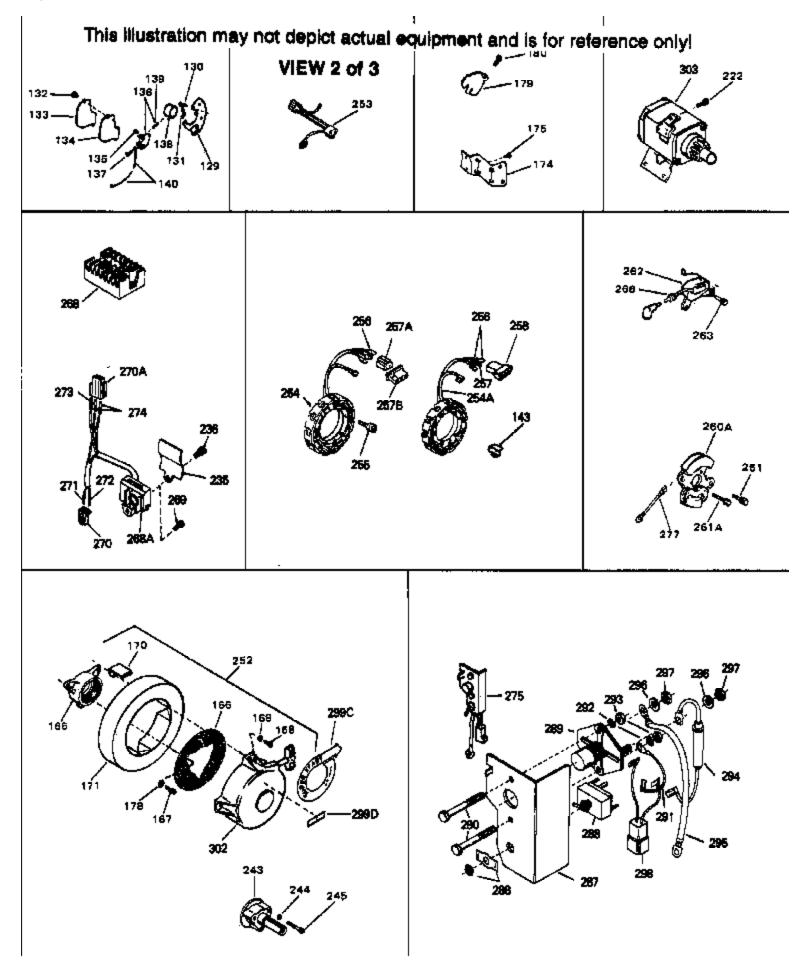


		Description
178	27070	Washer, Lock 1/4 E.T. (Use as require d)
	650675	Washer, Flat 1/4 (Use as required)
	650701	Screw, 8-18 x 7/16" (Use as required)
222	792028	Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor)
	650781	Screw,5/16-18 x 11/16"(Use w/33835 st r.motor)
235	34276	Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
236	650736	Screw, 10-16 x 3/8" (Use as required)
	730134	Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
	33018	Harness Assy., Adapter (Use as requir ed)
	610902	Alternator Coil (20 Amp)(Incl.256,257 ,258)
	650521	Screw, 10-32 x 1-1/8"
	610905	Terminal
	610904	Terminal
	610824	Flat Connector (Female terminals) (As req.)
	610903	Connector, Flat
	610750	Grommet, Lead wire
	610996	Regulator (20 Amp) (Incl. 270 thru 27 4)
	30063	Screw, 1/4-20 x 1/2"
	610921	Connector
	610990	Connector, Male
	610992	Terminal, Female
	610989	Terminal, Female
	610992	Terminal, Female
	610991	Terminal, Female
	730198	Starter Switch Kit(Incl. 287-298) (As req.)
303	33835	Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835
		starter motors are used interchangeably on the se models.
		Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY DEM.

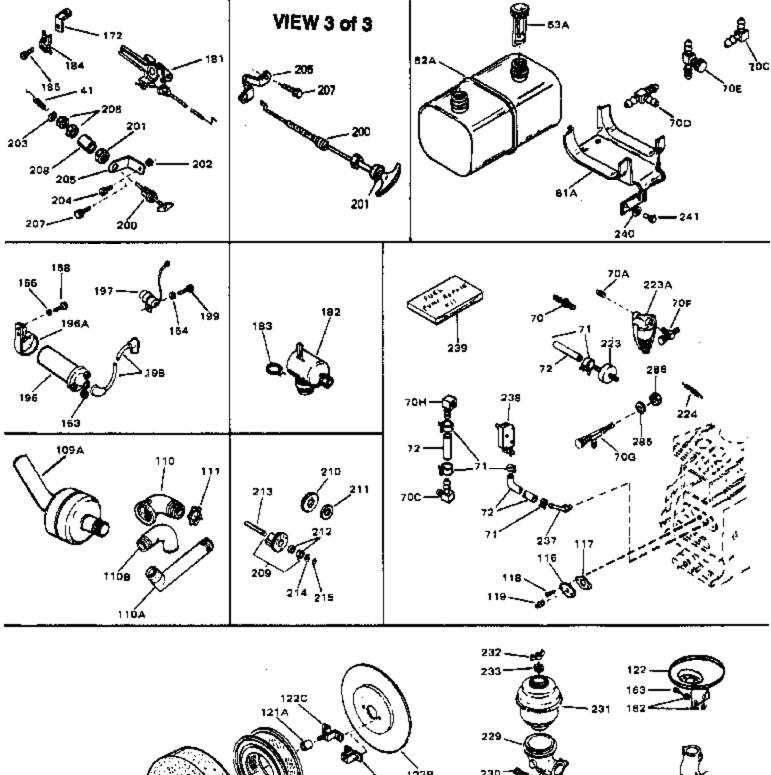

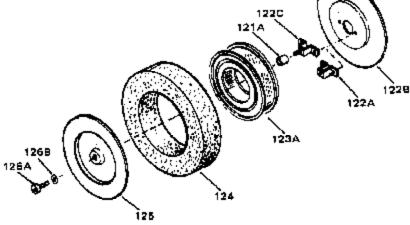

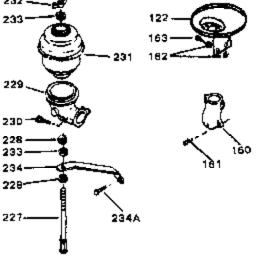

Ref #	Part Number 0	Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
71	26460		Clamp, Fuel line (Use as required)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
110A	32585		55 Degree Exhaust Elbow
111	650590		Nut, Conduit
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122B	34065		Bracket, Air cleaner
122C	32907B		Bracket, Air cleaner
123A	32008		Element, Air cleaner
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"