
ILLUSTRATION SHOWS TYPICAL PARTS ONLY, ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

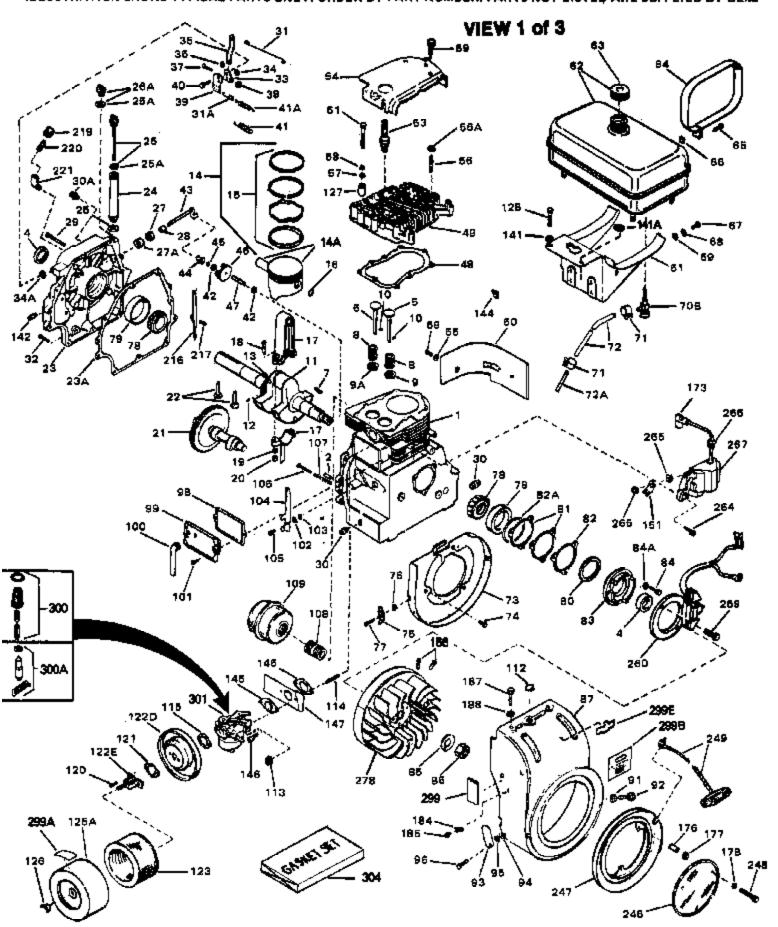



		Qty	Description
1 3	33039		Cylinder (Incl.2,4,30,47,119) (3-5/16 ")
2 2	27652		Pin, Dowel
4 3	31950		Seal, Oil
5 3	31940		Intake Valve (Std.)
	31941		Intake Valve (1/32" OS) (Incl. 9)
	31942		Exhaust Valve (Std.)
	31943		Exhaust Valve (1/32" OS) (Incl. 9)
	650592		Key, Flywheel
	31944		Spring, Valve
	31946		Cap, Lower valve spring (1/32" OS)
	31945 31045		Cap, Lower valve spring (Std.)
	31945		Cap, Lower valve spring (Std.)
	31946		Cap, Lower valve spring (1/32" OS)
	20810		Pin, Valve spring retainer
	33821B		Crankshaft (Incl. 12, 13, 78 & 79)
	29783		Pin, Crankshaft gear
13 3	31931		Gear, Crankshaft
14 3	34508		Piston, Pin & Ring Set (Std.) (3-5/16 " Bore)
14 3	34509		Piston, Pin & Ring Set (.010" OS)
14 3	34510		Piston, Pin & Ring Set (.020" OS)
14 3	34850		Piston, Pin & Ring Set (.030" OS)
	34523		Piston, Pin & Ring Set (.040" OS)
	32620B		Piston & Pin Ass'y. (.040" OS) (Incl. 16)
	32001C		Piston & Pin Ass'y. (Std.)(Incl.16)(3 -5/16")
	32002B		Piston & Pin Ass'y. (.010" OS) (Incl. 16)
	32003B		Piston & Pin Ass'y. (.020" OS) (Incl. 16)
	32619B		Piston & Pin Ass'y. (.030" OS) (Incl. 16)
	32004		• • • • • • • • • • • • • • • • • • • •
			Ring Set (Std.) (3-5/16" Bore)
	32005		Ring Set (.010" OS)
	32006		Ring Set (.020" OS)
	32623		Ring Set (.030" OS)
	32624		Ring Set (.040" OS)
	32321		Re-Ringing Set, Piston
	31919		Ring, Piston pin retaining
	33093A		Connecting Rod Ass'y.(Std.)(Incl.18, 19 & 20)
	34383		Connecting Rod Assy.(.010" US)(Incl.1 8,19,20)
	34384		Connecting Rod Assy.(.020" US)(Incl.1 8,19,20)
18 3	32077		Bolt, Connecting rod
19 2	26073		Washer, Connecting rod
20 2	28264		Nut Assy., Lock
21 3	33470		Camshaft (MCR)
22 3	31939		Lifter, Valve
23 3	33466		Cover, Cylinder (Incl. 4 & 213)
23A 3	31956A		* Gasket, Cylinder cover
25A 2			* Gasket, Oil fill
	33069		Dipstick (Incl. 25A)
	32426		Spacer, Governor rod
	650492		Screw, 1/4-20 x 2-1/4"
	31927		Oil Drain Plug
30A 2			Oil Drain Plug
	20403 31968		Link, Governor
			·
	650451 21064		Screw, 1/4-20 x 1"
	31964		Clamp, Governor lever
	29193		Ring, Retaining
	31963		Lever, Governor adjusting
	650518		Lockwasher
	650544		Screw, 10-24 x 7/8"
38 7	7975		Nut, 10-24


Ref #	Part Number	Qtv	Description
	31965	~	Plate, Governor spring
	30312		Screw, 10-32 x 1/2"
	31967		Spring, Governor
	30590A		Washer, Flat
	32425		Rod Assy., Governor
	31948		Spool, Governor
	29193		Ring, Retaining
	31947		Gear Assy., Governor
	31930		Shaft, Mechanical Governor
	32000A		* Gasket, Cylinder head
			·
	33034		Head, Cylinder
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650711		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650628A		Screw, 5/16-18 x 2-3/8" (Use as requi red)
	650695A		Screw, 5/16-18 x 2-1/4" (Use as requi red)
	650714		Screw, 5/16-18 x 1-5/8" (Use as requi red)
	650697A		Screw, 5/16-18 x 2-1/2" (Use as requi red)
	650692		Screw, 5/16-18 x 1-3/4" (Use as requi red)
	650603		Screw, 5/16-18 x 5/8" (Use as require d)
	33636		Resistor Spark Plug (RJ-8C)
53	34251		Resistor Spark Plug (RJ-17LM)
54	33035		Cover, Cylinder head
55	28537		Washer, Plain
57	650691		Washer, Flat (Use as required)
58	650690		Washer, Belleville (Use as required)
58	8274		Washer, Lock (Use as required)
	650128		Screw, 10-24 x 1/2"
60	31976		Extension, Blower housing
	31978		Bracket, Fuel tank
	410144B		Fuel Cap (White Plastic)(Std.)(As req uired)
	34210		Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
00	3.2.10		required)
	31979		Strap, Fuel tank
	650451		Screw, 1/4-20 x 1"
	650456		Nut, Flange whiz-lock, 1/4-20
67	650517		Screw, 1/4-20 x 27/32" (Use as requir ed)
67	650561		Screw, 1/4-20 x 5/8" (Use as required)
67	30063		Screw, 1/4-20 x 1/2" (Use as required)
67	792028		Screw, 5/16-18 x 7/8" (Use as require d)
70B	29683		Strainer & Shut-off, Fuel
71	26460		Clamp, Fuel line (Use as required)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
	29774		Fuel Line (Braided) (8.25") (Use as r equired)
	32579		Baffle, Blower housing
	650561		Screw, 1/4-20 x 5/8"
	31932		Bearing, Tapered roller
	31928		Cup, Bearing
	32031		Spacer, Steel (.010" thick) NOTE: Determine the gap
00	02001		between the cover and the machined surface on the cylinder
			which can be from .001"up to .007" in which case no shim
			gaskets will be required. Use of gasket must be limited to a
			combined total of .010" thick. Steel spacersmust be used
			as required

	Dort Number	Description
	Part Number Qty 31971	Description * Casket Shim (004/ 005 thick) NOTE: Determine the gap
81	319/1	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
82A	32599	"O" Ring
	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as req
83	32577	Cover, Cylinder NOTE: Determine the gap between the cover and the machined surface on the cylinder which can be from .001"up to .007" in which case no shim gaskets will be required. Use of gasket must be limited to a combined total of .010" thick. Steel spacersmust be used as required to eliminat
84A	650679	Lockwasher, 5/16" (Use as required)
	792028	Screw, 5/16-18 x 7/8"
85	650666	Washer, Lock
86	650594	Nut, Flywheel, 3/4-16
	33044A	Blower Hsg. (Incl.73) (For electric s tarter)
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	31958	* Gasket, Breather
	31957	Breather Assy.
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	28558	Washer, Wave
	31966 31984A	Bushing, Control lever Lever, Control
	650597	Screw, 10-24 x 5/8"
	650591	Screw, 10-24 x 2"
	33099	Spring
	33853	Nipple, Exhaust pipe
	33038	Plug, Button (Use as required)
	27272	* Gasket, Air cleaner
	650399	Screw, 10-32 x 5/8"
121	30767	Spacer, Air cleaner
125A	32810	Cover, Air cleaner
126	650513	Nut, Wing
	650713	Screw, 5/16-18 x 5/8" (Use as require d)
	650429	Screw, 5/16-18 x 3/4" (Use as require d)
	792028	Screw, 5/16-18 x 7/8" (Use as require d)
	26073	Washer, Flat (Use as required)
	8274	Lockwasher, Split (Use as required)
	33263	* Gasket, Carburetor
	650451	Screw, 1/4-20 x 1"
	34061	Baffle, Air
	610908	Terminal, Female
	730201	Trigger Pin Kit (Use as required)
1/3	610118	Cover, Spark plug (Use as required)


Ref #	Part Number	Qty	Description
176	32426		Spacer, Screen
177	650675		Washer, Flat 1/4"
177	8345		Washer, 1/4 plain (Use as required)
178	27070		Washer, Lock 1/4 E.T. (Use as require d)
178	650675		Washer, Flat 1/4 (Use as required)
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
187	650713		Screw, 5/16-18 x 5/8"
188	26073		Washer, Flat
216	33467		Tube, Extension, Oil fill
217	650744		Screw, 10-24 x 7/8"
247	31980		Pulley, Starter
248	650670		Screw, 1/4-20 x 3/4"
	32046		Rope Assy., Starter (Use as required)
	650661		Screw, 1/4-20 x 3/4"
	610408		Nut, Hex
266	610750		Grommet, Lead wire
267	610906		Solid State Magneto (Incl.151,173,265,266)(20 Amp)
278	610901		Solid State Flywheel
299	34346		Decal, Instruction
299B	550223		Decal, Name
300A	631021		Inlet Needle, Seat & Clip Assy.
301	631975		Carburetor (Incl. 145) (Refer to Division 5, Section A, page
			150 for breakdown)
304	33237A		* Gasket Set (Incl. items marked *)

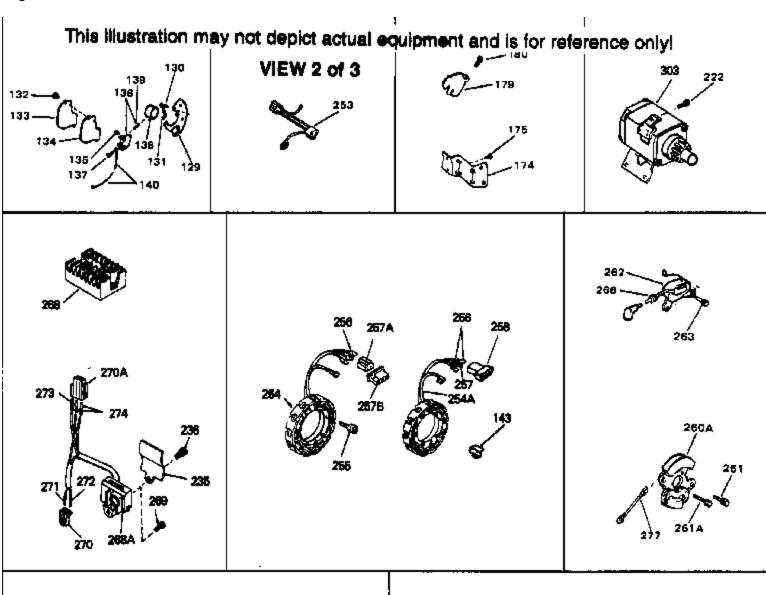

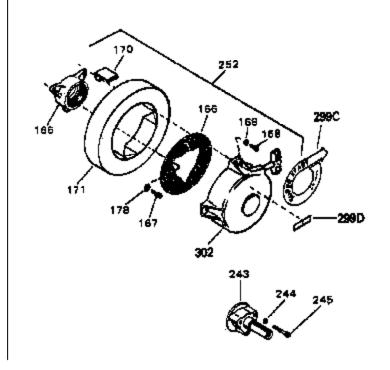

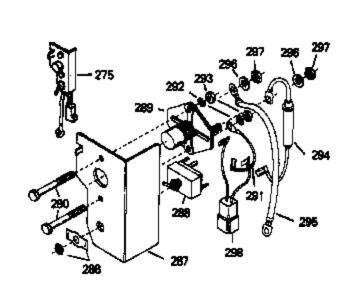

Ref #	Part Number	Qty	Description
178 180 222 222	27070 650675 650701 792028 650781 34276		Washer, Lock 1/4 E.T. (Use as require d) Washer, Flat 1/4 (Use as required) Screw, 8-18 x 7/16" (Use as required) Screw, 5/16-18 x 7/8" (Use w/32817 st r.motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Plate, Cover (Use as required to cover regulator mounting hole in blower housing)
	650736 730134		Screw, 10-16 x 3/8" (Use as required) Rewind Starter Kit (Incl. 165, 166, 167, 168, 169 & 291) (Use as required)
254A 255 256 257 257B 258 266 268A 269 270 270A 271 272 273 274	33018 610902 650521 610905 610904 610824 610903 610750 610996 30063 610921 610990 610992 610989 610992 610991 730198 33835		Harness Assy., Adapter (Use as requir ed) Alternator Coil (20 Amp)(Incl.256,257,258) Screw, 10-32 x 1-1/8" Terminal Terminal Flat Connector (Female terminals) (As req.) Connector, Flat Grommet, Lead wire Regulator (20 Amp) (Incl. 270 thru 27 4) Screw, 1/4-20 x 1/2" Connector Connector, Male Terminal, Female Terminal, Female Terminal, Female Terminal, Female Starter Switch Kit(Incl. 287-298) (As req.) Electric Starter Motor (12 Volt) NOTE: The 32817 and 33835 starter motors are used interchangeably on the se models. Refer to service numberstamped on end cap of motor, or on decal for identification. Refer to Division 5, Section D for breakdown.

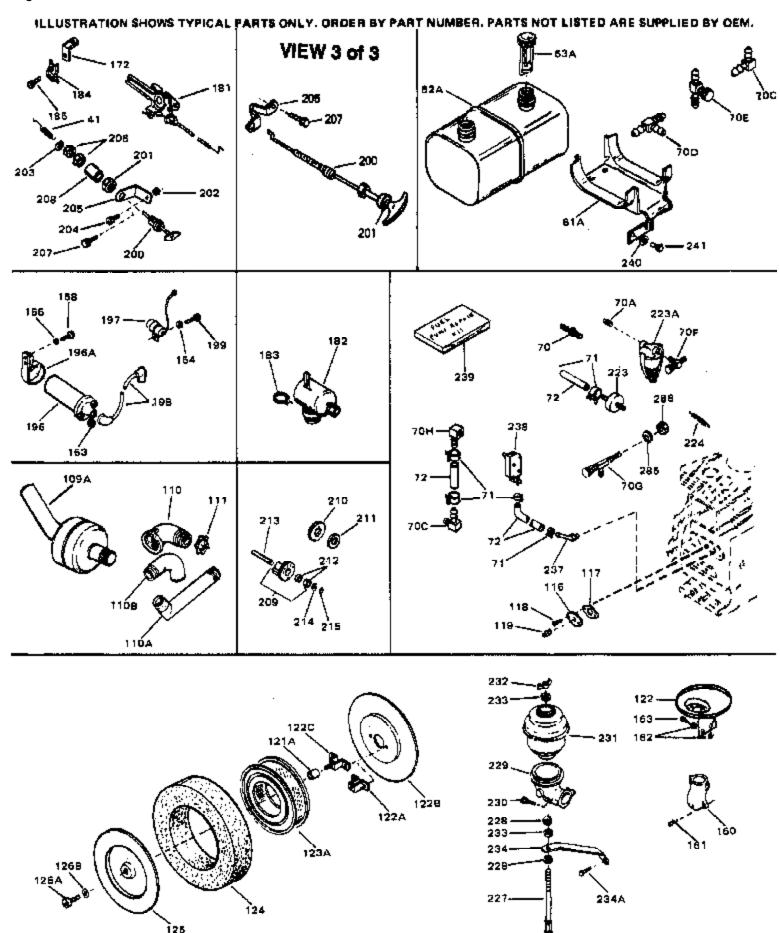

Ref #	Part Number	Qty	Description
41	31967		Spring, Governor
62A	31977		Fuel Tank (Incl. 63)
71	26460		Clamp, Fuel line (Use as required)
72	30705		Fuel Line (Braided) (16") (Use as req uired)
72	30962		Fuel Line (Braided) (32") (Use as req uired)
72	30965		Fuel Line (Braided) (48") (Use as req uired)
72	29774		Fuel Line (Braided) (8.25") (Use as r equired)
119	28534		Pipe Plug, 1/8-27 (Use as required)
119	9556		Plug, Pipe, 1/8-27 (Use as required)
122B	34065		Bracket, Air cleaner
122C	32907B		Bracket, Air cleaner
123A	32008		Element, Air cleaner
184	27793		Clip, Conduit
185	28942		Screw, 10-32 x 3/8"
209	33964		Weight Assy., Counterbalance (Helical teeth) (Incl. 2 of 212)
210	33963		Gear, Counterbalance Weight
211	33499		Spacer
212	33501		Bearing, Needle
213	33502		Shaft, Counterbalance
214	33503		Washer, Thrust
215	792017		Ring, Retaining